

Digital Pianos

Ensemble Grand Mark III, Mark IV, EGP, and EX

Hold down the Chorus & Tremolo buttons while powering up the unit.

Mark 3 & RG200

Press the Function button, then strike the top note on the keyboard (C8).

Mark 5, 8, 10, 110, & 150

Hold the MIDI button and strike the top note on the keyboard (C8).

Mark 12 & 152

Press the MIDI/Prefs Button, then press the button under Reset in the display, then press the button under "Do it".

V110 & V150

Turn the unit on, and while the display says "Please Wait", press and release the Demo button. Press the right arrow button till the display says "Hard RESET". Press Enter, then the button under "Yes" in the display.

Pro Products

K1000, K1200, Pro I, Pro II, Pro III, PX Plus & AX Plus

Hold down the A & B buttons while powering up the unit.

1000PX, 1000SX, 1000HX, & 1000GX

Hold down the Yes & No buttons while powering up the unit.

K2000 Series

Hold down 1, 2, & 3 on power up. The display will show Hard Reset and Diagnostics, with Hard Reset already selected. Press Enter. Then turn the unit off and back on.

K2500/K2600 Series

Turn it on, and when it says "Please Wait" in the display, press and release the Exit button. This takes you to the boot loader. Select Hard Reset and then follow the on screen instructions.

PC88 & PC88MX

Hold down the 1, 2, & 3 buttons while powering up the unit. Release the buttons

within two seconds of turning on the unit. Press the << button under the display. Then turn the unit off and back on.

PC2 Keyboards

Turn the unit on, and while the display says "Please Wait", press and release the Panic button. Press the right arrow button till the display says "Hard RESET". Press Enter, then the button under "Yes" in the display.

PC2R

Turn the unit on, and while the display says "Please Wait", press and release the Edit button. Press the right arrow button till the display says "Hard RESET". Press Enter, then the button under "Yes" in the display.

SP Series

Hold down the two buttons labeled Panic while turning the power on. Continue holding until the LEDs have flashed the second time. Wait for the display to show "P.L.C.", then press the Row Select button once. The display should show "CPU". Press Column Select once. The display will flicker then show "rOM". Press Row Select 5 times until the display shows "ini"; then press Column Select once. The display will then show "ok?". Press the Up arrow button. The display will flicker again briefly, dim, then show "PAS". Turn the power off and then back on.

All other models contain no battery backed RAM, and are therefore reinitialized each time you turn on the unit.