

LESLIE 7075
CONSOLE CONNECTOR KIT FOR BALDWIN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7075 Console Connector Kit connects Baldwin consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	012617	1 Tremolo Control
1 Console Adapter	062026	012625 brown
1 6 Conductor Cable	017277	012633 ebony
1 Instructions	036459	012641 ivory
5 Insulated Staples	028464	
1 Oiler	053025	1 Echo Control
2 Screw, 8 X 1/2	029132	029397 brown
4 Screw, 6 X 1/2	029124	029405 ebony
		029413 ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Connect the BLACK adapter lead to the terminal containing the black wire on the 12" Main speaker (See "A" on Fig. 1).
6. Remove the COLORED wire from the Tibia speaker and connect it to the RED adapter lead. Insulate with plastic sleeve. (See "B" on Fig. 1).
7. Connect the GREEN adapter lead to the vacant terminal on the Tibia speaker. (See "B" on Fig. 1).

8. Insert the 6-pin adapter plug into the "REMOTE CABINET" socket on the console amplifier. (See "C" on Fig. 1).
9. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.
10. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
11. Follow the load resistor setting instructions for the "8 OHM" position, as outlined in the Leslie service manual.
12. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

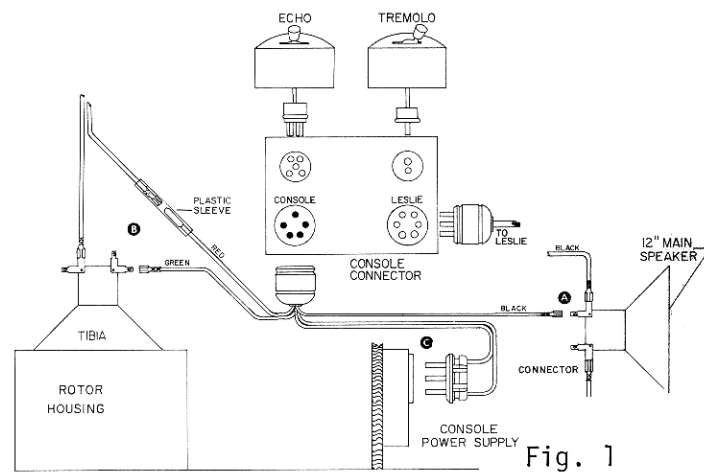


Fig. 1




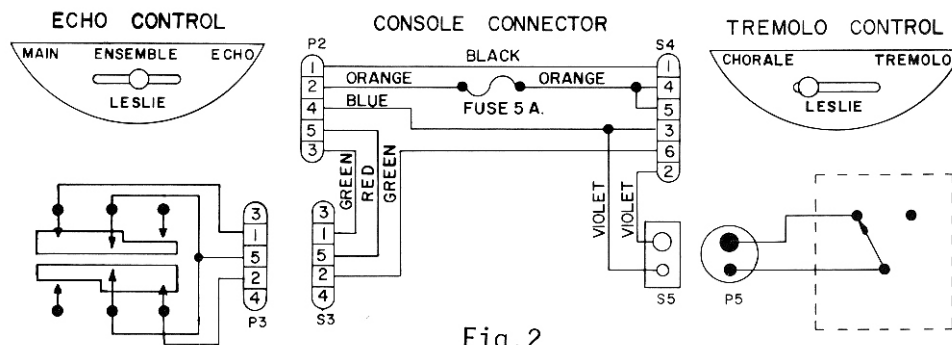



Fig. 2

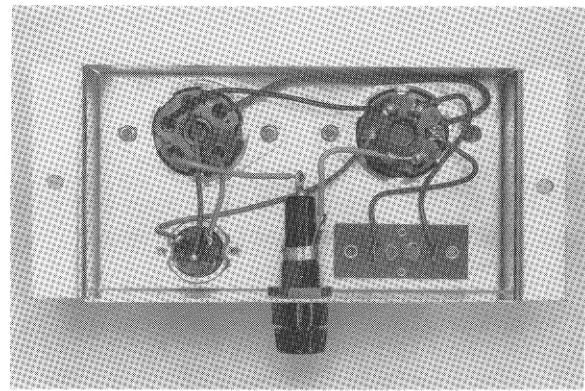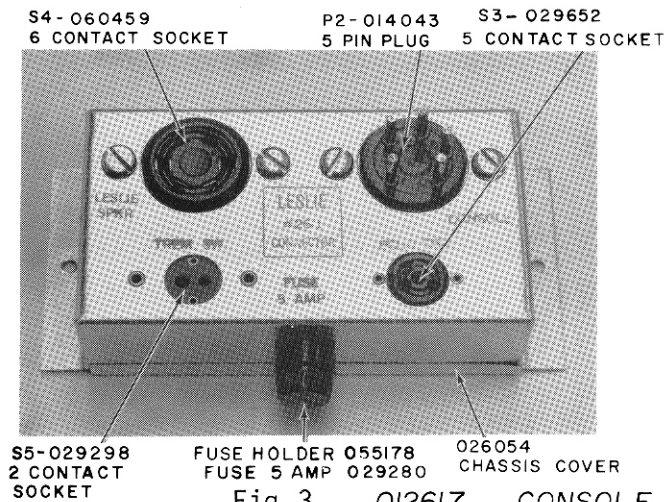

062026 Console Adapter

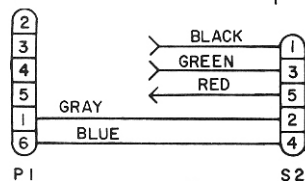

PLUG & SOCKET PIN LAYOUT

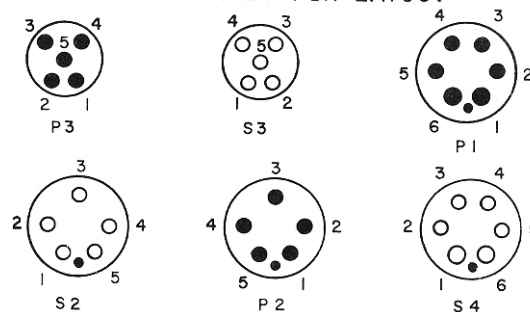

Control Switch Parts List:

Echo Control

Echo Switch Case

029199 brown
029207 ebony
029215 ivory

Switch Case Cover

048702 brown
048710 ebony
048728 ivory

Switch Knob

048066 brown
048074 ebony

Switch Retainer (2 req'd) 048116

Switch Only 029629

5-Pin Plug 021238

Tremolo Control

Tremolo Switch Case

012260 brown
012278 ebony
012286 ivory

Switch Case Cover

048702 brown
048710 ebony
048728 ivory

Switch Knob

048066 brown
048074 ebony

Switch Retainer (2 req'd) 048108

Switch Only 042911

2-Pin Plug 029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.