# LESLIE 7130 CONSOLE CONNECTOR KIT INSTALLATION INSTRUCTIONS

For use with: CONN Organ Models 300, 305 LESLIE Speaker Models 120, 125, 225, 145, 147, 147RV, 247, 247RV

MULTIPLE SPEAKER INSTALLATION: For complete information, see the service manual of the specific model LESLIE speaker to be added.

### **CONTENTS OF KIT:**

1	Console Connector	012617	1 Tremolo Control
1	Canso 1 e Adapter	044842	brown 012625
1	6 Conductor Cable	017277	ebony 012633
1	Instructions	044867	ivory 012641
5	Insulated Staples	028464	
1	Oiler	053025	1 Echo Control
2	Screw, 8 X 1/2	029132	brown 029397
4	Screw, 6 X 1/2	029124	ebony 029405
			ivory 029413

## TO INSTALL THE KIT:

- 1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
- 2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
- 3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
- 4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
- 5. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the adapter socket. (See "A" on Fig. 1).
- 6. Plug the adapter into the "SPEAKER" socket on the console amplifier. (See "A" on Fig. 1).
- 7. Plug the adapter power cord into a SWITCHED 117VAC socket on the console amplifier. (See "B" on Fig. 1).
- 8. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.

- 9. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
- 10. Follow the load resistor setting instructions for the "8 OHM" position, as outlined in the Leslie Service Manual.
- 11. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.




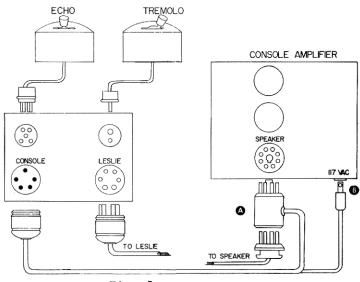


Fig. 1

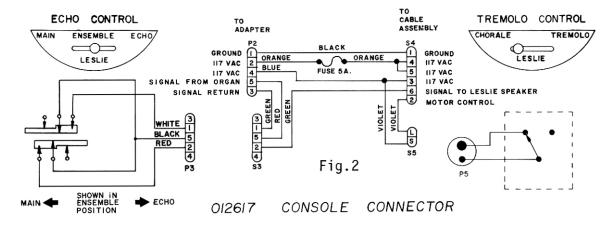

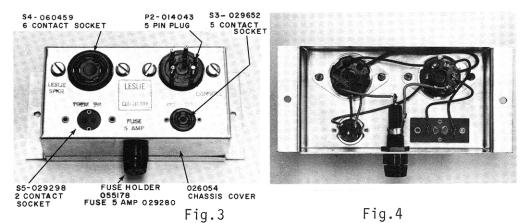

Page 2 of 3

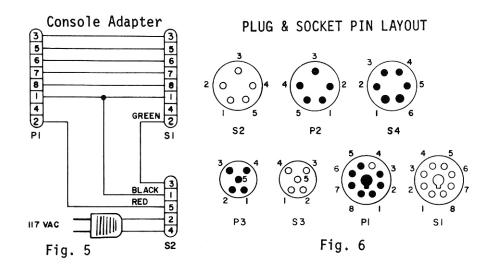

TREMOLO CONTROL

# CONTROL SWITCH PARTS LIST

ECHO CONTROL

Echo Switch Case		Tremolo Switch Case		
brown	029199	brown	012260	
ebony	029207	ebony	012278	
ivory	029215	ivory	012286	
Switch Case Cover		Switch Case Cover		
brown	048702	brown	048702	
ebony	048710	ebony	048710	
ivory	048728	ivory	048728	
Switch Knob		Switch Knob		
brown	048066	brown	048066	
ebony	048074 (2)	ebony	048074 (2)	
Switch Retainer (2)	048116	Switch Retainer (2)	048108	
Switch Only	010249	Switch Only	042911	
5-Pin Plug	021238	2-Pin Plug	029165	

# **ORDERING PARTS:**

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer. Orders should include part numbers shown above.