

LESLIE 7156

CONSOLE CONNECTOR KIT FOR CONN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7156 Console Connector Kit connects Conn consoles, with a built-in Leslie, to a single Leslie Speaker. Through the use of tab switches on the console, the organist will be able to play through the console speakers, through the Leslie or through both. The Kit includes a console connector, a Tremolo control and all necessary hardware for the installation.

CONTENTS OF KIT:

1	Console Connector	010850	1 Tremolo Control
1	9 Conductor Cable	021600	
1	Instructions	011486	brown 024976
6	Insulated Staples	028464	ebony 024984
1	Oiler	053025	ivory 024992
2	Screw, 8 x 1/2	029132	
2	Screw, 6 x 1/2	029124	
2	Wire Nut	028076	

TO INSTALL THE KIT:

1. Mount the Tremolo control switch to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cable under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Connect the pot cord wires from the Tremolo Control to the console connector using the wire nuts provided. (See "A" on Fig. 1.)
5. Plug the connector cable into the "external speaker" socket. (See "B" on Fig. 1.)
6. Plug the Leslie Speaker Cable into the socket marked "LESLIE" on the connector chassis.

--- continued next page ---

7. TO ADJUST THE VOLUME:

- a. Turn main and flute channels off.
- b. Set pedal level with all pedal voices on and play note "C" on pedal keyboard.
- c. Set flute level with all flute or tibia voices on at full volume with "C" on keyboard.
- d. Set main level with all main or string voices on at full volume with "C" cord on keyboard.
- e. All settings should be made by turning the volume up to distortion and then reducing the volume by approximately 1/8 turn. The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR TREMOLO CONTROL

P1	061721	Tremolo Switch Case	
S2	061713	brown	012260
Rly 1	027649	ebony	012278
Grommet	050211	ivory	012286
Chassis	027144		
Cover	061960	Switch Case Cover	
Circuit Ass'y.	061705	brown	048702
		ebony	048710
		ivory	048728
		Switch Knob	
		brown	048066
		ebony	048074
		Switch Retainer (2)	048108
		Switch only	042911



