

LESLIE 7157 CONSOLE CONNECTOR KIT

FOR CONN CONSOLES

The Leslie 7157 Console Connector Kit connects Conn consoles, with a built-in Leslie, to a single Leslie Speaker. Through the use of tab switches on the console, the organist will be able to play through the console speakers, through the Leslie or through both. The Kit includes a console connector, a Tremolo control and all necessary hardware for the installation.

CONTENTS OF KIT:

1	Console Connector	010850	1	Tremolo Control	
1	Adapter	062067			
1	9 Conductor Cable	021600	brown	024976	
1	Instructions	036426	ebony	024984	
6	Insulated Staples	028464	ivory	024992	
1	Oiler	053025			
2	Screw, 6 x 1/2	029124			
2	Screw, 8 x 1/2	029132			
2	Wire Nut	028076			

TO INSTALL THE KIT:

1. Mount the Tremolo control switch to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cable under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Connect the pot cord wires from the Tremolo Control to the console connector using the wire nuts provided. (See "A" on Fig. 1.)
5. Plug the connector cable into the 6-contact socket of the adapter cable. (See "B" on Fig. 1.)
6. Insert the 10-pin adapter plug into the TONE CABINET socket. (See "C" on Fig. 1.)
7. Plug the Leslie Speaker Cable into the socket marked "LESLIE" on the connector chassis.
8. TO ADJUST THE VOLUME:
 - a. Turn main and flute channels off.

- b. Set pedal level with all pedal voices on and play note "C" on pedal keyboard.
- c. Set flute level with all flute or tibia voices on at full volume with "C" on keyboard.
- d. Set main level with all main or string voices on at full volume with "C" cord on keyboard.
- e. All settings should be made by turning the volume up to distortion and then reducing the volume by approximately 1/8 turn. The installation is now complete.



PARTS LIST


CONSOLE CONNECTOR

P1	061721
S2	061713
Rly 1	027649
Grommet	050211
Chassis	027144
Cover	061960
Circuit Ass' y.	061705

TREMOLO CONTROL

Tremolo Switch Case	
brown	012260
ebony	012278
ivory	012286
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch only	042911

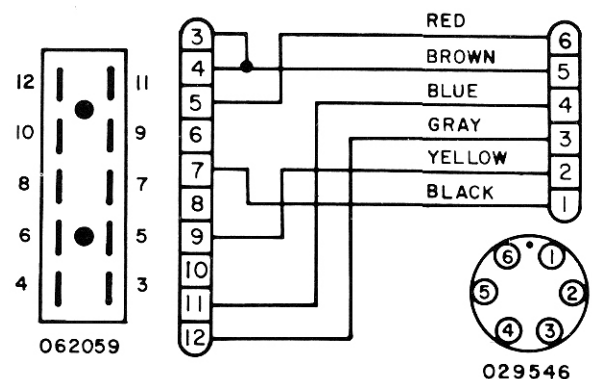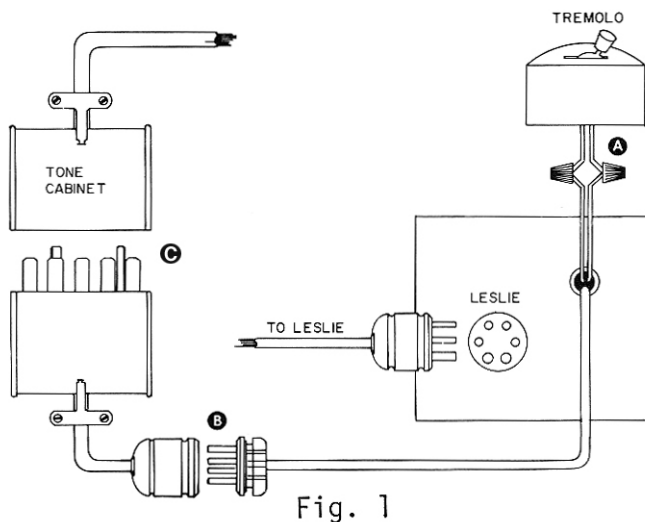

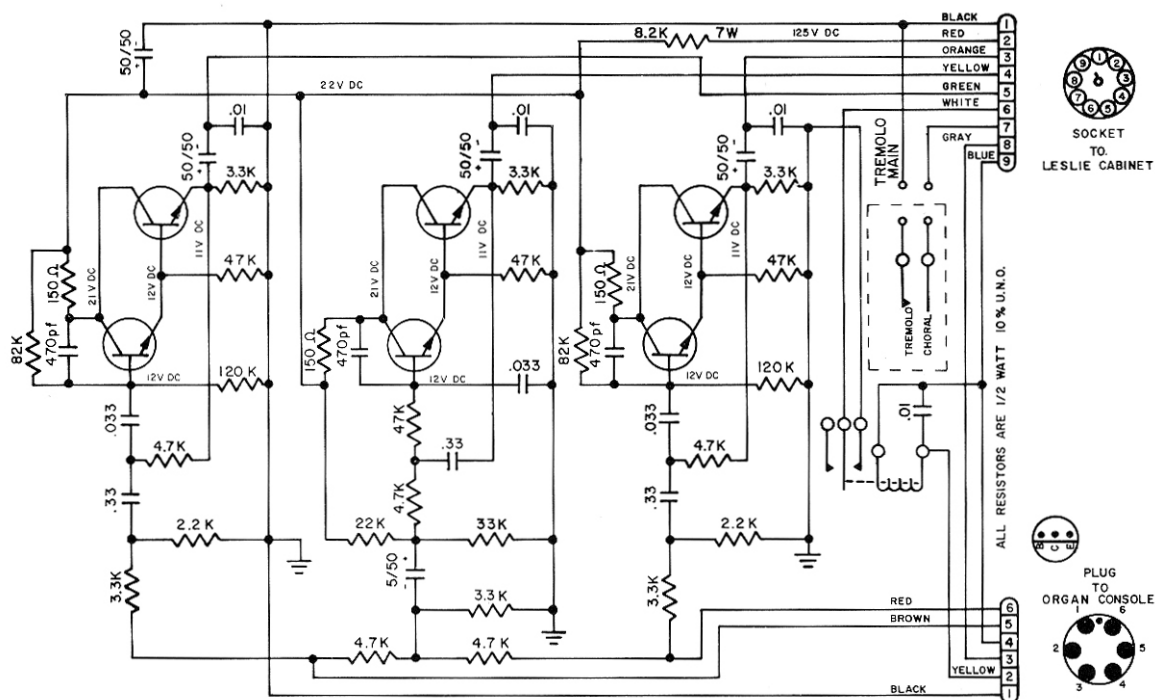

061705 CIRCUIT ASSEMBLY

