

LESLIE 7275 CONSOLE CONNECTOR KIT
FOR WURLITZER, GULBRANSEN CONSOLES

SEE LESLIE PRICE SHEET FOR SPEAKER-CONSOLE COMBINATIONS

The Leslie 7275 Console Connector Kit connects Wurlitzer and Gulbransen consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1-Console adapter	027052	1-Tremolo Control	
1-6 conductor cable	017277	012625	brown
1-console connector	012617	012633	ebony
1-instructions	034934	012641	ivory
1-insulated staple	028464		
1-oiler	053025	1-Echo Control	
2-screw, 8 x 1/2	029132	029397	brown
4-screw, 6 x 1/2	029124	029405	ebony
		029413	ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the echo and tremolo control cables into the proper sockets on the connector chassis.
5. **WURLITZER:**
Unplug the 6 pin jumper plug from the "Speaker" socket on the console amplifier and plug it into the adapter socket. (See "A" on Fig. 1).
- GULBRANSEN:**
Unplug the 6 pin "Speaker" plug from the console amplifier and plug it into the adapter socket (See "A" on Fig. 1).
6. Plug the adapter into the " Speaker" socket on the console amplifier.

7. Fit the 5 pin adapter socket onto the plug marked "console" on the connector chassis (See "B:" on Fig. 1).
8. Plug the Leslie speaker cable into the socket marked "Leslie" on the connector chassis (See "C" on Fig. 1).
9. Plug the adapter cable power cord into a switched 117 VAC socket on the console amplifier. NOTE: On some models this socket may be occupied. If this is the case, use the 3-way plug provided.
10. Follow the load resistor setting instructions for the "8 ohm" position, as outlined in the Leslie Service Manual.
11. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.

Control Switch Parts List

Echo Control

Echo Switch Case

029199 Brown

029207 Ebony

029215 Ivory

Switch Case Cover

048702 Brown

048710 Ebony

048728 Ivory

Switch Knob

048066 Brown

048074 Ebony

Switch Retainer (2 req'd) 048116

Switch Only 029629

5-Pin Plug 021238

Tremolo Control

Tremolo Switch Case

012260 Brown

012278 Ebony

012286 Ivory

Switch Case Cover

048702 Brown

048710 Ebony

048728 Ivory

Switch Knob

048066 Brown

048074 Ebony

Switch Retainer (2 req'd) 048108

Switch Only 042911

2-Pin Plug 029165

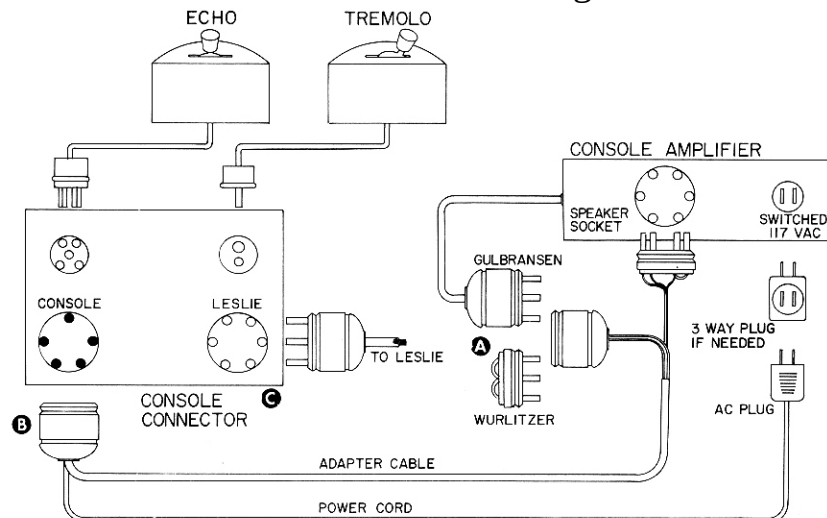


Fig.1

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

