

LESLIE 7286 CONSOLE CONNECTOR KIT
FOR GULBRANSEN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7286 Console Connector Kit connects Gulbransen consoles to dual Leslie speakers. The kit includes a console connector, Tremolo control switches, and Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	039164	2	Tremolo Control	
1	Console Adapter	042416		brown	012625
2	6 Conductor Cable	017277		ebony	012633
1	Instructions	042812		ivory	012641
12	Insulated Staples	028464			
1	Oiler	053025	1	Echo Control	
2	Screw, 8 x 1/2	029132		brown	052035
6	Screw, 6 x 1/2	029124		ebony	052043
				ivory	052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Connect the BLACK adapter wire onto the "GND" terminal on the "LESLIE" amplifier. (See "A" on Fig. 1).
6. Remove the RED wire from the "OUT" terminal on the "LESLIE" amplifier and connect it to the ORANGE adapter wire. Insulate with plastic sleeve. (See "B" on Fig. 1).
7. Connect the RED adapter wire onto the "OUT" terminal on the "LESLIE" amplifier. (See "B" on Fig. 1).

8. Remove the RED wire from the "OUT" terminal on the "MAIN" amplifier and connect it to the WHITE adapter wire. Insulate with plastic sleeve. (See "C" on Fig. 1).
 9. Connect the GREEN adapter wire onto the "OUT" terminal on the "MAIN" amplifier. (See "C" on Fig. 1).
 10. Plug the adapter power cord into a SWITCHED 117 VAC socket on the console power supply. (See "D" on Fig. 1).
- NOTE: On some models this socket may be occupied. If this is the case use the three-way plug provided.
11. Fit the Adapter socket onto the plug marked "CONSOLE" on the connector chassis.
 12. Plug the two Leslie Speaker cables into the sockets marked "MAIN" and "TIBIA" on the connector chassis. The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR

Chassis	039289
Cover	026054
Fuseholder	055178
Fuse	029280
C1, C2	060467
S4	029306
S6	060459
P3	021170
S5	029298

CONSOLE ADAPTER



S3	028837
S3, Cap	013136
Cord	019935

ECHO CONTROL


Echo Switch Case	
brown	029454
ebony	029462
ivory	029470
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	029173
7-Pin Plug	029223

TREMOLO CONTROL

Tremolo Switch Case	
brown	029512
ebony	029520
ivory	029538
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch Only	042911
2-Pin Plug	029165

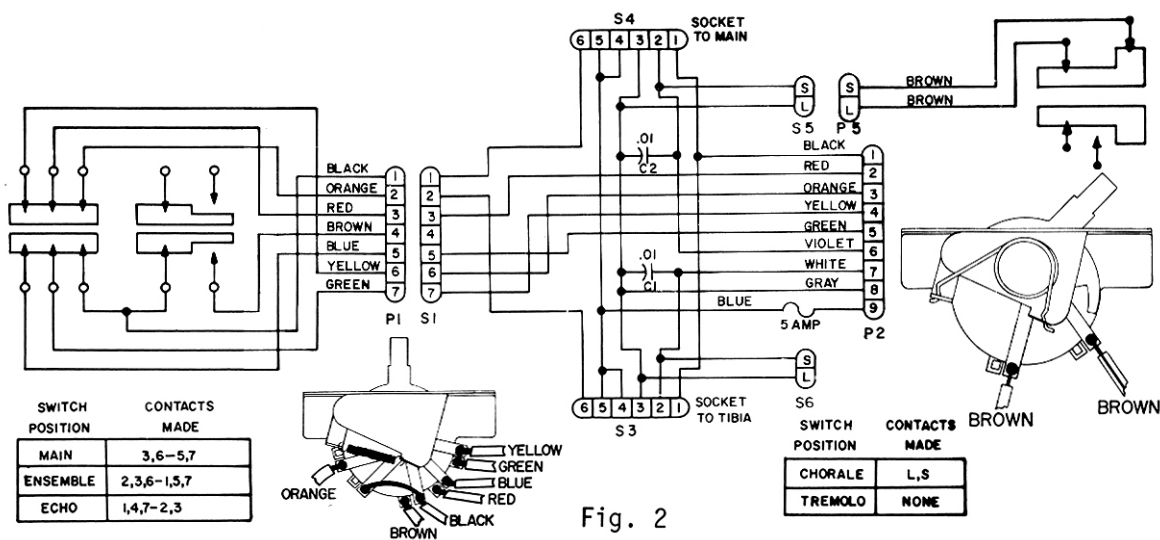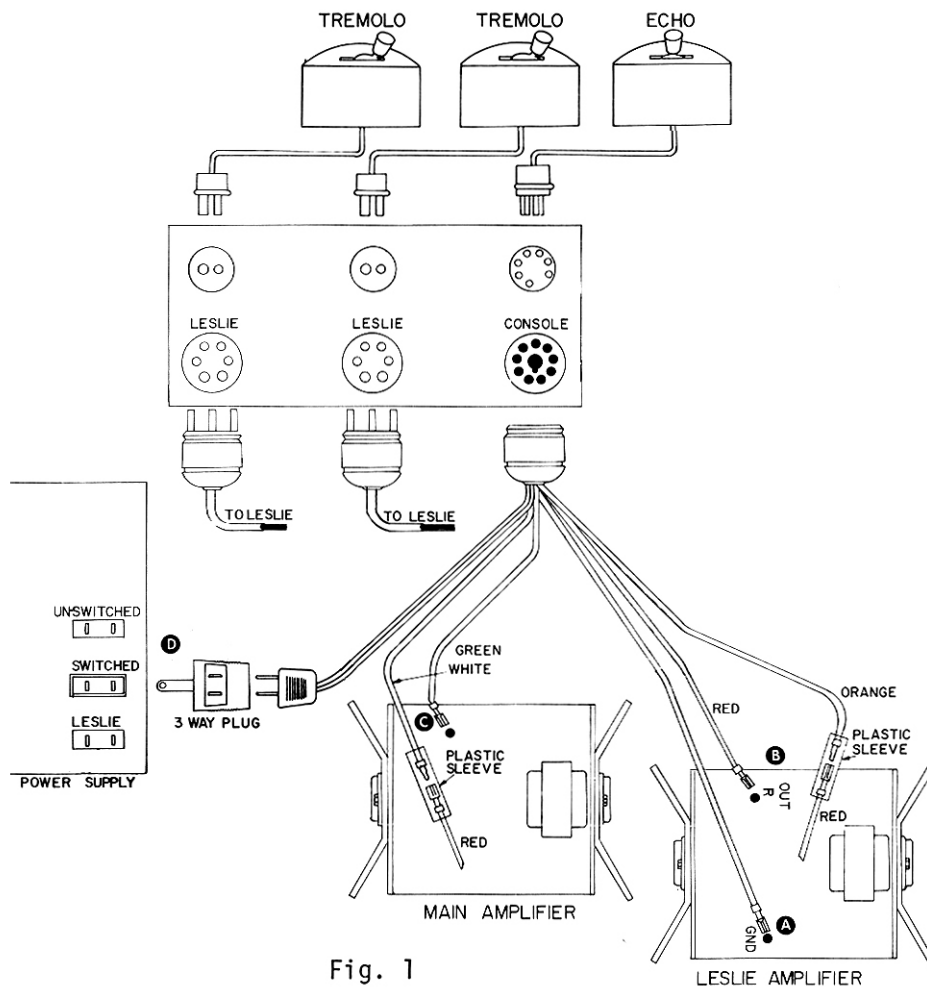

042416 Adapter

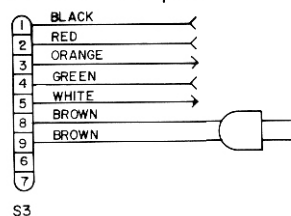

Plug & Socket Pin Layout

