

LESLIE 7410 CONSOLE CONNECTOR KIT
FOR LOWREY CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7410 Console Connector Kit connects Lowrey consoles to two Leslie speakers. The kit includes a console connector, a Tremolo control switch, a Multi-Rank control switch and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	060418	1	Multi-Rank Control	
1	9 Conductor Cable	021600		brown	010546
1	Instructions	037358		ebony	010553
10	Insulated Staples	028464		ivory	010561
1	Oiler	053025			
7	Screw, 6 x 3/4	032086	1	Tremolo Control	
2	Screw, 8 x 1/2	029132		brown	029553
				ebony	029561
				ivory	029579
			1	Echo Control	
				brown	010579
				ebony	010587
				ivory	010595

TO INSTALL THE KIT:

1. Mount the Echo, Tremolo and Multi-Rank control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo, Tremolo and Multi-Rank control cables into the proper sockets on the connector chassis.
5. Remove the cable from the YELLOW 9-contact socket on the console amplifier and plug it into the interceptor socket. (See "A" on Fig. 1).
6. Insert the interceptor plug into the YELLOW 9-contact socket on the console amplifier. (See "B" on Fig. 1).

7. Insert the 6-pin adapter plug into the "EXT. LESLIE" socket on the console amplifier. (See "C" on Fig. 1).

8. Insulate the GREEN adapter wire with plastic tape. It is not used in this application.

9. Plug the Leslie 103 Speaker cable into the socket marked "103" on the connector chassis.

10. Adjust the volume as outlined on the Speaker Back Card. The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR



Chassis	027136	S5	029298
Circuit Assy	037432	S6	021220
T1	022244	S7	029652
Rly 1	027649	D1, D2	029652
Grommet	013235	C1, C2	021154
Fuseholder	055178	R1	018051
Fuse	029280	R2	021253
P1	061721	R3	021261
P2	024653	R4	021592
S2	028837		
S2, Cap	013136		
S3, S4	061713		

ECHO CONTROL TREMOLO CONTROL MULTI-RANK CONTROL

Echo Switch Case		Tremolo Switch Case		Switch Case	
brown	024406	brown	017335	brown	024372
ebony	012294	ebony	017343	ebony	024398
ivory	024356	ivory	017350	ivory	024380
Switch Case Cover		Switch Case Cover		Switch Case Cover	
brown	048702	brown	048702	brown	048702
ebony	048710	ebony	048710	ebony	048710
ivory	048728	ivory	048728	ivory	048728
Switch Knob		Switch Knob		Switch Knob	
brown	048066	brown	048066	brown	048066
ebony	048074	ebony	048074	ebony	048074
Switch Retainer (2)	048116	Switch Retainer (2)	048108	Switch Retainer (2)	048108
Switch Only	029629	Switch Only	042911	Switch Only	042911
5-Pin Plug	021238	3-Pin Plug	021584	2-Pin Plug	029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

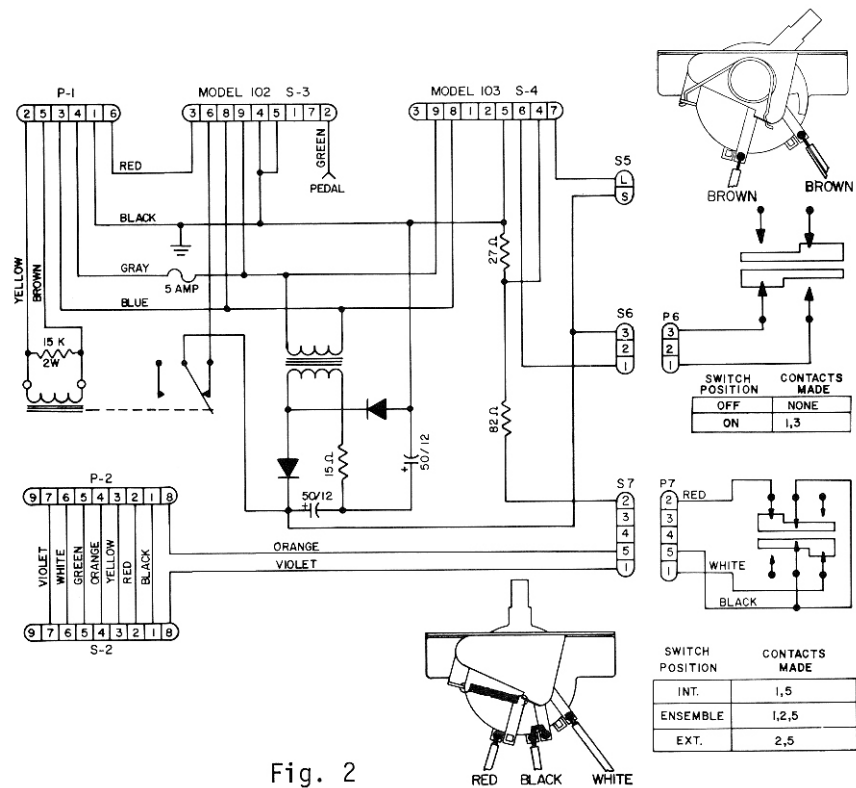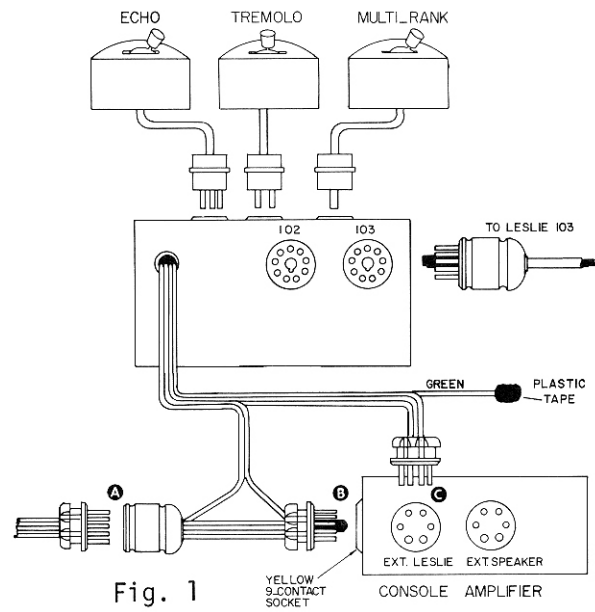

Plug & Socket Pin Layout

