

LESLIE 7433 CONSOLE CONNECTOR KIT

FOR KIMBALL CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7433 Console Connector Kit connects Kimball consoles to dual Leslie speakers.

The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	062042	2	Tremolo Control	
1	Console Adapter	027425		brown	012625
2	6 Conductor Cable	017277		ebony	012633
1	Instructions	027409		ivory	012641
10	Insulated Staples	028464			
1	Oiler	053025	1	Echo Control	
7	Screw, 6 X 1/2	029124		brown	052035
2	Screw, 8 X 1/2	029132		ebony	052043
				ivory	052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the two Tremolo control cables into the sockets marked "MAIN TREMOLO" and "TIBIA TREMOLO" on the connector chassis.
5. Plug the Echo control cable into the socket marked "ECHO" on the connector chassis.
6. Solder the BLACK adapter wire onto the "GROUND" terminal on the "MAIN" amplifier. (See "A" on Fig. 1.)
7. Remove the "JUMPER" plug from the socket marked "MAIN" on the console power supply and plug it into the interceptor marked "MAIN". (See "B" on Fig. 1.)

8. Plug the "MAIN" interceptor into the socket marked "MAIN" on the console power supply. (See "B" on Fig. 1).
9. Remove the plug from the socket marked "LESLIE" on the console power supply and plug it into the interceptor marked "LESLIE" (See "C" on Fig. 1.)
10. Plug the "LESLIE" interceptor into the socket marked "LESLIE" on the console power supply. (See "C" on Fig. 1.)
11. Fit the adapter socket onto the plug marked "CONSOLE" on the connector chassis.
12. Plug the two Leslie Speaker cables into the sockets marked "TIBIA" and "MAIN" on the connector chassis. The installation is now complete.

PARTS LIST

Console Connector

Chassis	061838
S3, S4	060459
S1	029306
S5, S6	029298
Fuseholder	055178
P2	021170
C1, C2	060467
Fuse	029280

Console Adapter

S2	028837
S2 Cap	013136
P7, P8	061721
S7, S8	029546
Sleeve	029595

Echo Control




Echo Switch Case	
brown	029199
ebony	029207
ivory	029215
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	029173
7-Pin Plug	029223

Tremolo Control

Tremolo Switch Case	
brown	012260
ebony	012278
ivory	012286
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch Only	042911
2-Pin Plug	029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Nonstandard items may be obtained through a Leslie speaker dealer.

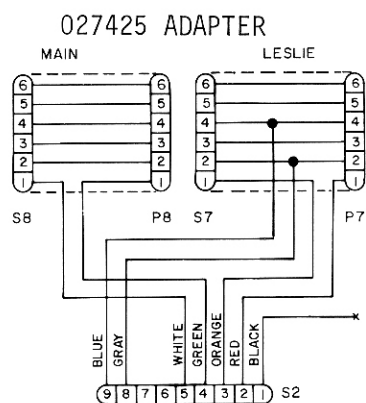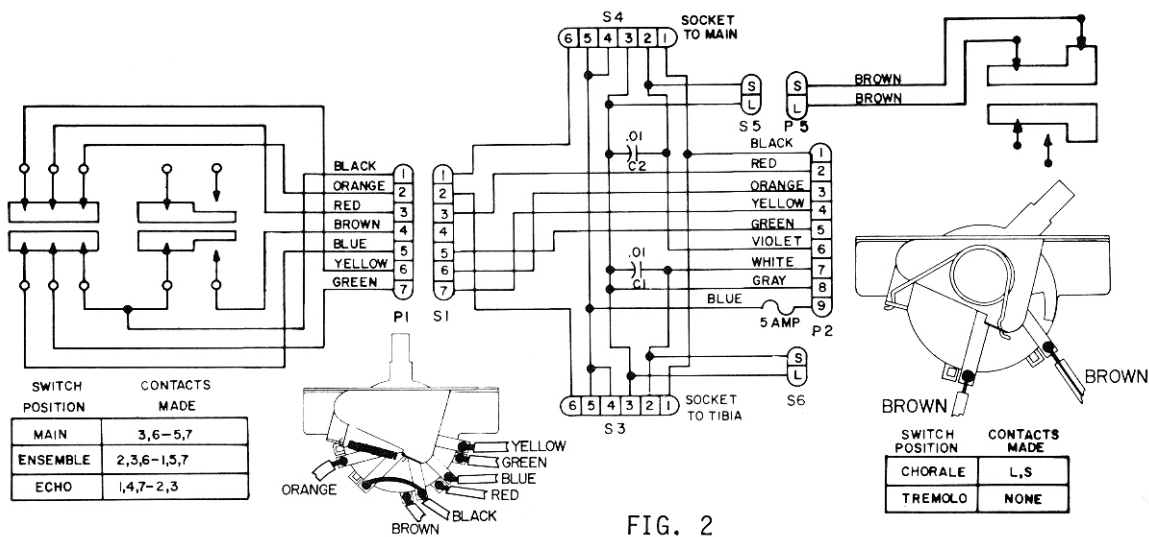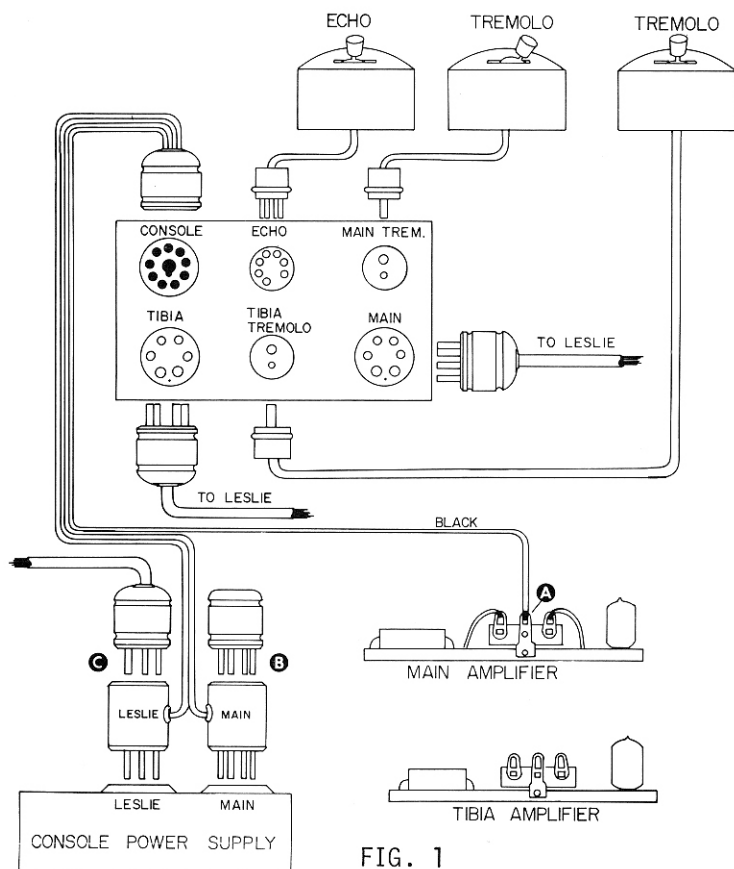

PLUG & SOCKET PIN LAYOUT

