CONSOLE CONNECTOR KIT 7514 INSTALLATION INSTRUCTIONS

FOR USE WITH: LOWRY model GA25KH LESLIE models 103, 147

This kit provides interconnections between LOWREY Organ Model GA25KH and LESLIE Speaker Model 103. Circuitry within the organ proper, supplemented by the cable supplied in this kit, also interconnects the organ with LESLIE Speaker Model 147. Model 147 uses the organ's tibia signal, while model 103 uses the organ's main signal.

Model 147 is controlled from tabs on the organ manual.

Model 103 is controlled through the switches furnished in the kit. (These switches are to be mounted on the organ.) The three switches provide the following operations:

NOTE: While the chassis of the console connector provides a socket labeled "102", this socket is not used in this application.

INT/ENS/EXT Switch (3 positions)

INT (internal): The organ's main signal is routed to the speaker within the organ console.

EXT (external): The organ's main signal is routed to LESLIE Speaker Model 103.

ENS (ensemble): The organ's main signal is routed to both the organ speaker and the LESLIE speaker.

MULTI-RANK Switch (2 positions: ON and OFF) ON/TREM/OFF switch (2 positions: ON and OFF)

These two switches combine to operate the model 103 circuits in four different ways, as described below. For the sake of brevity, the MULTI-RANK switch is referred to as MULTI and the the ON/TREM/OFF Switch is referred to as TREMOLO.

MULTI OFF, TREMOLO OFF - Signal to stationary speakers only.

MULTI ON, TREMOLO OFF - Signal to stationary speakers. Signal to upper rotor speakers; rotor turning at slow speed.

MULTI OFF, TREMOLO ON - Signal to lower rotor speakers only; rotor turning at fast speed.

MULTI ON, TREMOLO ON - Signal to rotors only (not to stationary speakers). Both upper and lower rotor turning at fast speed.

KIT CONTENT

Console Connector			Switch Assembly,	
Assembly	110530		multi-rank	- -
Cable Assembly,			brown	010546
30-ft,9-conductor	021600		ebony	010553
Cable Assembly,			ivory	010561
30-ft, 6-conductor	017277			
Oiler	053025			
Screw, sheet metal,			Switch Assembly	
#8 x 1/2,			ON/TREM/OFF	
Phillips head(2)	029132		brown	029553
Screw, wood,			ebony	029561
#6 x 3/4,			ivory	029579
Phillips head (7)	032086			
Staple, insulated			Switch Assembly	
(10)	028464		INT/ENS/EXT	
		-	1 6 5	

Page 1 of 5

Installation		brown	010579
Instructions	110580	ebony	010587
		ivory	010595


CAUTION: Due to the presence of electrical potential and the danger of moving mechanical parts, installation procedures or adjustments requiring work inside the LESLIE speaker cabinet or the organ console should be performed only by a service man authorized by the dealer or factory to perform such work.

INSTALLATION: CAUTION: DISCONNECT ORGAN POWER BEFORE PROCEEDING! NOTE: The ON/TREM/OFF switch will be called the tremolo switch and the INT/ENS/EXT switch will be called the echo switch.

- 1. Mount the echo, tremolo, and multi-rank switches on the wooden rail in front of the lower manual, using the wood screws provided.
- 2. Open the back and the top of the organ.
- 3. Loosen the plate on the underneath left side of the keybed. (The plate will not come entirely free, as wires are connected to the components mounted on it.)
- 4. Insert the plug ends of the control cables through the opening and route them through the organ wiring to the back.
- 5. Mount the console connector chassis on the floor of the organ, near the amplifier/power supply chassis (left, as you see it).
- 6. Connect the control cables from the switches which are mounted on the organ to the sockets on the console connector. Each socket is identified.
- 7. Locate socket B on the top of the amplifier/power supply chassis (each socket is labeled). Remove the plug from this socket.
- 8. Insert plug P2 of the interceptor assembly into this socket. Connect the plug which was removed to the socket end of the interceptor assembly.
- 9. Connect plug PI (6 contacts) of the console connector to the socket labeled MAIN FOR LOWREY L0-1B, on the side of the amplifier/power supply chassis.
- 10. Insulate the end of the green wire from the console connector and fasten it out of the way.
- 11. Connect the 6-contact cable between Leslie Speaker Model 147 and the socket labeled LESLIE 45A or 47, on the amplifier/ power supply chassis.
- 12. Connect the 9-contact cable between the 103 socket on the console connector and Leslie Speaker Model 103.

- 13. On model 147 set the load resistor switch in the amplifier to OPEN; instructions are given in the service manual for the speaker.
- 14. Adjust the volume on the LESLIE speakers as described in their respective manuals.
- 15. Close the back and top of the organ. Fasten the plate under the keyboard. (Leave one side slightly loose, where wires go through.)
- 13. Adjust the volume on the LESLIE speakers as described in their respective manuals.
- 14. Close the back and top of the organ. Fasten the plate under the keyboard. (Leave one side slightly loose, where wires go through.)

INSTALLATION IS NOW COMPLETE.

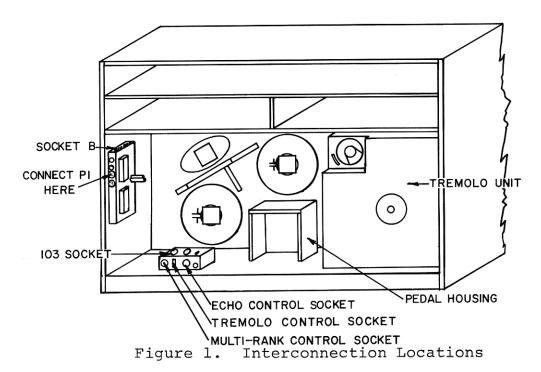

Page 3 of 5

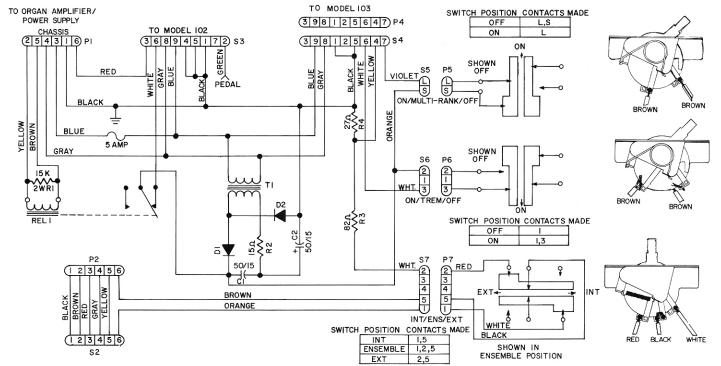


Figure 2. Schematic, 110530 Console Connector Assembly With Controls

PARTS LIST: 037432 RECTIFIER ASSEMBLY

Item No.	Description	Part No.
1	Resistor, 82-ohm, 1/2-W, 10% (R3)	021261
2	Capacitor, electrolytic, 50-mfd, 15-volt (C1,C2)	028324
3	Resistor, 27-ohm, 1/2-W, 10% (R4)	021253
4	Diode, 100-PIV, 1-amp (D1,D2)	021154
5	Resistor, 15-ohm, 1/2-W, 10% (R2)	018051
6	Circuit Board, fiber	055731

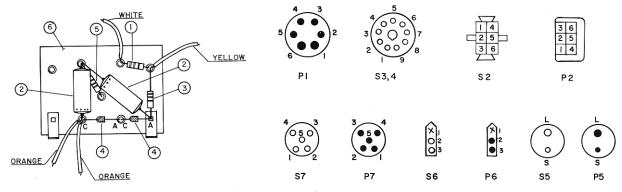


Figure 3. Parts and Wiring, 037432 Rectifier Assembly

Figure 4. Plug and Socket Base Diagram (View From Wire End)

Ordering Parts Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers.

PARTS LIST: 110530 CONSOLE CONNECTOR ASS	EMBLY			
Rectifier Circuit Assembly	037432			
Screw, sheet metal, #6 x 1/4, Phillips head (2	060533			
Interceptor Assembly (includes S2, P2)	110540			
Cable and Plug Assembly (includes P1)	037481			
Chassis	107250			
Housing, socket, 3-circuit, red (S6)	043265			
Socket, 2-contact (S5)	029298			
Screw, sheet metal, #8 x 1/4, Phillips head (2	025635			
Socket, 5-contact (S7)	029652			
Screw, sheet metal, #6 x 1/4, Phillips head (2	060533			
Socket, 9-contact (S3, S4)	061713			
Screw, sheet metal, #12 x 3/8, Phillips head ((4) 029314			
Fuseholder	055178			
Fuse, 5-amp, 250-volt	029280			
Relay, SPDT, 115-volt, 50/60-Hz	027649			
Resistor, 15K, 2W, 10% (R1)	021592			
Grommet	028811			
Bushing, .196 x .312 x .325	051060			
Washer, LWDO, 6 x 9/16 x .025	026898			
Screw, machine, 6-32 x 5/8	028001			
Transformer, filament, 115-volt, 60-Hz	022244			
Screw, sheet metal, #6 x 1/4, Phillips head (2	060533			
Page 4 o	of 5			
PARTS LIST: 110540 INTERCEPTOR ASSEMBLY				
Housing, plug, 6-circuit, natural (white),				
Amphenol	056929			
Contact, insert, male	010421			
Housing, socket, 6-circuit, natural (white),				
Amphenol	069823			

MULTIPLE SPEAKER INSTALLATION

Contact, insert, female

For complete information see the service manual for the LESLIE speaker to be added.

010397