

LESLIE 7523 CONSOLE CONNECTOR KIT FOR WURLITZER CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations.

The Leslie 7523 Console Connector Kit connects Wurlitzer consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	012617	1 Tremolo Control
1 Console Adapter	027052	012625 brown
1 Console Adapter	032037	012633 ebony
1 Console Adapter	032045	012641 ivory
1 6 Conductor Cable	017277	
1 Instructions	036475	1 Echo Control
5 Insulated Staples	028464	029397 brown
1 Oiler	053025	029405 ebony
2 Screw, 8 X 1/2	029132	029413 ivory
4 Screw, 6 X 1/2	029124	

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Unplug the cable from the "SPEAKER" socket and plug it into the 6 to 4 adapter. (See "A" on Fig. 1).
6. Plug the 6 to 4 adapter into the adapter socket. (See "A" on Fig. 1).
7. Insert the adapter plug into the 4 to 6 adapter socket. (See "B" on Fig. 1).
8. Plug the 4 to 6 adapter into the "SPEAKER" socket on the console amplifier. (See "B" on Fig. 1).

9. Plug the adapter power cord into a SWITCHED 117VAC socket on the power junction box. (See "C" on Fig. 1). NOTE: On some models this socket may be occupied. If this is the case use the 3-way plug provided.
10. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.
11. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
12. Follow the load resistor setting instructions for the "8 OHM" position as outlined in the Leslie service manual.
13. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

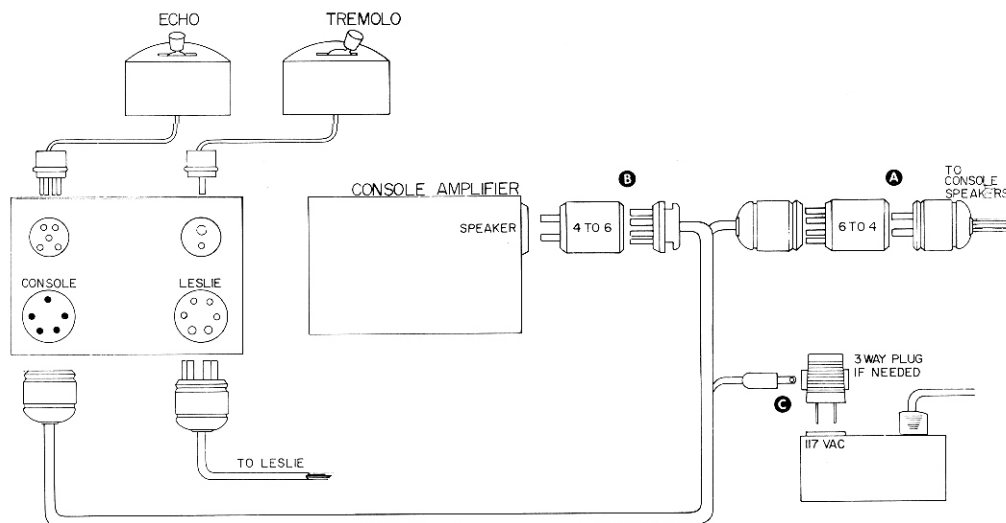


Fig. 1


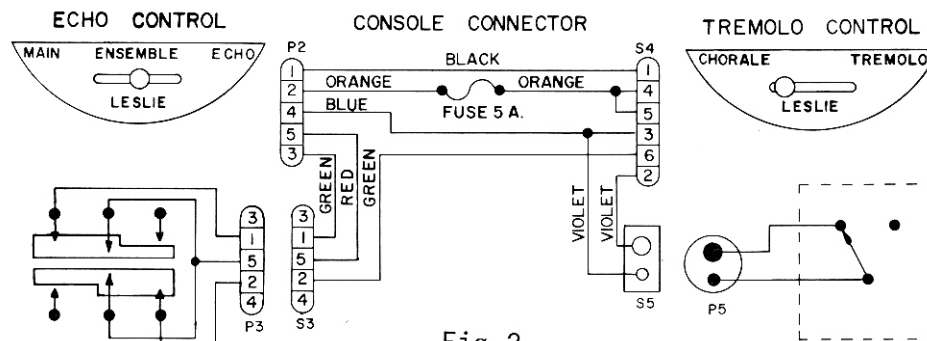


Fig. 2

S4- 060459 P2- 014043 S3- 029652
 6 CONTACT SOCKET 5 PIN PLUG 5 CONTACT SOCKET

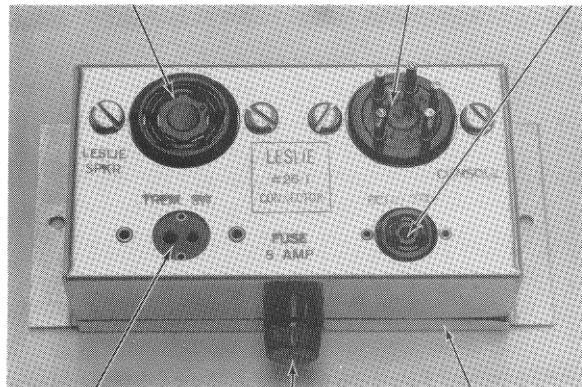

S5-029298 FUSE HOLDER 026054
 2 CONTACT 055178 CHASSIS COVER
 SOCKET FUSE 5 AMP 029280

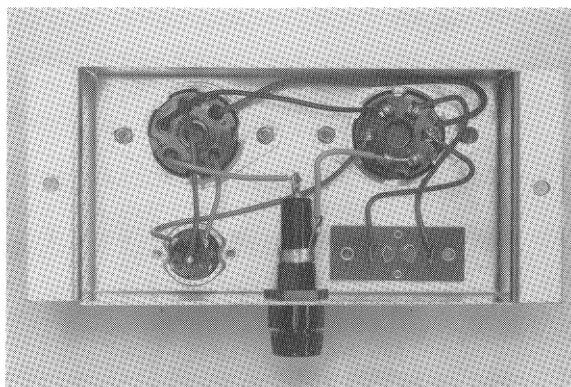


Fig.3 012617 CONSOLE CONNECTOR Fig.4

027052 Console Adapter

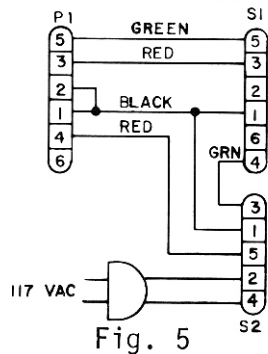


Fig. 5

032037 Adapter

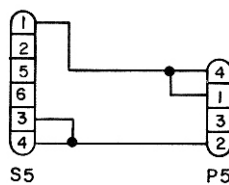


Fig. 6

032045 Adapter

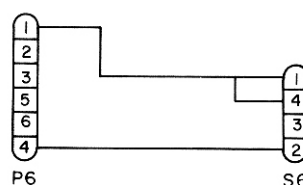


Fig. 7

PLUG & SOCKET PIN LAYOUT

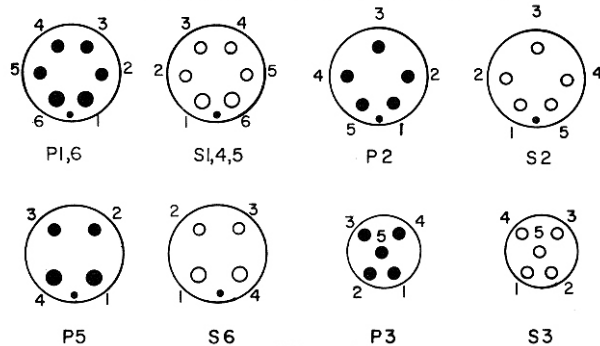


Fig. 8

Control Switch Parts List:

Echo Control

Echo Switch Case

029199 brown

029207 ebony

029215 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown

048074 ebony

Switch Retainer (2 req'd) 048116

Switch Only 029629

5-Pin Plug 021238

Tremolo Control

Tremolo Switch Case

012260 brown

012278 ebony

012286 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown

048074 ebony

Switch Retainer (2 req'd) 048108

Switch Only 042911

2-Pin Plug 029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.