

LESLIE 7639 CONSOLE CONNECTOR KIT

FOR BALDWIN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7639 Console Connector Kit connects Baldwin consoles to dual Leslie speakers.

The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslies, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	062042	2 Tremolo Control	
1	Console Adapter	028605		
2	6 Conductor Cable	017277	brown	012625
1	Ins tructi ons	028456	ebony	012633
10	Insulated Staples	028464	ivory	012641
1	Oiler	053025		
2	Screw, 8 X 1/2	029132	1 Echo Control	
7	Screw, 6 X 1/2	029124		
			brown	052035
			ebony	052043
			ivory	052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the two Tremolo control cables into the sockets marked "MAIN TREMOLO" and "TIBIA TREMOLO" on the connector chassis.
5. Plug the Echo control cable into the socket marked "ECHO" on the connector chassis.
6. Connect the BLACK adapter wire to the "GROUND" terminal on the MAIN speaker. (See "A" on Fig. 1.)
7. Remove the "SIGNAL" wire from the MAIN speaker and connect it to the GREEN adapter wire. Insulate with plastic sleeve. (See "B" on Fig. 1.)

8. Connect the WHITE adapter wire to the "SIGNAL" terminal on the MAIN speaker.
(See "B" on Fig. 1.)
9. Connect the PURPLE adapter wire to the "SIGNAL" terminal on the PEDAL speaker.
(See "C" on Fig. 1.)
10. Remove the "SIGNAL" wire from the TIBIA speaker and connect it to the RED adapter wire. Insulate with plastic sleeve. (See "D" on Fig. 1.)
11. Connect the ORANGE adapter wire to the "SIGNAL" terminal on the TIBIA speaker.
(See "D" on Fig. 1.)
12. Insert the adapter plug into the "REMOTE" socket on the console power supply.
(See "E" on Fig. 1.)
13. Fit the adapter socket onto the plug marked "CONSOLE" on the connector chassis.
chassis.
14. Plug the two Leslie speaker cables into the sockets marked "MAIN" and "TIBIA" on the connector chassis. The installation is now complete.

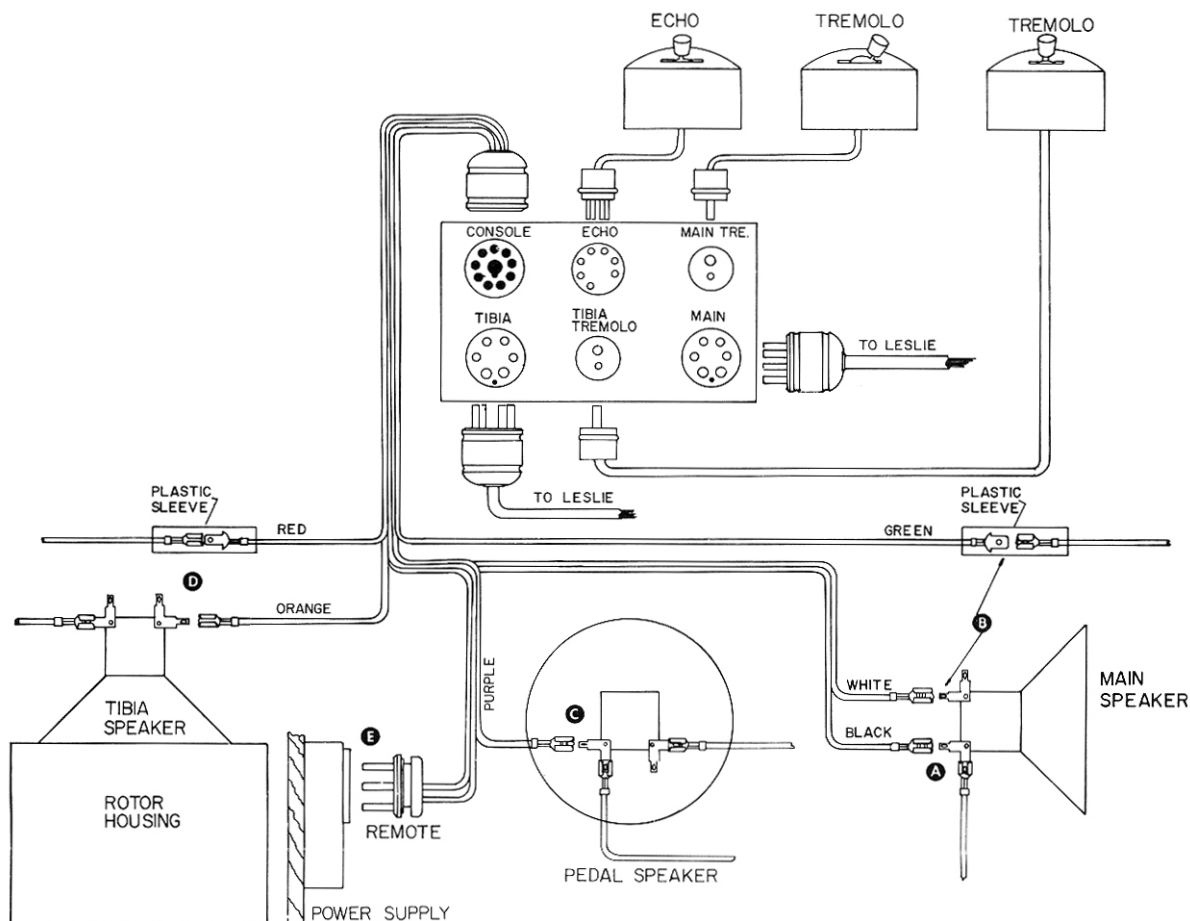


FIG. 1

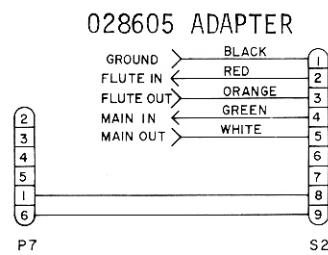


FIG. 3

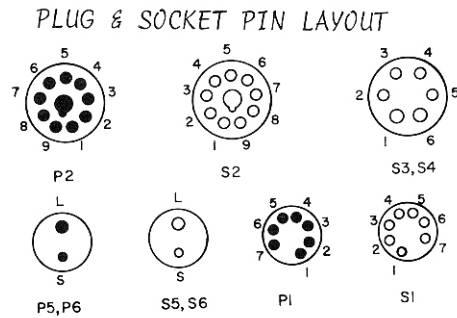


FIG. 4

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.