

LESLIE 7654 CONSOLE CONNECTOR KIT
FOR WURLITZER CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7654 Console Connector Kit connects Wurlitzer consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.



CONTENTS OF KIT:

1 Console Connector	012617	1 Tremolo Control	
1 Console Adapter	027052	brown	012625
1 Console Adapter	042325	ebony	012633
1 6 Conductor Cable	017277	ivory	012641
1 Instructions	036483		
5 Insulated Staples	028464	1 Echo Control	
1 Oiler	053025	brown	029397
2 Screw, 8 X 1/2	029132	ebony	029405
4 Screw, 6 X 1/2	029124	ivory	029413
1 3-Way Plug	029611		

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Unplug the cable from the "SPEAKER" socket and plug it into the 6 to 4 adapter. (See "A" on Fig. 1.)
6. Plug the 6 to 4 adapter into the adapter socket. (See "A" on Fig. 1.)
7. Insert the adapter plug into the 4 to 6 adapter socket. (See "B" on Fig. 1.)
8. Plug the 4 to 6 adapter into the "SPEAKER" socket on the console amplifier. (See "B" on Fig. 1.)

9. Plug the adapter power cord into a SWITCHED 117VAC socket on the power junction box. (See "C" on Fig. 1.) NOTE: On some models this socket may be occupied. If this is the case use the 3-way plug provided.
10. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.
11. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
12. Follow the load resistor setting instructions for the "8 OHM" position as outlined in the Leslie service manual.
13. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

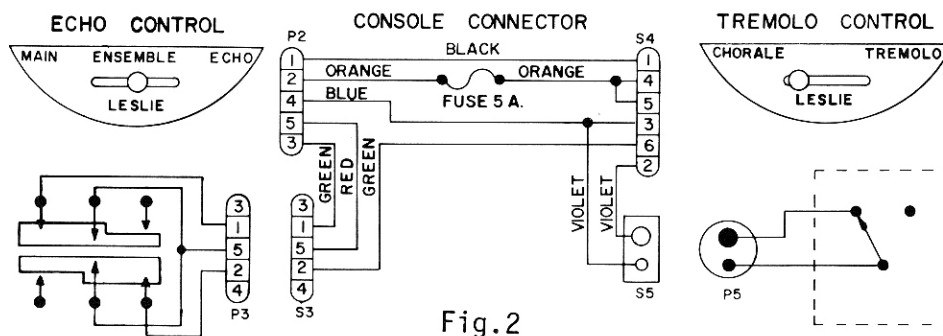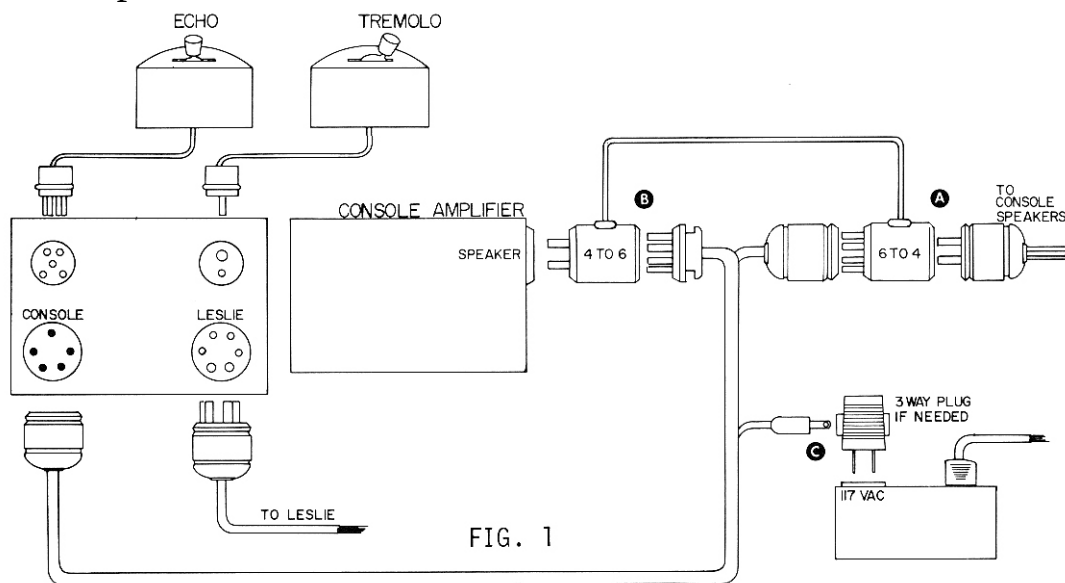

027052 CONSOLE ADAPTER

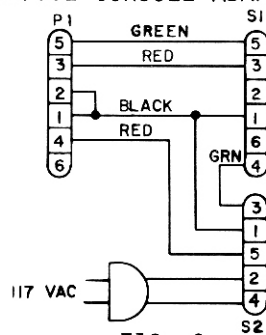


FIG. 3

042325 ADAPTER

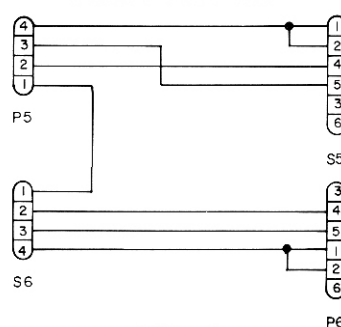


FIG. 4

PLUG & SOCKET PIN LAYOUT

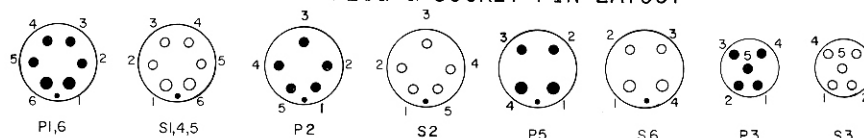


FIG. 5

PARTS LISTConsole Connector

Chassis	012674
Cover	026054
Fuseholder	055178
Fuse	029280
P2	025437
S3	029652
S4	060459
S5	029298

027052 Adapter

P1	061721
S1	029546
S1Cap	013136
S2	029264
S2 Cap	013136

042325 Adapter

P5	040006
S5	029546
P6	061721
S6	052795
Sleeve	029595

Echo Control

Echo Switch Case	
brown	029199
ebony	029207
ivory	029215
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	029629
5-Pin Plug	021238

Tremolo Control

Tremolo Switch Case	
brown	012260
ebony	012278
ivory	012286
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch Only	042911
2-Pin Plug	029165