

CONSOLE CONNECTOR KIT 7701 INSTALLATION INSTRUCTIONS

For Use With: LESLIE Speaker Model 700

KIMBALL Organ 1000 Series

MULTIPLE SPEAKER INSTALLATIONS:


For complete information, consult the owner's manual of the LESLIE speaker to be added.

KIT CONTENTS


1-102710	Console Connector	047019	Brown
1-021600	Speaker Cable	047027	Ebony
1-053025	Oiler	047035	Ivory
1-102780	Installation Instructions	1 Echo Control	
4-032086	Screws, #6 x 3/4" Blk Oxide	019588	Brown
2-029132	Screws, #8 x 1/2"	019596	Ebony
8-028464	Insulated Staples	019604	Ivory

TO INSTALL:

1. Remove Kimball back panel.
2. Mount console connector chassis to bottom shelf of organ. Use the two #8 x 1/2" screws from hardware package.
3. Mount echo and tremolo control switches beneath the lower keyboard. Use black oxide wood screws from the hardware package.
4. Route echo and tremolo control cables through the keyboard shelf and into the amplifier section at the rear of the organ. If no opening is provided, drill a 1" hole in the lower keyboard shelf.
5. Connect echo and tremolo control plugs into matching sockets on console connector chassis. (See "A" and "B" on Fig. 1).
6. Detach the 15 pin molex plug from extreme left side of the Kimball amplifier. (See "C" on Fig. 1.) Replace it with the plug end of the console connector interceptor.
7. Connect Kimball plug detached in Step 6 with socket end of console connector interceptor. (See "D" on Fig. 1)
8. Connect speaker cable supplied to power plug at rear of the Model 700 and the 9 contact socket on the console connector chassis. (see "E" on Fig. 1)
9. Replace Kimball back cover. Adjust volume of the Model 700 according to its owner's manual. Installation is complete.

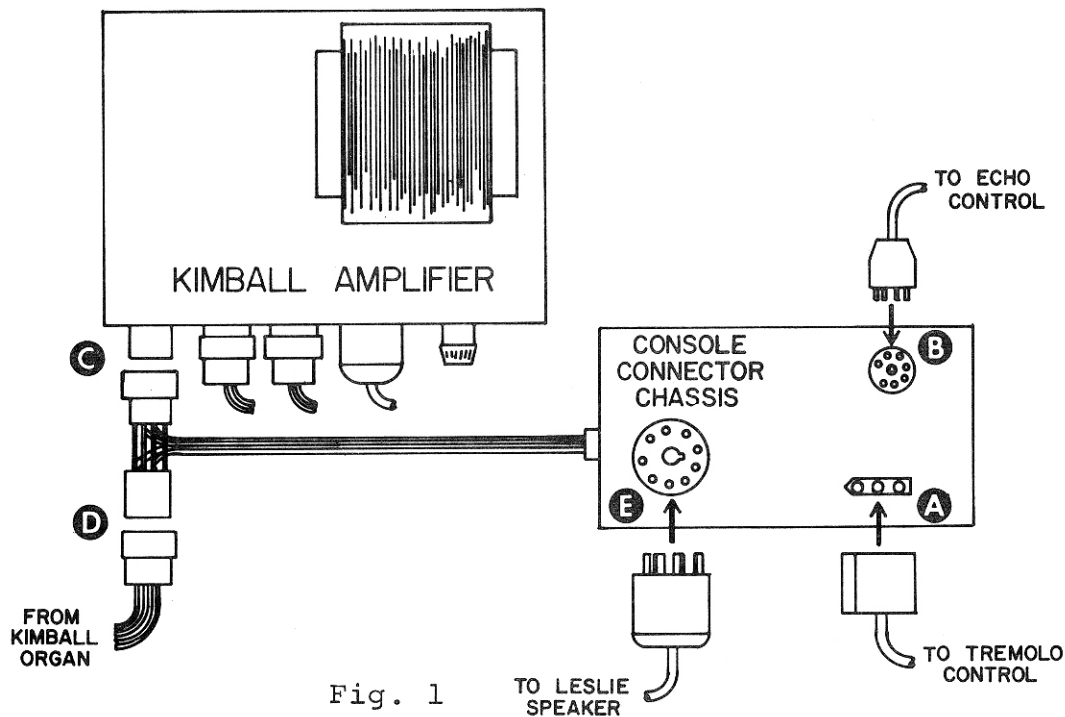


SCHEMATIC: 102710 CONSOLE CONNECTOR
w/ CONTROL

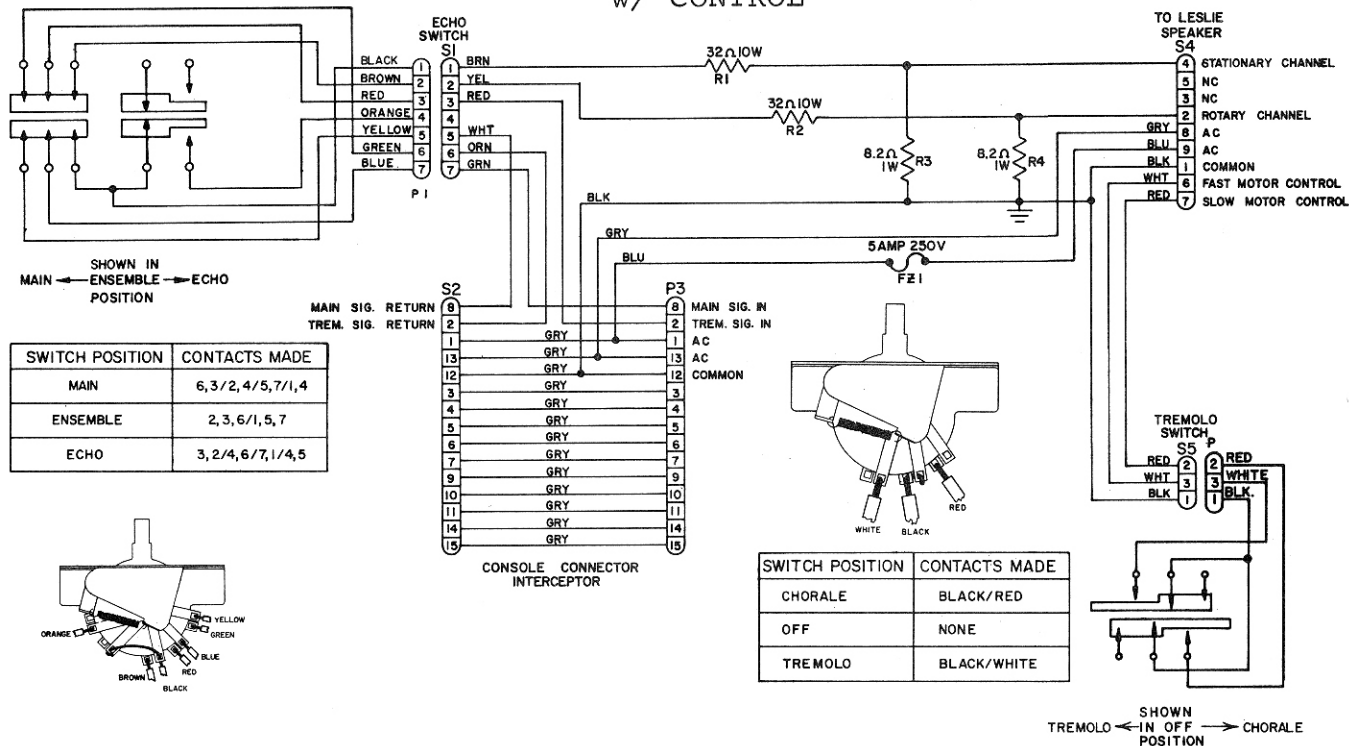

PLUGS & SOCKETS: 7701 KIT

(ALL PLUGS AND SOCKETS SHOWN FROM WIRE END.)

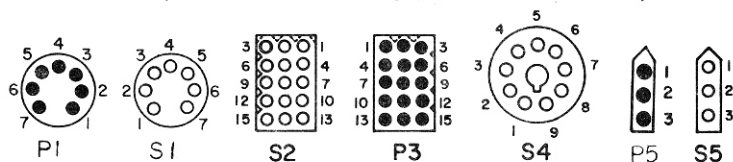

** CORRECT P1 PIN NUMBERS ARE REVERSE OF
PIN NUMBERS EMBOSSED ON WIRE END OF PLUG.

PARTS LIST: 102710 CONSOLE CONNECTOR

S1	029306-7 Contact Socket, Cinch	R1,R2	029769 Resistor, wire
S2	102690-15 Ckt Molex Socket Hsing		wound, 32 ohm, 10W, 10%
S2	023556 Female Molex Contact (15 req'd)	R3, R4	010124 Resistor,
P3	102700-15 Ckt Molex Plug Hsing		8.2ohm, 1W, 10%
S4	061713-9 Contact Socket, Amphenol		1-029256 Strain Relief Bushing
S5	042077-3 Ckt Molex Socket Hsing		1-055327 2 Lug Terminal Strip
S5	023556 Female Molex Contact (3 req'd)		2-012690 Trimount Studs
FZ1	029280 Fuse, 5A, 250V		
FZ1	055178 Fuseholder, Buss HKP		

PARTS LIST: 021600 SPEAKER CABLE

021618	9 Conductor Bulk Cable (Specify Length Required)
061379	9 Pin Plug Assy, Amphenol
028837	9 Contact Socket Assy, Amphenol

PARTS LIST: ECHO & TREMOLO CONTROLS

TREMOLO CONTROL ECHO CONTROL

Switch Case	Switch Case
046979 Brown	029454 Brown
046987 Ebony	029462 Ebony
046995 Ivory	029470 Ivory
Switch Case Cover	Switch Case Cover
048702 Brown	048702 Brown
048710 Ebony	048710 Ebony
048728 Ivory	048728 Ivory
Switch Retainer (2 req'd) 048116	Switch Retainer (2 req'd) 048116
Switch Knob	Switch Knob
048066 Brown	048066 Brown
048074 Ebony	048074 Ebony
Screw,TCF, 6-32 x 3/8" 029140	Screw, TCF, 6-32 x 3/8" 029140
P5-3 Ckt Molex Plug Hsing 042085	P1 7 Pin Plug, Cinch 029223
P5 Male Molex Contact (3 req'd) 023309	P1 Cap 029231
Adhesive Cork--029157	Adhesive Cork--029157
Switch Only--010249	Switch Only--029173

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be purchased through your LESLIE speaker dealer. Orders should include part numbers listed.