

LESLIE 7839 CONSOLE CONNECTOR KIT
FOR CONN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7839 Console Connector Kit connects Conn consoles to dual Leslie speakers. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslies, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	062042	1 Tremolo Control
1	Console Adapter	027805	
2	6 Conductor Cable	017277	brown 012625
1	Instructions	027789	ebony 012633
6	Insulated Staples	028464	ivory 012641
1	Oiler	053025	
2	Screw, 8 X 1/2	029132	1 Echo Control
5	Screw, 6 X 1/2	029124	
			brown 052035
			ebony 052043
			ivory 052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Tremolo control cable into the socket marked "MAIN TREMOLO" on the connector chassis.
5. Plug the Echo control cable into the socket marked "ECHO" on the connector chassis.
6. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the interceptor socket. (See "A" on Fig. 1.)
7. Insert the interceptor plug into-the "SPEAKER" socket on the console amplifier. (See "A" on Fig. 1).

8. Insert the 6-pin adapter plug into the socket on the console junction box. (See "8" on Fig. 1).
9. Fit the adapter socket onto the plug marked "CONSOLE" on the connector chassis.
10. Plug the two Leslie Speaker cables into the sockets marked "MAIN" and "TIBIA" on the connector chassis. The installation is now complete.

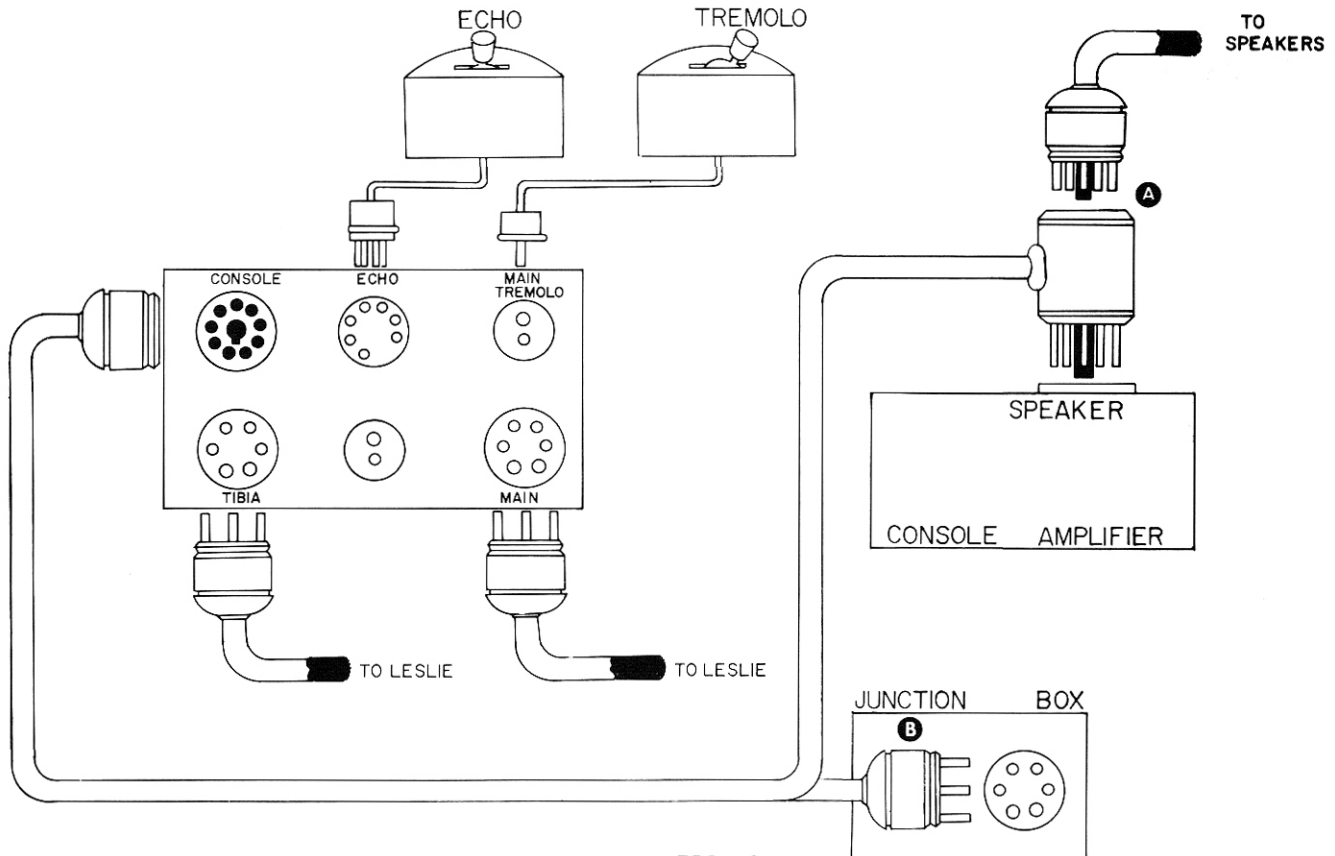
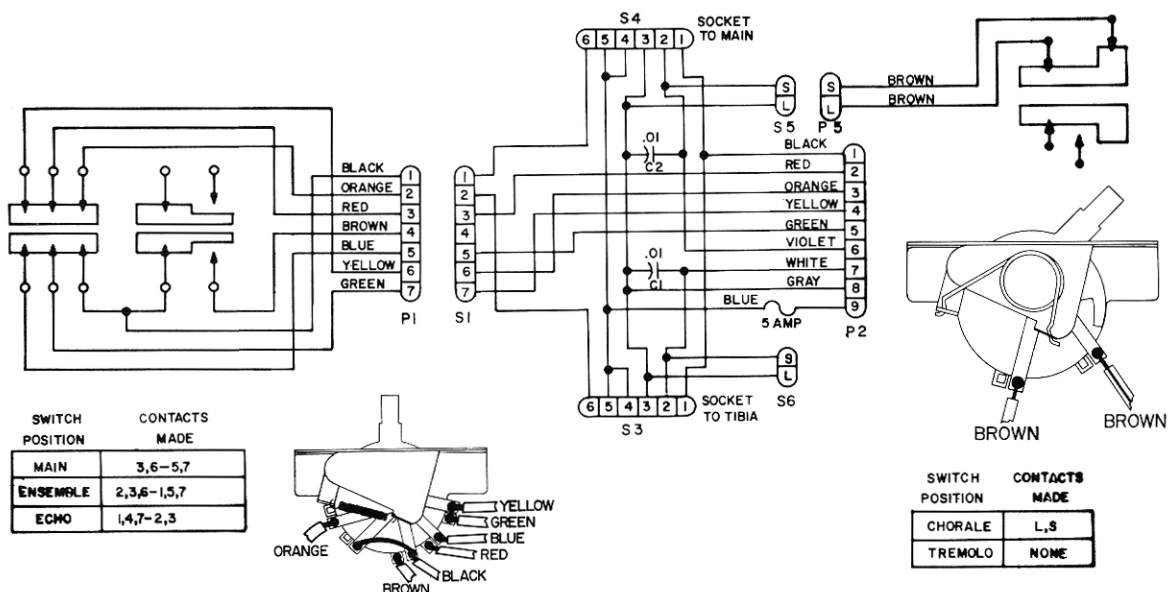


FIG. 1



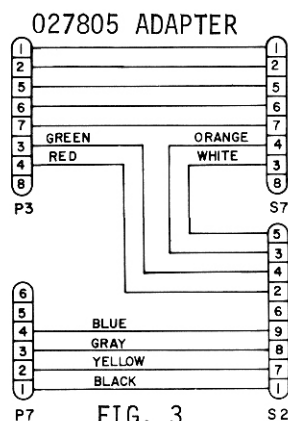


FIG. 3

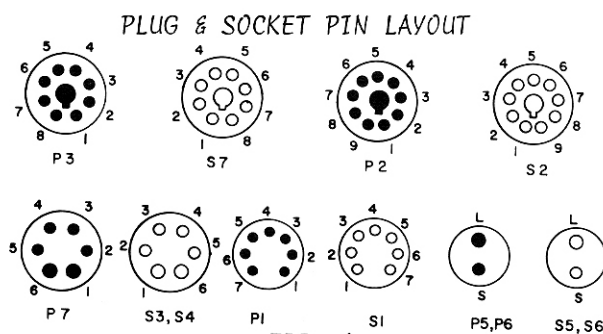


FIG. 4

PARTS LIST

Console Connector

Chassis	061838
S3, S4	060459
S1	029306
S5, S6	029298
Fuseholder	055178
P2	021170
C1, C2	060467
Fuse	029280

Console Adapter

P3	027854
S7	027847
S2	028837
S2 Cap	013136
P7	061721
Sleeve	029595

Echo Control

Echo Switch Case	
brown	029199
ebony	029207
ivory	029215
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	029173
7-Pin Plug	029223

Tremolo Control

Tremolo Switch Case	
brown	012260
ebony	012278
ivory	012286
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch Only	042911
2-Pin Plug	029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.