

LESLIE 7912 CONSOLE CONNECTOR KIT FOR CONN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7912 Console Connector Kit connects Conn consoles to dual Leslie speakers. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslies, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	062042	1 Tremolo Control	
1	Console Adapter	027888	brown	012625
2	6 Conductor Cable	017277	ebony	012633
1	Instructions	027862	ivory	012641
6	Insulated Staples	028464		
1	Oiler	053025	1 Echo Control	
2	Screw, 8 X 1/2	029132	brown	052035
5	Screw, 6 X 1/2	029124	ebony	052043
			ivory	052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Tremolo control cable into the socket marked "MAIN TREMOLO" on the connector chassis.
5. Plug the Echo control cable into the socket marked "ECHO" on the connector chassis.
6. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the interceptor socket. (See "A" on Fig. 1.)
7. Insert the interceptor plug into the "SPEAKER" socket on the console amplifier. (See "A" on Fig. 1.)
8. Fit the adapter socket onto the plug marked "CONSOLE" on the connector chassis.

9. Plug the two Leslie Speaker cables into the sockets marked "MAIN" and "TIBIA" on the connector chassis. The installation is now complete.

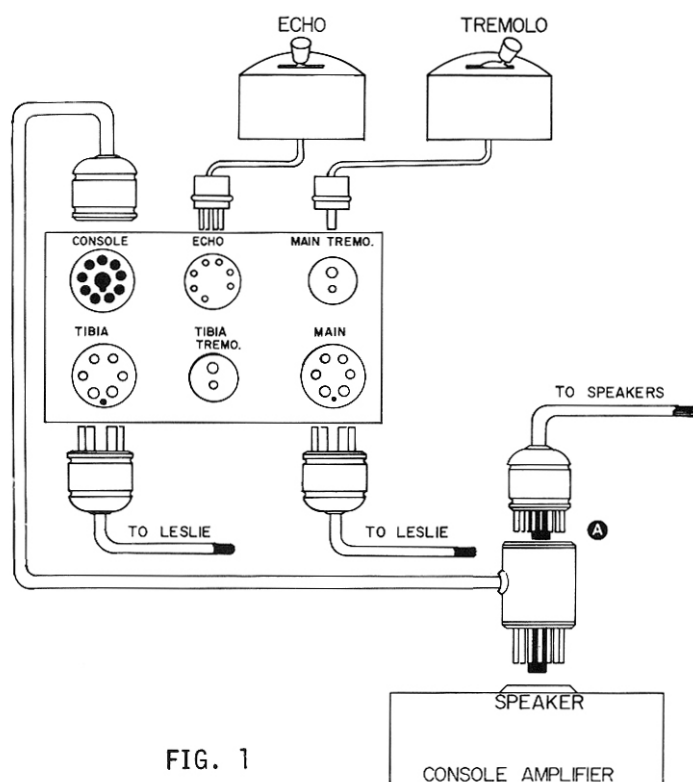
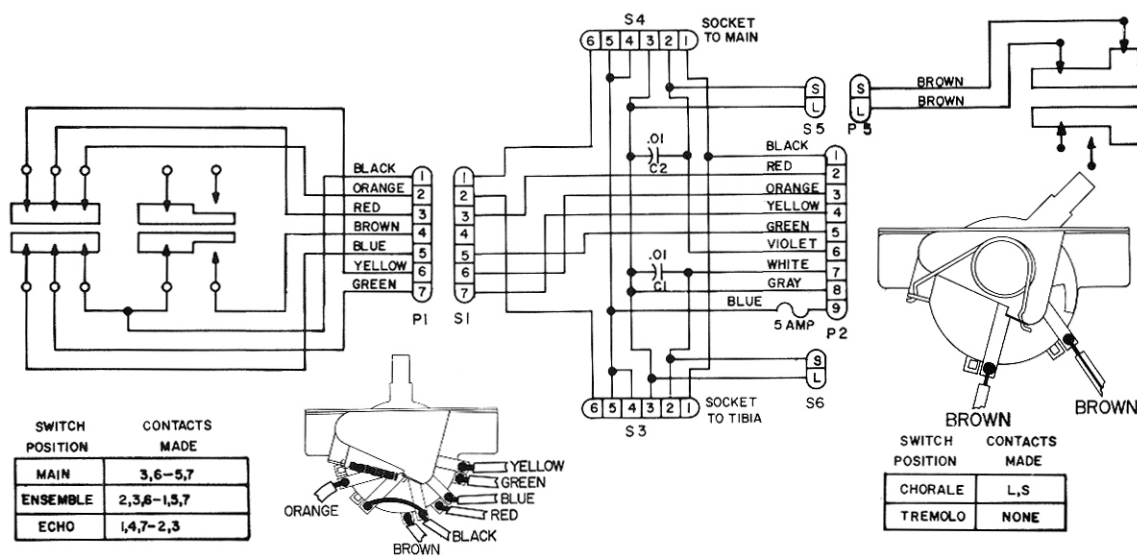


FIG. 1



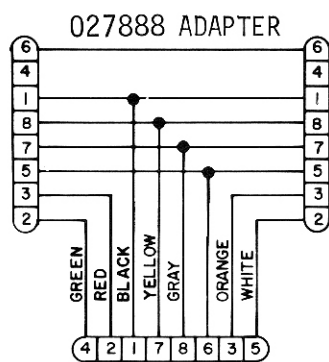


FIG. 3

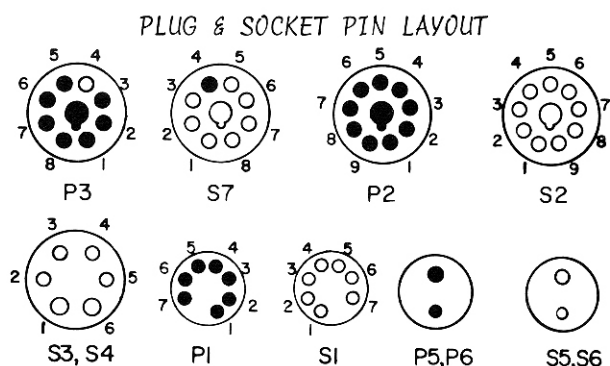


FIG. 4

PARTS LIST

Console Connector

Console Adapter

Chassis	061838	S2	028837
S3, S4	060459	S7	027847
S1	029306	P3	027854
S5, S6	029298	S2 Cap	013136
Fuseholder	055178	Sleeve	029595
P2	021170		
C1, C2	060467		
Fuse	029280		

Echo Control

Tremolo Control

Echo Switch Case

brown	029199
ebony	029207
ivory	029215

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048116

Switch Only

029173

7-Pin Plug

029223

Tremolo Switch Case

brown	012260
ebony	012278
ivory	012286

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048108

Switch Only

042911

2-Pin Plug

029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.