

LESLIE 7917
CONSOLE CONNECTOR KIT FOR CONN CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 7917 Console Connector Kit connects Conn consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.



CONTENTS OF KIT:

1	Console Connector	012617	1 Tremolo Control
1	Console Adapter	060913	012625 brown
1	6 Conductor Cable	017277	012633 ebony
1	Instructions	036509	012641 ivory
5	Insulated Staples	028464	1 Echo Control
1	Oiler	053025	029397 brown
2	Screw, 8 X 1/2	029132	029405 ebony
4	Screw, 6 X 1/2	029124	029413 ivory

TO INSTALL THE KIT:


1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the echo and tremolo control cables into the proper sockets on the connector chassis.
5. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the adapter socket (See "A" on Fig. 1).
6. Plug the adapter into the "SPEAKER" socket. (See "A" on Fig. 1).
7. Plug the adapter power cord into a SWITCHED 117VAC socket on the console junction box (See "8" on Fig. 1).
8. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.

9. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
10. Follow the load resistor setting instructions for the "8 OHM" position as outlined in the Leslie service manual.
11. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

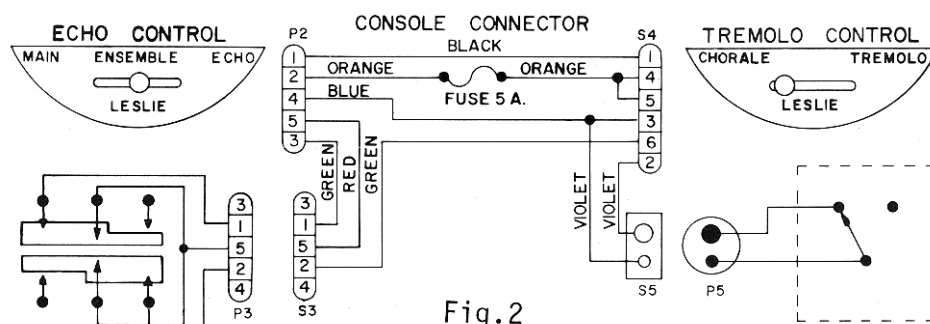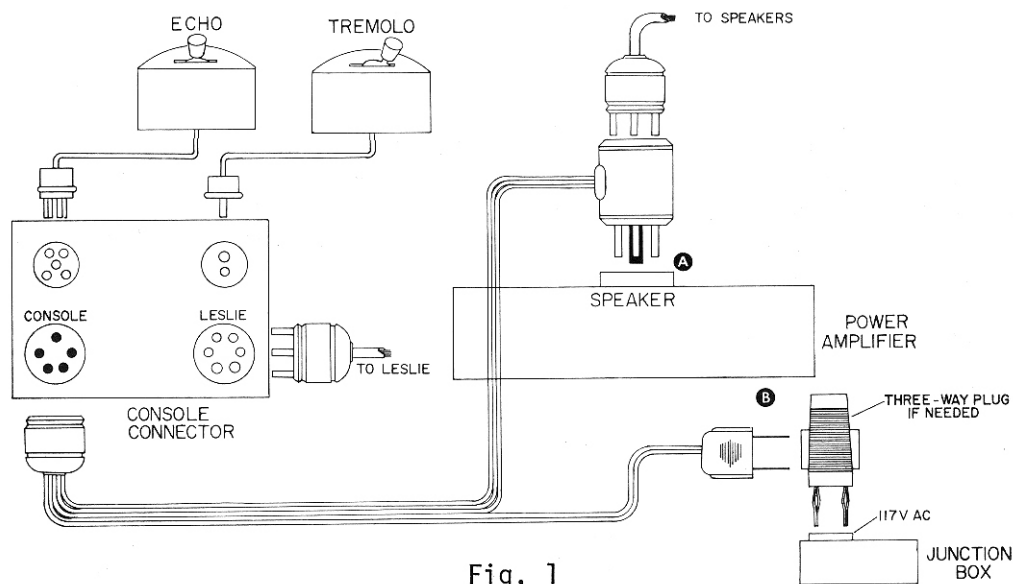


012617 CONSOLE CONNECTOR

S4- 060459 6 CONTACT SOCKET
P2- 014043 5 PIN PLUG
S3- 029652 5 CONTACT SOCKET

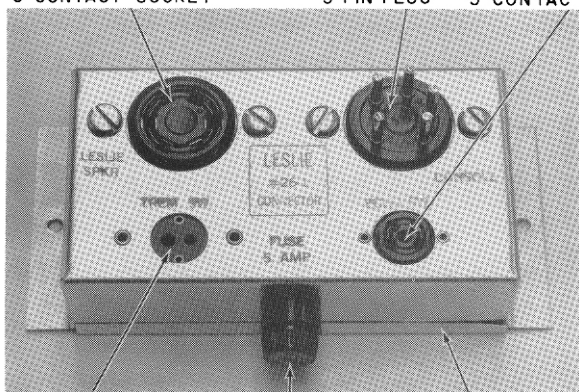

S5-029298 2 CONTACT SOCKET
FUSE HOLDER 055178
FUSE 5 AMP 029280
026054 CHASSIS COVER

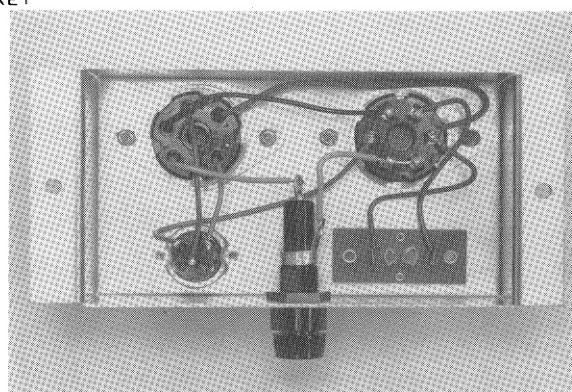

Control Switch Parts List:

Echo Control

Echo Switch Case

029199 brown

029207 ebony

029215 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown

048074 ebony

Switch Retainer (2 req'd) 048116

Switch Only 029629

5-Pin Plug 021238

Tremolo Control

Tremolo Switch Case

012260 brown

012278 ebony

012286 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown


048074 ebony

Switch Retainer (2 req'd) 048108

Switch Only 042911

2-Pin Plug 029165

060169 Console Adapter

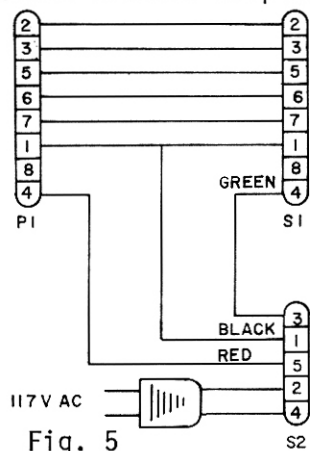

PLUG & SOCKET PIN LAYOUT

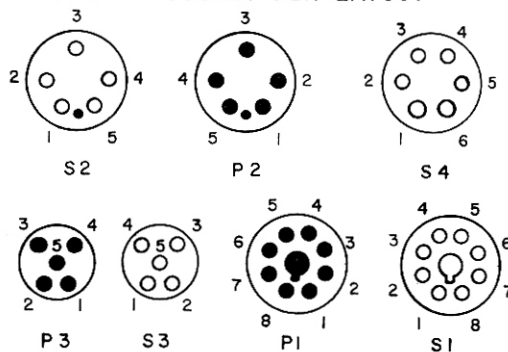


Fig. 6

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.