

LESLIE 7959 CONSOLE CONNECTOR KIT
FOR CONN CONSOLES

See Leslie Price Sheet for speaker-console combinations

The Leslie 7959 Console Connector Kit connects Conn consoles to dual Leslie speakers. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslies, or through both, It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1	Console Connector	062042	1 Tremolo Control	
1	Console Adapter	062075	brown	012625
2	6 conductor Cable	017277	ebony	012633
1	Instructions	028977	ivory	012641
6	Insulated Staples	028464	1 Echo Control	
1	Oiler	053025	brown	052035
2	Screw, 8 X 1/2	029132	ebony	052043
5	Screw, 6 X 1/2	029124	ivory	052050

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the Console connector chassis inside the console within reach of the adapter and control cables, using the Wood screws provided.
4. Plug the Tremolo control cable into the socket marked "MAIN TREMOLO" on the Connector chassis.
5. Plug the Echo control cable into the socket marked "ECHO" on the connector chassis.
6. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the interceptor socket. (See "A" on Fig. 1.)
7. Insert the interceptor plug into the "SPEAKER" socket on the console amplifier. (See "A" on Fig. 1.)
8. Insert the adapter plug into the "LESLIE" socket on the console. (See "B" on Fig. 1.)

9. Fit the adapter socket onto the plug marked "CONSOLE" on the connector chassis.
10. Plug the two Leslie Speaker cables into the sockets marked "MAIN" and "TIBIA" on the connector chassis. The installation is now complete.

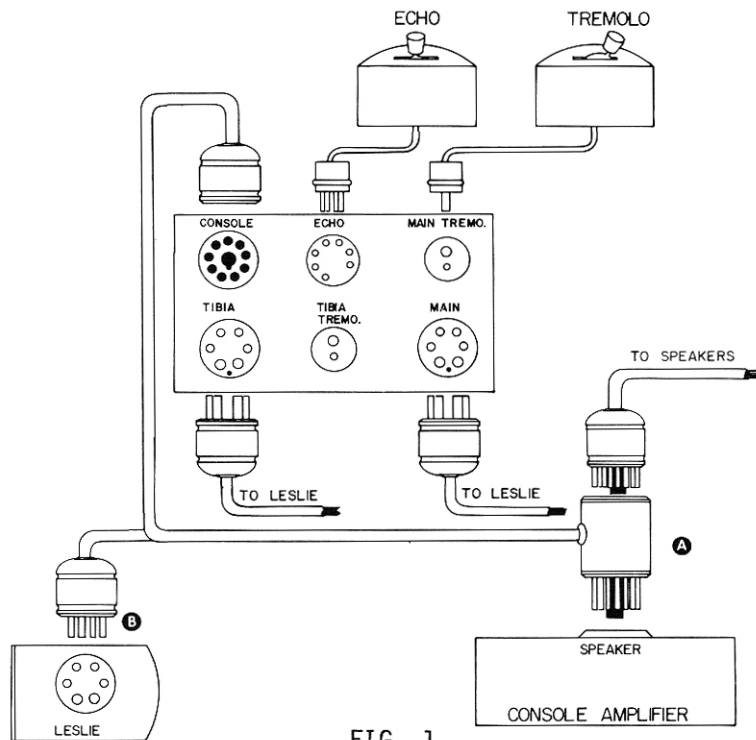


FIG. 1

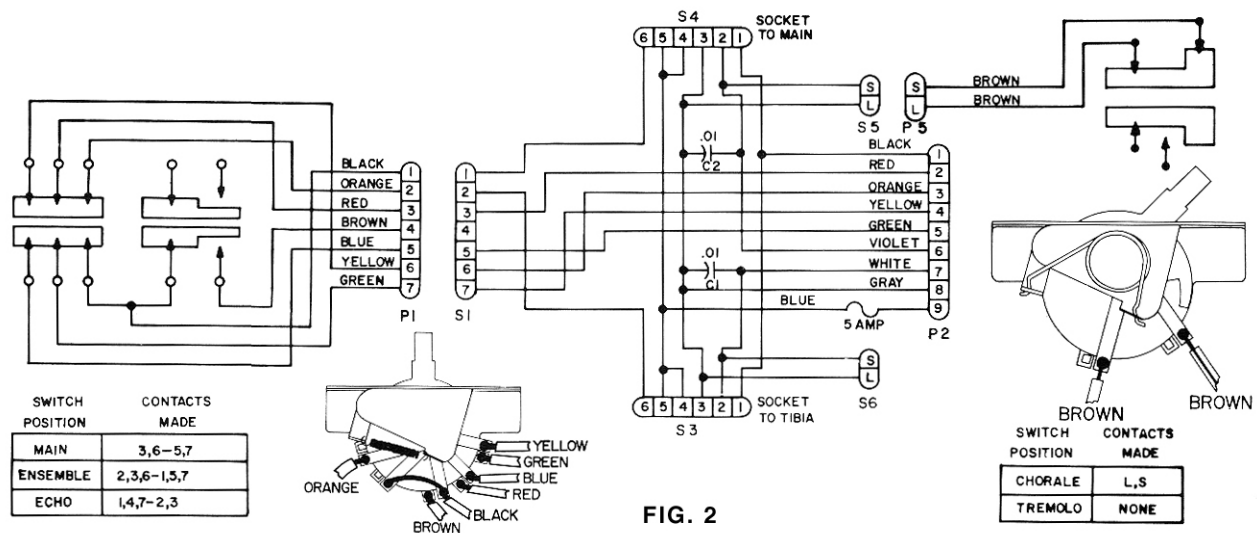


FIG. 2

PARTS LIST

Console Connector	Console Adapter
Chassis	061838
S3, S4	060459
S1	029306
S5, S6	029298
Fuseholder	055178
P2	021170
C1, C2	060467
Fuse	029280

S7	028852
P3	028845
P7	061721
S2	028837
Sleeve	029595

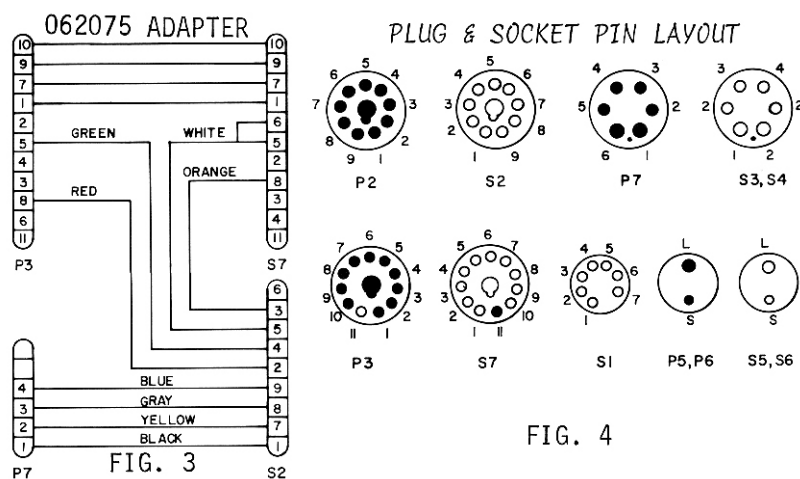


FIG. 4

Echo Control

Tremolo Control

Echo Switch Case

Tremolo Switch Case

brown

029199

brown

012260

ebony

029207

ebony

012278

ivory

029215

ivory

012286

Switch Case Cover

Switch Case Cover

brown

048702

brown

048702

ebony

048710

ebony

048710

ivory

048728

ivory

048728

Switch Knob

Switch Knob

brown

048066

brown

048066

ebony

048074

ebony

048074

Switch Retainer (2) 048116

Switch Retainer (2) 048108

Switch Only 029173

Switch Only 042911

7-Pin Plug 029223

2-Pin Plug 029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.