

LESLIE CONSOLE CONNECTOR KIT 7966 INSTALLATION INSTRUCTIONS
FOR USE WITH: YAMAHA Models: D-2B, B7, D7
LESLIE Speakers: 120,225, 147, 147RV, 247, 247RV

MULTIPLE SPEAKER INST ALLATION: For complete information, see the service manual of the specific model LESLIE speaker to be added.

CONTENTS OF KIT:

1	Console Connector	012617	Tremolo Control	
1	Console Adapter	020966	019554	brown
1	6 Conductor Cable	017277	019562	ebony
1	Instructions	036517	019570	ivory
12	Insulated Staples	028464	Echo Control	
1	Oiler	053025	029421	brown
2	Screws, 8 x 1/2	029132	029439	ebony
6	Screws, 6 x 3/4	032086	029447	ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches beneath the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Remove the console knee panel.
6. Unplug the cable from the "SPEAKER" socket on the console amplifier and plug it into the interceptor socket of the console adapter (See "A" on Fig. 1.)
7. Plug the interceptor into the "SPEAKER" socket on the console amplifier (See "A" on Fig. 1.)
8. Plug the adapter power cord into a SWITCHED 117V AC socket on the console amplifier. (See "B" on Fig. 1.)
9. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis. (See "C" on Fig. 1.)

10. Plug the Leslie Speaker Cable into the socket marked "LESLIE SPEAKER" on the connector chassis.(See "D" on Fig. 1.) Replace the knee panel.
11. Follow the load resistor setting instructions for the " 8 OHM" position as outlined in the Leslie service manual.
12. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

Ordering Parts

Standard hardware, connectors, and electronic componenets should be purchased locally. Non-standard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers as listed.

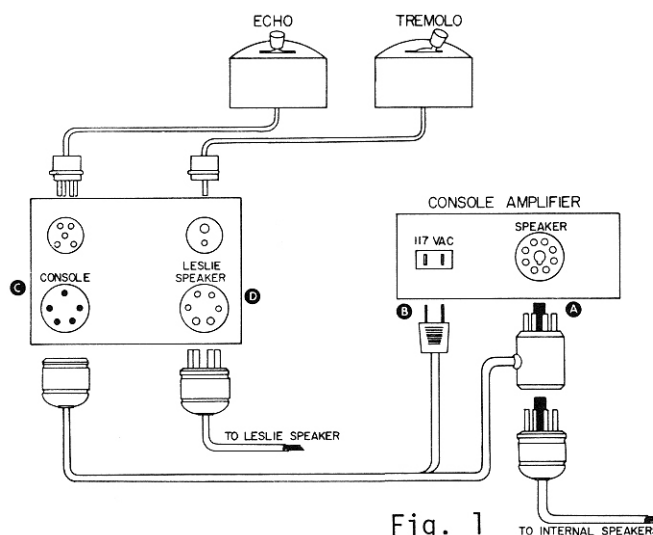


Fig. 1

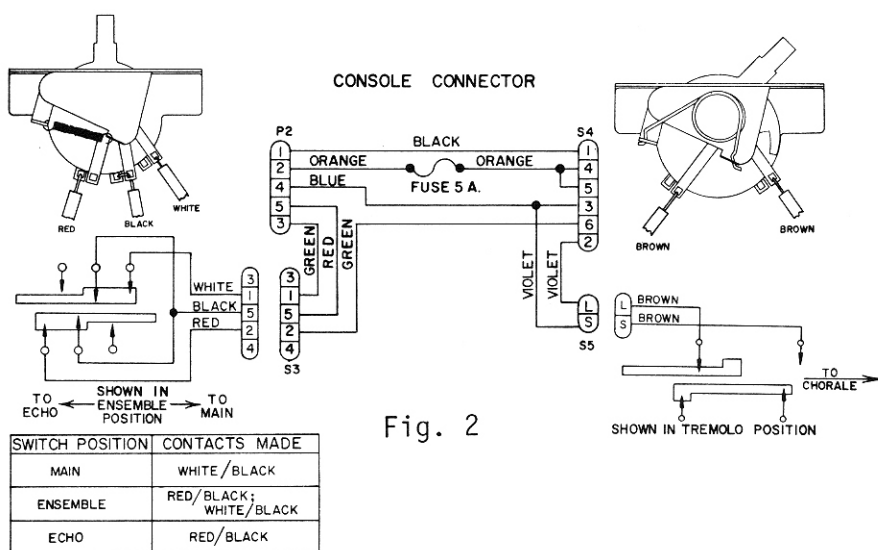


Fig. 2

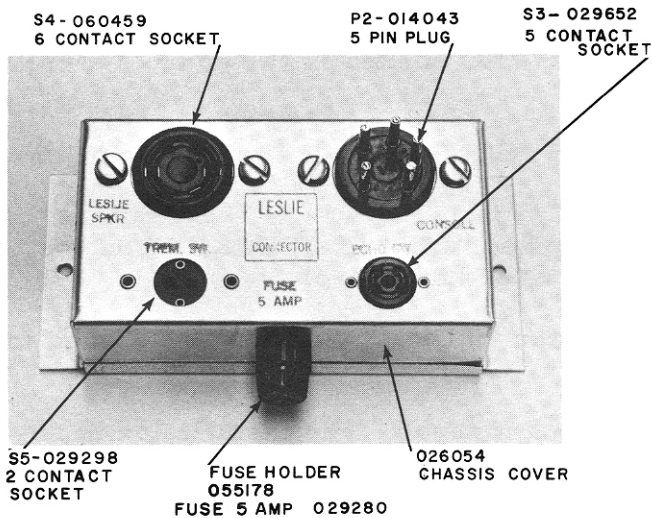


Fig. 3

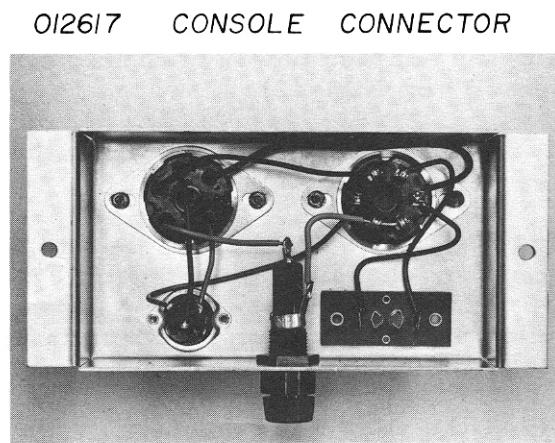


Fig. 4

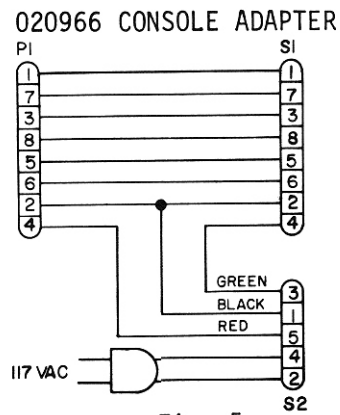


Fig. 5

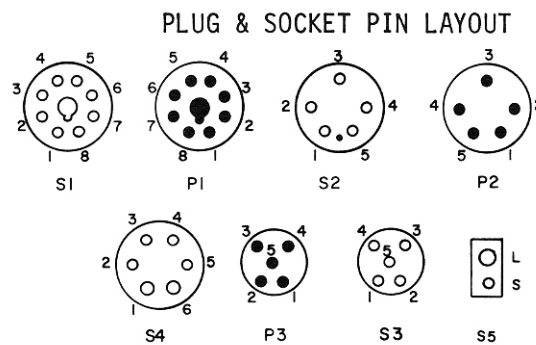


Fig. 6

PARTS LIST: TREMOLO CONTROL

Switch Case

brown 103810
ebony 103820
ivory 103830

Case Cover

brown 048702
ebony 048710
ivory 048728

Switch Knob

brown 048066
ebony 048074

Switch, Cable, and Plug Assembly

061994

Switch Retainer (2) Screw, thread-cutting, 6-32 x 3/8 (2)

048744

029140

Label, CHORALE/TREM Cork, Adhesive

103640

029157

PARTS LIST: ECHO CONTROL

Switch Case	Switch, Cable, and	
brown 103810	Plug Assembly	062000
ebony 103820		
ivory 103830	Switch Retainer (2)	048116
Case Cover	Screw, thread-cutting,	
brown 048702	6-32 x 3/8	029140
ebony 048710		
ivory 048728	Label, MAIN/ENSEMBLE/ECHO	103670
Switch Knob	Cork,Adhesive	029157
brown 048066		
ebony 048074		

PARTS LIST: 012617 CONSOLE CONNECTOR ASSEMBLY

Socket, 2-contact	029298
Socket, 5-contact	029652
Socket, 6-contact	060459
Plug, 5-pin	025437
Fuseholder	055178
Fuse 5-amp	029280