

LESLIE 8066 CONSOLE CONNECTOR KIT
FOR HAMMOND ORGANS: X-66 with #12 HAMMOND SPEAKER
Leslie: 142 122 222

CONTENTS OF KIT

1 Console Connector	032698	1 Tremolo-Echo Control
1 6 Conductor Cable	017277	
1 Instructions	032789	brown 032706
3 Insulated Staples	028464	ebony 032714
1 Oiler	053025	ivory 032722
2 Screw, 6-32 x 5/8	028001	
2 Screw, 8 x 1/2	032771	
2 Cable Tie	032854	
1 Cable Clamp	032821	

TO INSTALL THE KIT:

1. Remove the console back panel and the bolts securing the console top. Remove the top.
2. Remove the metal shield cover from the top of the tab-switch circuit case.
3. Remove the two brown wires from terminal "X76" of the Brite Voice Preamp Board Assembly. Connect these wires together using the wire nut provided. (See "A" on Fig. 1).
4. Solder one end of the adapter wire to terminal "X76" of the Brite Voice Preamp Board Assembly. (See "A" on Fig. 1).
5. Strip approximately 1/4 inch of insulation away from one of the yellow wires attached to the "Tremulant" tab in the 8' Accompaniment Tab Bank. Solder the other end of the adapter wire to this wire. Insulate with plastic tape. (See "B" on Fig. 1). Replace the shield, top and back panel.
6. Loosen but do not remove the four screws securing the expression housing to the wooden base of the console. (See "C" on Fig. 2) .
7. Place the insulation material provided on the front lip of the connector chassis. Insert the lip under the rear of the metal expression housing base. Center the chassis behind the housing. (See "D" on Fig. 2) .
8. Drill two 1/16 inch pilot holes and secure the connector chassis using the wood screws provided.
9. Re-tighten the screws securing the expression housing. (See "C" on Fig. 2) .

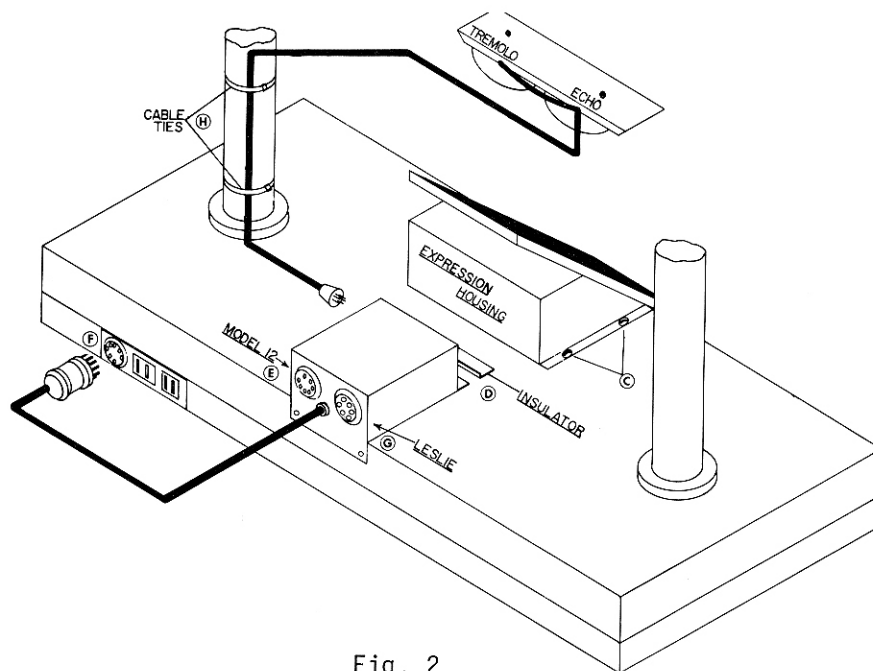


Fig. 2

PARTS LIST CONSOLE CONNECTOR

Chassis	032763	R1	028530	Q1	014944
Preamp Assy.	032953	R3	01801	Q2	018069
T1	048025	R4	018044	Q3	018077
S2	017954	R5	024133	C1	028647
S3	060459	R6	018036	C2	028431
S1	025205	R7	018002	C3	028324
P2	061911	R8	018028	C4, C5	025262
P2 Cap	061739	R9	018051	C6	018093
		R10	028688	R12	048157
		R11	024117	R13	027102

ECHO CONTROL TREMOLO CONTROL

Echo Switch Case

brown	032904
ebony	032912
ivory	032920

Switch Case Cover

brown	033506
ebony	033514
ivory	033522

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048116

Switch Only

029173

7-Pin Plug

029223

Mounting Block

032813

Tremolo Switch Case

brown	029512
ebony	029520
ivory	029538

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048108

Switch Only

042911

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

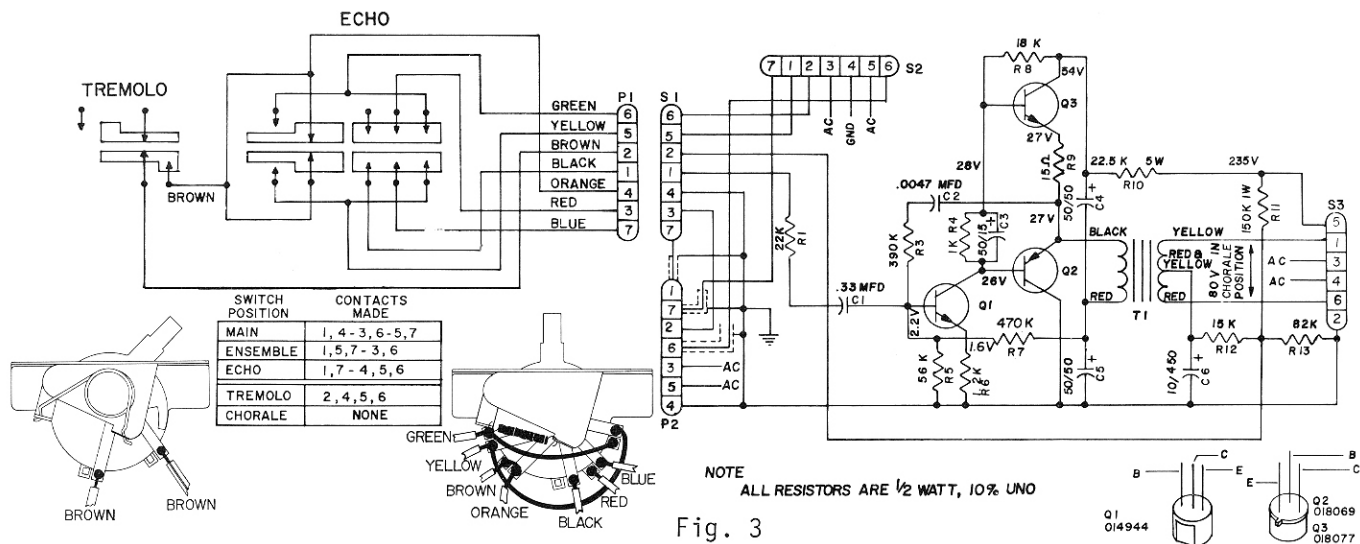


Fig. 3

Plug & Socket Pin Layout

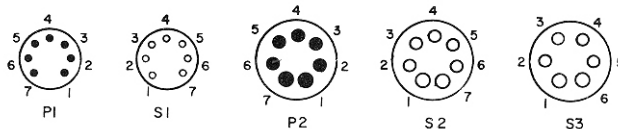


Fig. 4