

LESLIE 8240 CONSOLE CONNECTOR KIT
FOR HAMMOND CONSOLES
SEE LESLIE PRICE SHEET FOR SPEAKER-CONSOLE COMBINATIONS

The Leslie 8240 Console Connector Kit connects Hammond consoles that use a Hammond Model 10 speaker to a single Leslie speaker. The kit includes a console connector, a Tremolo control, and an Echo control. The Echo control enables the organist to play through the Hammond Model 10 speaker, through the Leslie, or through both. The kit also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	015644	1 Tremolo Control	
1 6 Conductor Cable	017277	015594	brown
1 Instructions	035956	015602	ebony
2 Wire Nuts	028076	015610	ivory
1 Oiler	053025		
5 Insulated Staples	028464	1 Echo Control	
2 Screw, 8 x 1/2	029132	024240	brown
4 Screw, 6 x 1/2	029124	024232	ebony
		024224	ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual through the knee panel into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the knee panel just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Connect the pot cord from the Tremolo Control to the console connector using the wire nuts provided. (See "A" on Fig. 1).
5. Remove and discard the jumper plug from the echo socket on the connector chassis. Plug the Echo switch cable into this socket.
6. Remove the plug from the "tone cabinet" socket on the console amplifier and plug it into the socket marked "Main" on the connector chassis.
7. Plug the connector chassis cable into the "tone cabinet" socket on the console amplifier.
8. Move the tone cabinet switch on the console amplifier to the "tone cabinet" position. (See "8" on Fig. 1).

9. Plug the Leslie speaker cable into the socket marked "Leslie" on the connector chassis.
10. Set the Leslie tone cabinet volume control at "4".
11. Depress the swell control to maximum and fully extend all drawbars. Sound one chord and one pedal note together. At the same time adjust the console connector volume control until some distortion is heard, then back the control off until the distortion is eliminated.
12. Adjust the Leslie "tone cabinet" volume as outlined in the Owner's Manual, and set the console connector tone control to the desired brilliance. The installation is now complete.

Control Switch Parts List:

Echo Control

Echo Switch Case

029199 brown

029207 ebony

029215 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown

048074 ebony

Switch Retainer (2 req'd) 048116

Switch Only 029173

7-Pin Plug 029223

Tremolo Control

Tremolo Switch Case

012260 brown

012278 ebony

012286 ivory

Switch Case Cover

048702 brown

048710 ebony

048728 ivory

Switch Knob

048066 brown

048074 ebony

Switch Retainer (2 req'd) 048108

Switch Only 042911

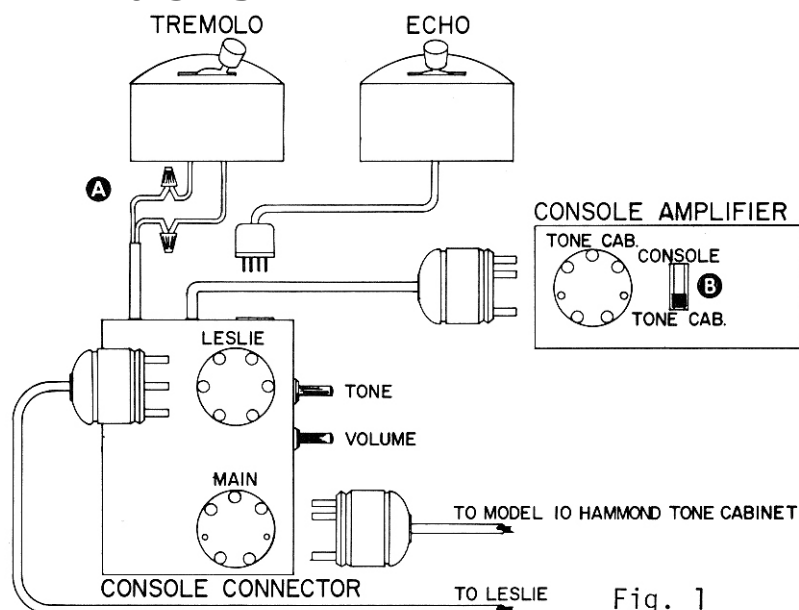


Fig. 1

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

