

LESLIE CONSOLE CONNECTOR KIT 9000
INSTALLATION INSTRUCTIONS

FOR USE WITH: HAMMOND Models: B-2, B-3, C-2, C-3, RT-2, RT-3
LESLIE 900 Speaker

MULTIPLE SPEAKER INSTALLATION: For complete information, see the service manual of the specific model LESLIE Speaker to be added.



CONTENTS OF KIT:

1 Console Connector	042440	1 Reverb Control	
1 Extension Cable	042432	brown	042564
1 9-Conductor Cable	021600	ebony	042572
1 Instructions	042473	ivory	042580
10 Insulated Staples	028464		
1 Oiler	053025	1 Tremolo Control	
2 Screws, 8 x 1/2	029132	brown	042606
6 Screws, 6 x 1/2	029124	ebony	042614
10 Wire Nuts	028076	ivory	042622
2 Screws, 8 x 1/2	042408		
		1 Echo Control	
		brown	032243
		ebony	032250
		ivory	032268

TO INSTALL THE KIT:

1. Mount the Echo, Tremolo, and Reverb control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Connect the three wires from the REVERB control and the RED, WHITE, and BLACK TWISTED wires from the connector chassis using the wire nuts provided. MATCH COLORS. (See "A" on Fig. 1).
5. Connect the three wires from the TREMOLO control and the three JACKETED wires from the connector chassis using the wire nuts provided. MATCH COLORS. (See "B" on Fig. 1).
6. Connect the four wires from the ECHO control and the four JACKETED wires from the connector chassis using the wire nuts provided. MATCH COLORS. (See "C" on Fig. 1) .

7. Remove the screw from the locking clamp securing the "DOWN TUBE" nearest the console junction box. Slide the tube up approximately three inches. (See "D" on Fig. 1) .
 8. Remove the two side screws and loosen the two top screws of the extension chassis. Remove the end plate from the chassis body. (See Fig. 2).
 9. Guide the existing console wires through the slot in the extension chassis. (See "E" on Fig. 2).
 10. Drop a pull string through the "DOWN TUBE" and tie it around the extension cable plug. (See "F" on Fig. 2) .
 11. Pull the extension cable up the tube and into the "TONE GENERATER" section of the console. Insert the plug into the socket on the connector chassis. (See "G" on Fig. 1).
 12. Connect the BLUE and GRAY extension cable wires to the 117VAC terminals behind the protective cover on the console pre-amp. (See "H" on Fig. 1) .
 13. Fit the "DOWN TUBE" into the extension chassis and reassemble the chassis. Mount the chassis using the "BRONZED" wood screws provided. (See Fig. 2).
 14. Connect the BLACK connector wire to the "GND" terminal on the console pre-amp. (See " I" on Fig. 1) .
 15. Remove the RED and BLACK wires from the two "G" terminals on the console pre-amp and connect them to the two screw terminals on the connector chassis. (See "J" on Fig. 1).
 16. Connect the two RED connector wires to the two "G" terminals on the console pre-amp. (See "K" on Fig. 1) .
- NOTE: Terminals in steps 12 and 14 - 16 may be solder-type terminals. If this is the case remove the spade lugs from the connector wires and solder the wires to the terminals.
17. Plug the Leslie Speaker cable into the socket on the extension chassis.
 18. Adjust the volume as outlined on the speaker back card and in the Leslie Service Manual. The installation is now complete.

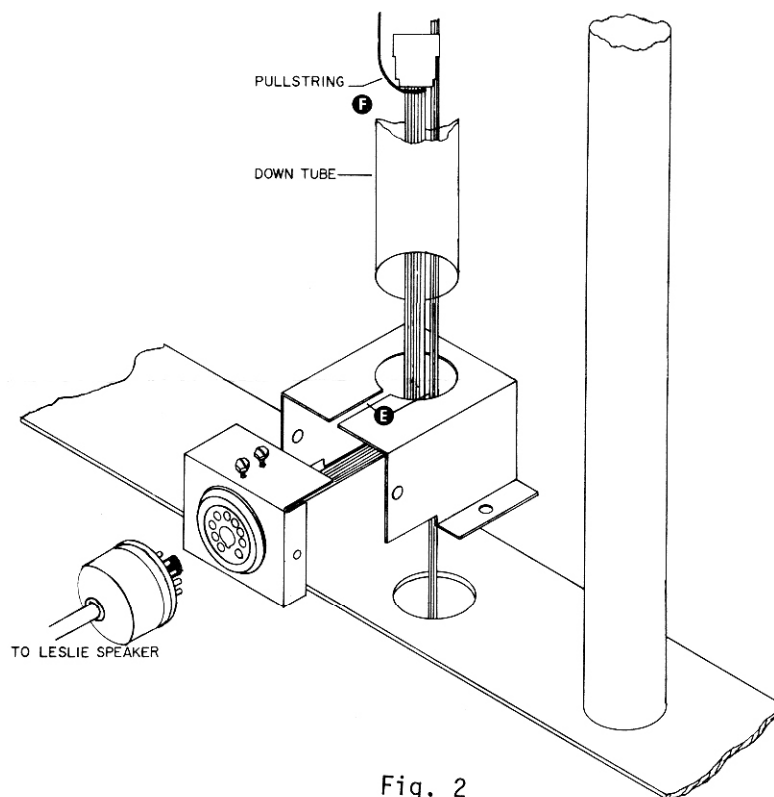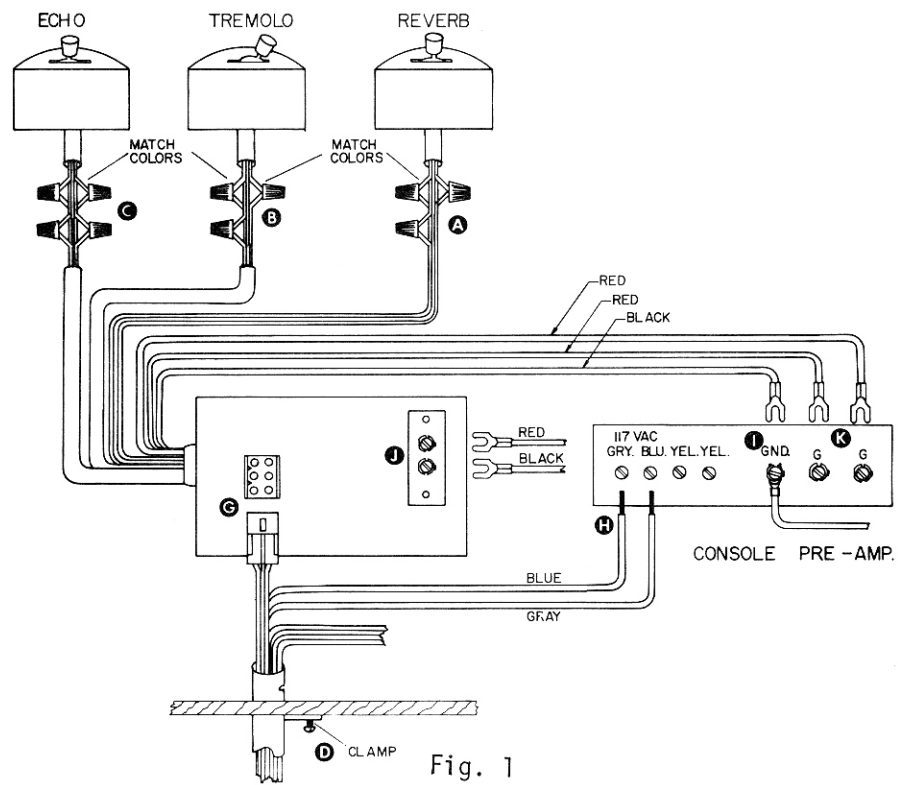

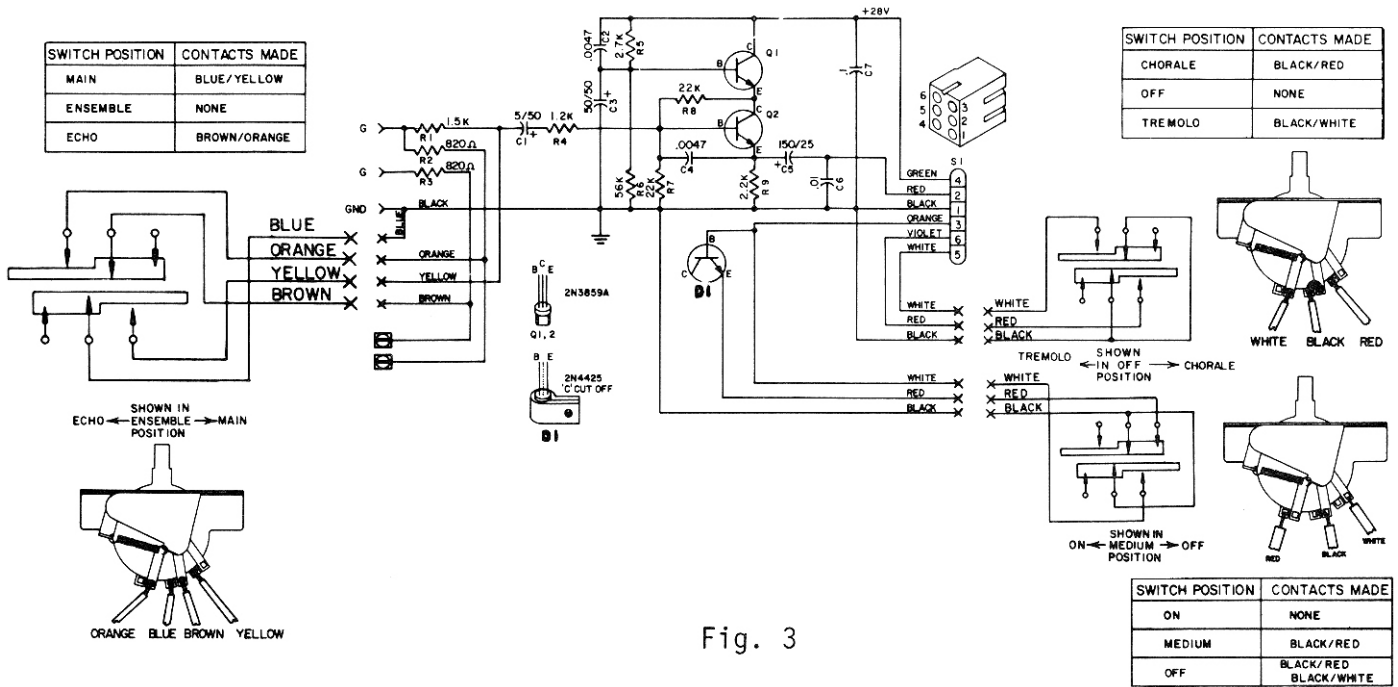


Fig. 3

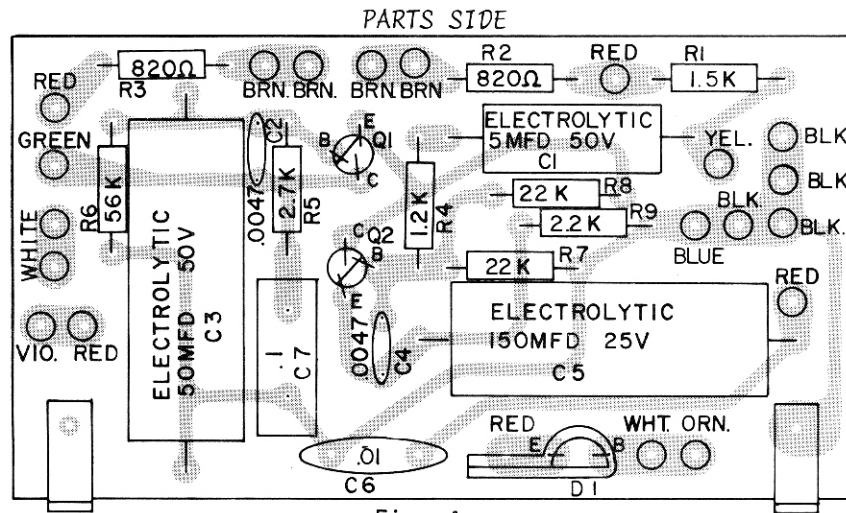


Fig. 4

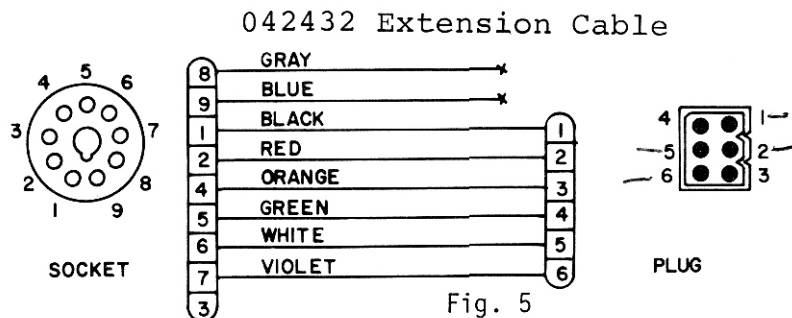


Fig. 5

PARTS LIST

CONSOLE CONNECTOR CONSOLE ADAPTER

Chassis	042390	R5	042549
Circuit Assy	042457	R6	024133
S1	042119	R7, R8	028530
S1, Insert	023556	R9	028571
C1	028589	Q1, Q2	061366
C2, C4	028431	D1 Diode,	059452
C3	025262	Zener	
C5	031294	042432 Extension	
C6	060467		
C7	022251	Chassis Body	042374
R1	022277	Chassis End	042382
R2, R3	028373	S1	028837
R4	018036	P1	023259
		P1 Insert	023309

ECHO CONTROL TREMOLO CONTROL REVERB CONTROL

Echo Switch Case		Tremolo Switch Case		Reverb Switch Case	
brown	029199	brown	040543	brown	040576
ebony	029207	ebony	040550	ebony	040584
ivory	029215	ivory	040568	ivory	040592
Switch Case Cover		Switch Case Cover		Switch Case Cover	
brown	048702	brown	048702	brown	048702
ebony	048710	ebony	048710	ebony	048710
ivory	048728	ivory	048728	ivory	048728
Switch Knob		Switch Knob		Switch Knob	
brown	048066	brown	048066	brown	048066
ebony	048074	ebony	048074	ebony	048074

Switch Retainer (2)	048116	Switch Retainer (2)	048116	Switch Retainer (2)	048116
Switch Only	010249	Switch Only	010249	Switch Only	010249

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie Speaker dealer. Orders should include part numbers shown above.