LESLIE 9055 CONSOLE CONNECTOR KIT INSTALLATION INSTRUCTIONS

For use with: ALL LOWREY Organ models with "EXT. LESLIE" socket LESLIE 900, 900U Speaker

MULTIPLE SPEAKER INSTALLATION: For complete information, see the service manual of the LESLIE Speaker to be added.

1 TDEL 101 0 COLUED 01


KIT CONTENTS:

		1 TREMOL	O CONTROL
1 Console Connector	054643	Brown	043281
1 9-Conductor Cable	021600	Ebony	043299
8 Insulated Staples	028464	Ivory	043307
4 Wood Screws, 6 x 1/2"	029124		
		1 REVERB CONTROL	
		Brown	043331
		Ebony	043349
		Ivory	043356

TO INSTALL THE KIT:

- **1.** Remove the Lowrey back cover.
- 2. Plug console connector into the "EXT. LESLIE" socket on the Lowrey amplifier.
- 3. Attach tremolo and reverb controls to the wooden rail in front of the lower manual of the Lowrey. Use the black oxide wood screws provided in the hardware kit.
- 4. If there is no hole in the underside of the lower manual, drill a 1" hole in the lower manual's underside near to the mounted tremolo and reverb controls.
- 5. Route tremolo and reverb control cables through the hole to the console connector. Attach cable plug housings to the matching red and white socket housings on the console connector.
- 6. Fasten cables to the organ with staples provided in the hardware kit.
- 7. Replace Lowrey back cover. Attach the 9-conductor cable provided to the open socket on the console connector and the 900 speaker power plug. Installation is now complete.

TO OPERATE THE 900 OR 900U SPEAKER: Depress LOWREY'S "ORGAN" and "LESLIE" tabs to the "Leslie" and "External" positions respectively. Then experiment with the other LOWREY controls to achieve the desired LESLIE effects.

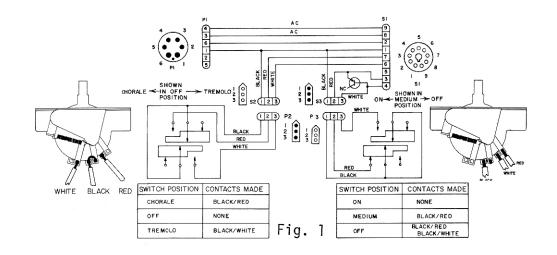

REVERB CONTROL PARTS LIST TREMOLO CONTROL PARTS LIST

Reverb Switch Case		Tremolo Sy	Tremolo Switch Case		
Brown	040576		Brown	040543	
Ebony	040584		Ebony	040550	
Ivory	040592		Ivory	040568	
Switch Case Cover		Switch Cas	Switch Case Cover		
Brown	048702		Brown	048702	
Ebony	048710		Ebony	048710	
Ivory	048728		Ivory	048728	
Switch Knob		Switch Knob			
Brown	048066		Brown	048066	
Ebony	048074		Ebony	048074	
Switch Retain	iner (2 req'd)	048116	Switch Ret	tainer (2 req'd)	048116
Switch Only		010249	Switch Only		010249
P3 Plug Hsing	P3 Plug Hsing, Red-Molex 043323 P2 P		P2 Plug Hsi	P2 Plug Hsing, NatMolex 0420	
P3 Insert, Female (3 req'd)		023556	P2 Insert, I	P2 Insert, Male (3 req'd)	

MOLEX SOCKETS-CONSOLE CONNECTOR

S2	Socket Hsing, NatMolex	042077
S2	Insert, Female (3 req'd)	023556
S 3	Socket Hsing, Red-Molex	043265
S 3	Insert, Male (3 req'd)	023309

ORDERING PARTS;

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie Speaker dealer. Orders should include part numbers shown above.