

LESLIE 9278 CONSOLE CONNECTOR KIT FOR LOWREY CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 9278 Console Connector Kit connects Lowrey consoles to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	037655	1 Tremolo Control
1 Console Adapter	027086	012625 brown
1 6-Conductor Cable	017277	012633 ebony
1 Instructions	037721	012641 ivory
5 Insulated Staples	028464	
1 Oiler	053025	1 Echo Control
2 Screw, 8 X 1/2	029132	029397 brown
4 Screw, 6 X 1/2	029124	029405 ebony
		029413 ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Unplug the 6 pin "Speaker" plug from the console amplifier and plug it into the adapter socket. (See "B" on Fig. 1).
6. Plug the adapter into the "Speaker" socket on the console amplifier.
7. Fit the 5 pin adapter socket onto the plug marked "Console" on the connector chassis.(See "C" on Fig. 1).
8. Plug the Leslie Speaker cable into the socket marked "Leslie" on the connector chassis.

9. Follow the load setting instructions for the "8 OHM" position as outlined in the Leslie service manual.
10. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

PARTS LIST

Console Connector

T1	026047
C1	032359
Fuseholder	055178
Fuse	037671
Chassis Cover	026054
Chassis	011809
S3	029652
P2	025437
S4	060459
S5	029298

Console Adapter

P4	027854
S6	027847
S6 cap	013136
S2	029264
S2 cap	013136

Echo Control

Echo Switch Case

brown	029199
ebony	029207
ivory	029215

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048116

Switch Only

029629

5-Pin Plug

021238

Tremolo Control

Tremolo Switch Case

brown	012260
ebony	012278
ivory	012286

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048108

Switch Only

042911

2-Pin Plug

029165

Ordering Parts:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

