

LESLIE 9279 CONSOLE CONNECTOR KIT FOR SINGLE-CHANNEL CONSOLES

See Leslie Price Sheet For Speaker-Console Combinations

The Leslie 9279 Console Connector Kit connects any Single-Channel console to a single Leslie speaker. The kit includes a console connector, a Tremolo control switch, and an Echo control to allow the organist to play through the console speakers, through the Leslie, or through both. It also contains all the hardware necessary for this installation.

CONTENTS OF KIT:

1 Console Connector	037655	1 Tremolo Control
1 Console Adapter	027094	012625 brown
1 6-Conductor Cable	017277	012633 ebony
1 Instructions	037705	012641 ivory
5 Insulated Staples	028464	
1 Oiler	053025	1 Echo Control
2 Screws, #8 x1/2	029132	029397 brown
4 Screws, #6 x1/2	029124	029405 ebony
		029413 ivory

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 7/8" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Connect the black adapter lead to any ground point on the console amplifier. (See " A " on Fig. 1) .
6. Cut the "SIGNAL" side of the console speaker leads. Strip both ends 1/4 inch. connect the amplifier end of the lead to the RED adapter lead using the wire nut provided. (See "B" on Fig. 1) .
7. Connect the speaker end of the lead to the Green adapter lead using the wire nut provided. (See "B" on Fig. 1).

8. Connect the BLUE and GRAY adapter leads to a SWITCHED AC source, using the wire nuts provided.
9. Fit the 5-pin adapter socket onto the plug marked "CONSOLE" on the connector chassis.
10. Plug the Leslie speaker cable into the socket marked "LESLIE" on the connector chassis.
11. Follow the load resistor setting instructions for the "8 OHM" position as outlined in the Leslie service manual.
12. Adjust the volume as outlined in the Leslie service manual. The installation is now complete.

PARTS LIST

Console Connector

T1	026047
C1	032359
Fuseholder	055178
Fuse	037671
Chassis Cover	026054
Chassis	011809
S3	029652
P2	025437
S4	060459
S5	029298

Console Adapter

S2	029264
S2 cap	013136

Echo Control

Echo Switch Case

brown	029199
ebony	029207
ivory	029215

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074
Switch Retainer(2)	048116
Switch Only	010249
5-Pin Plug	021238

Tremolo Control

Tremolo Switch Case



brown	012260
ebony	012278
ivory	012286

Switch Case Cover


brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074
Switch Retainer(2)	048108
Switch Only	042911
2-Pin Plug	029165

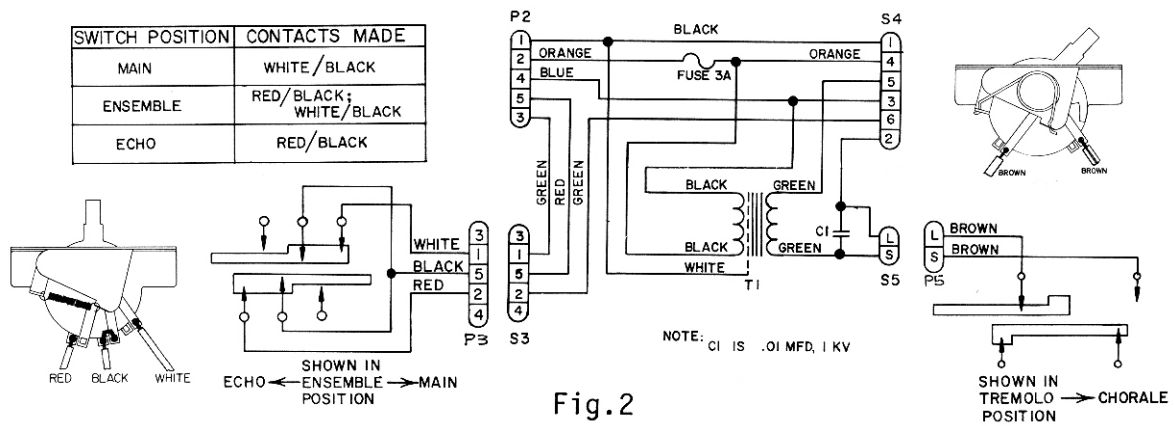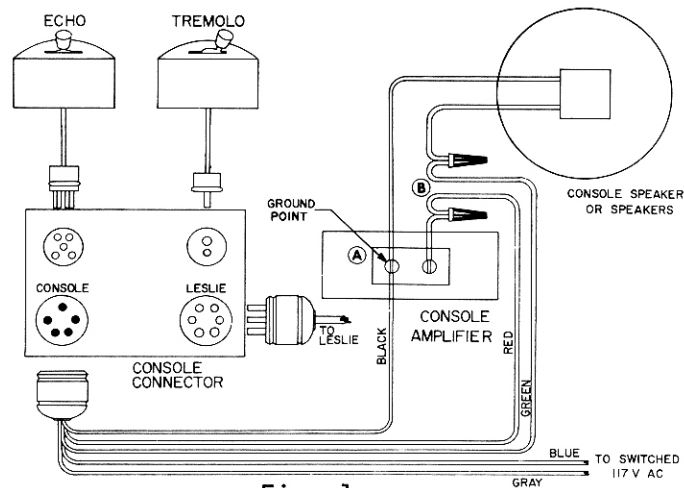

027094 Console Adapter

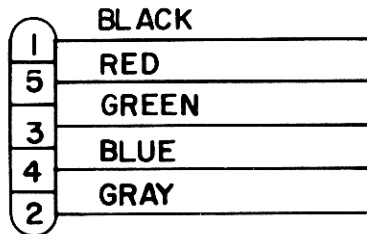

PLUG & SOCKET PIN LAYOUT

