

LESLIE 9502 CONSOLE CONNECTOR KIT INSTALLATION INSTRUCTIONS
FOR USE WITH: HAMMOND ORGAN SERIES E-100, K-100
LESLIE 825 SPEAKER

MULTIPLE SPEAKER INSTALLATION: For complete information, see the service manual of the specific model LESLIE Speaker to be added.

CONTENTS OF KIT:

1 Console Connector	043075	1 Tremolo Control	
1 Console Adapter	042754	brown	043281
1 7 to 5 Adapter	062091	ebony	043299
1 9-Conductor Cable	021600	ivory	043307
1 Instructions	044602		
8 Insulated Staples	028464	1 Echo Control	
1 Oiler	053025	brown	042200
2 Screw, 8 X 1/2	029132	ebony	042218
4 Screw, 6 X 1/2	029124	ivory	042226

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 1" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo cables into the proper sockets on the connector chassis.
5. Remove the 3-CKT plug (GREEN on the E-100, WHITE on the K-100) from the "SPEAKER" socket on the console amplifier and plug it into the adapter socket. (See "A" on Fig. 1 & 2) .
6. Insert the 3-CKT adapter plug into the "SPEAKER" socket on the console amplifier. (See "B" on Fig. 1&2).
7. Insert the 5-pin adapter plug into the "TONE CABINET" socket on the console amplifier. (See "C" on Fig. 1 & 2) .

NOTE. On some models this socket may have 7 contacts. If this is the case, use the 7 to 5 adapter provided.

8. Insert the 6-CKT adapter plug into the socket on the connector chassis.
9. Plug the Leslie speaker cable into the 6-contact socket on the connector chassis.
10. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR

Chassis	043059
Cover	061960
Fuseholder	055178
Fuse	031476
Q1	033563
S1	061713
S2	043265
S3	042077
S4	042119
S5	042093
Insert, female	023556
Insert, male	023309
S7	029264

CONSOLE ADAPTERS

	<u>042754</u>
P2	023259
P2 Insert	023309
P4	013060
P5	019927
P5 Insert	010397
S5	019919
S5 Insert	010421
	<u>062091</u>
P7	024752
Sleeve	029272

ECHO CONTROL TREMOLO CONTROL

Echo Switch Case

brown	029199
ebony	029207
ivory	029215

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048116

Switch Only

010249

4 CKT Plug

042101

Insert

023309

Tremolo Switch Case

brown	040543
ebony	040550
ivory	040568

Switch Case Cover

brown	048702
ebony	048710
ivory	048728

Switch Knob

brown	048066
ebony	048074

Switch Retainer (2)

048116

Switch Only

010249

3 CKT Plug



042085


Insert

023309


ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer. Orders should include part numbers shown above.

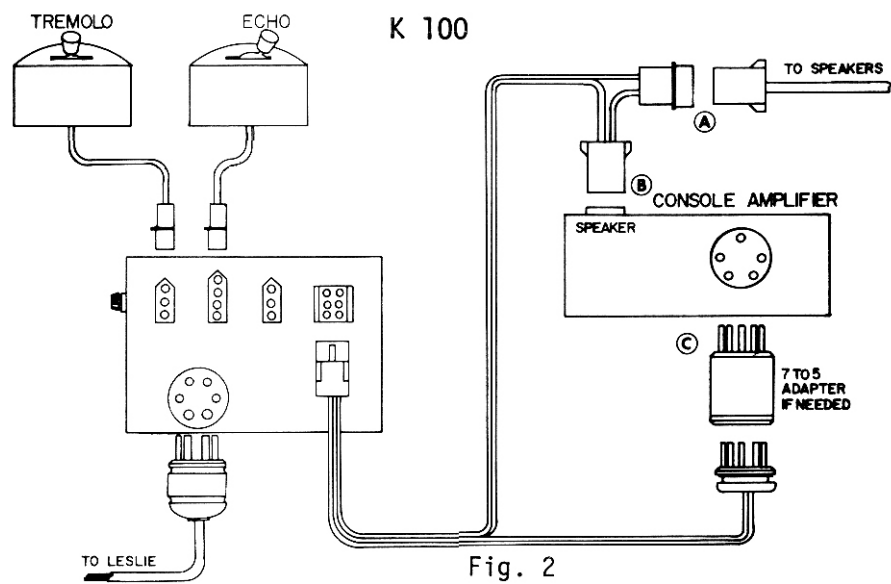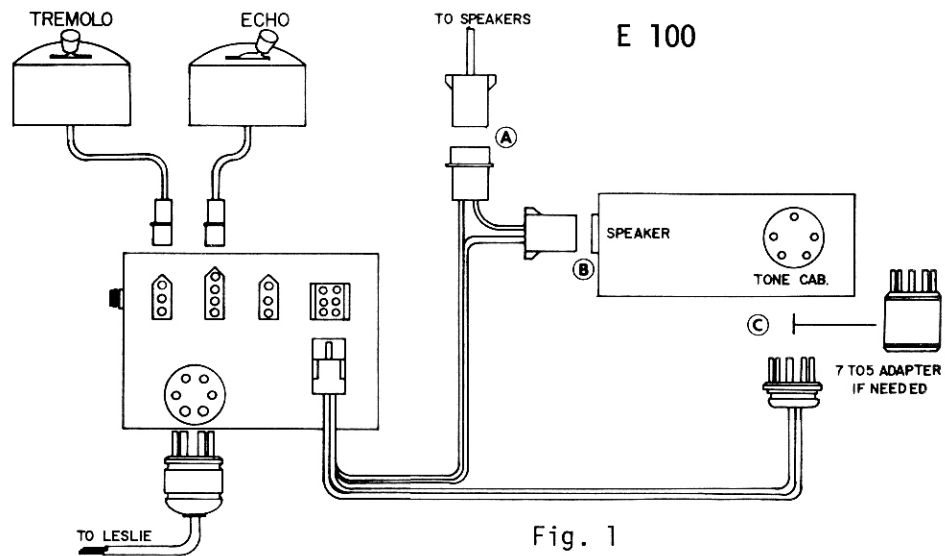


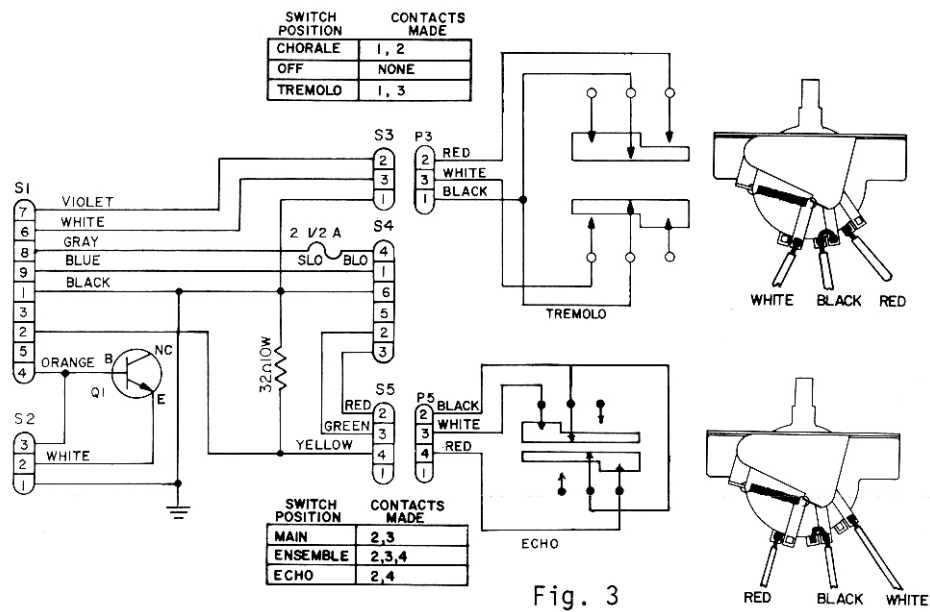

042754 Adapter

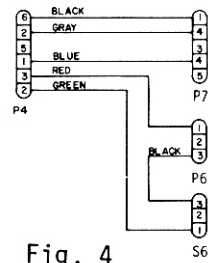

062091 Adapter

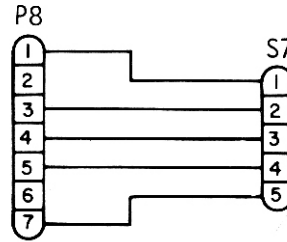

Plug & Socket Pin Layout

