

CONSOLE CONNECTOR KIT 9520 INSTALLATION INSTRUCTIONS
FOR USE WITH: LESLIE Speaker Model 825,760, 770
HAMMOND T-100, T-200,T-300 Series Organs

MULTIPLE SPEAKER INSTALLATION. For complete information, see the service manual of the specific model LESLIE Speaker to be added.

CONTENTS OF KIT:

1	Console Connector	043075	1	Tremolo Control	
1	Console Adapter	042044		brown	043281
1	9-Conductor Cable	021600		ebony	043299
1	Instructions	044636		ivory	043307
8	Insulated Staples	028464			
1	Oiler	053025	1	Echo Control	
2	Screw, 8 X 1/2	029132		brown	042200
4	Screw, 6 X 1/2	029124		ebony	042218
				ivory	042226

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 1" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Remove the GREEN wire connecting the headphone jack to the console speakers and connect it to the RED adapter wire. Insulate with plastic sleeve provided. (See "A" on Fig. 1) .

NOTE: On the T-100 this wire is connected directly to the left-hand console speaker. On the T-200, T-300 this wire is connected to a terminal on the crossover network.

6. Connect the GREEN adapter wire to the terminal previously occupied by the GREEN headphone jack wire. (See "A" on Fig. 1).
7. Insert the adapter plug into the "TONE CAB" socket on the console amplifier. (See "B" on Fig. 1) .

8. Insert the 6-CKT adapter plug into the 6-CKT socket on the: connector chassis.
9. Plug the Leslie speaker cable into the 9-contact socket on the connector chassis.
10. Adjust the volume as outlined in the Leslie Service Manual The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR

Chassis	043059
Cover	061960
Fuseholder	055178
Fuse	031476
Q1	033563
Sl	061713
S2	043265
S3	042077
S4	042119
S5	042093
Insert female	023556
Insert, male	023309

CONSOLE ADAPTER

P4	023259
P4 Insert	023309
P8	024752

ECHO CONTROL

Echo Switch Case	Tremolo Switch Case
brown	029199
ebony	029207
ivory	029215
Switch Case Cover	Switch Case Cover
brown	048702
ebony	048710
ivory	048728
Switch Knob	Switch Knob
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	010249
4 CKT Plug	042101
Insert	023309

brown	040543
ebony	040550
ivory	040568
brown	048702
ebony	048710
ivory	048728
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	010249
3 CKT Plug	042085
Insert	023309

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer. Orders should include part numbers shown above.

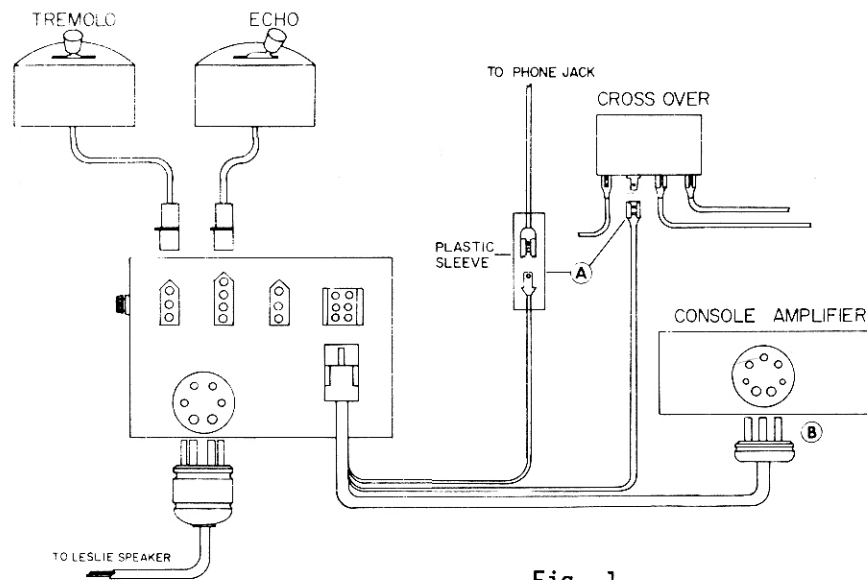


Fig. 1

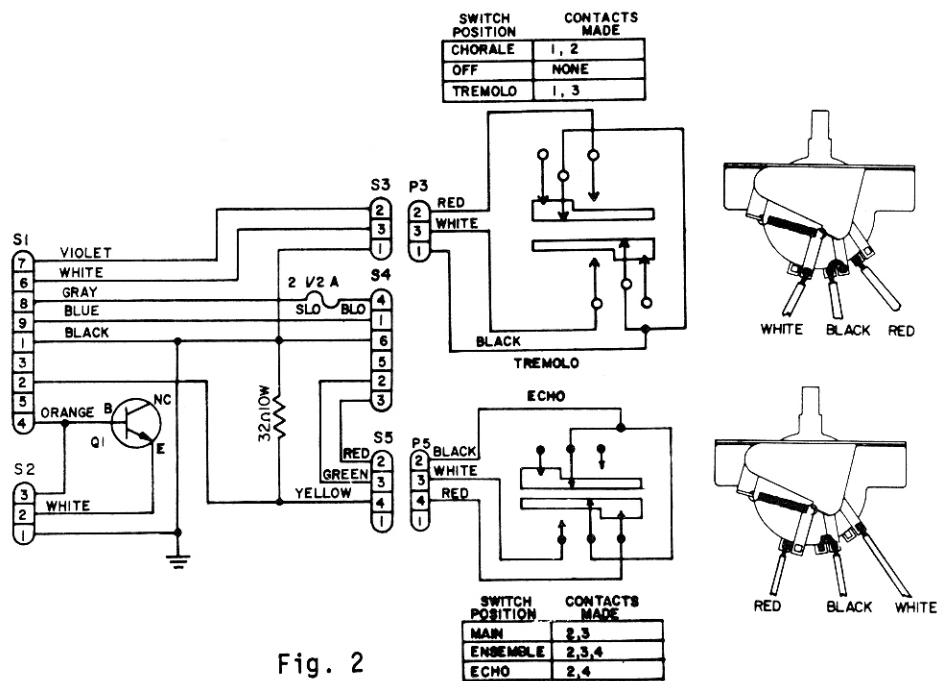


Fig. 2

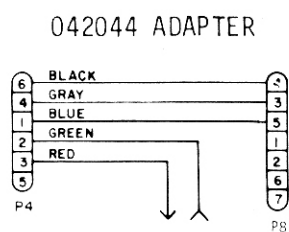


Fig. 3

Plug & Socket Pin Layout

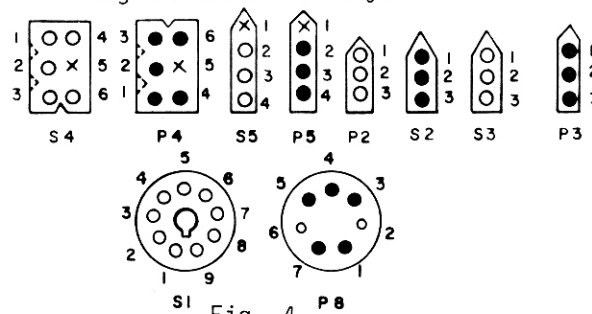


Fig. 4