

The Five Station Control Center has been designed to allow the dealer to demonstrate up to five Leslie Speakers from one organ console by merely selecting switches. The control center will work only with organs that are normally connected to a Leslie Speaker with one of the following console connector kits -7271 -7278- 9271 -9278. Use kit instructions for installation.

INSTALLATION

1. If the console is not already equipped with a Console Connector, install the appropriate kit.
2. Remove the Five Station Control Center from its shipping container and attach the legs.
3. Plug the Control Center cable into the 6-contact Leslie socket at the console Use the 037978 adapter furnished. (See Figs. 1 and 2)
4. Plug the cables from the Leslie tone cabinets into the sockets on the Control Center junction box.
5. Plug the Control Center cord into any polarized 234V 50 Hz receptacle which can supply 3 Amperes. unit is now ready to operate.

OPERATION:

Each of the illuminated speaker switches changes amber to green as its speaker is selected to play; the Tremolo switch is blue in the 0" position and white in the "Chorale" position. The speakers and Control Center are switched on and off automatically with the console through an internal circuit. The unit is protected by a 3 ampere fuse, and a parts list and schematic are shown should any service be necessary.

ORDERING PARTS

Standard hardware, connectors, and electronic components should be purchased locally. Orders should include part numbers shown.

REPLACEMENT PARTS LIST

010322	Cap and cable clamp	011254	Relay, tremolo
060467	Capacitor .01 Mfd 1 KV disc ceramic	010934	Resistor, 8 ohm 10W
030353	Fuse, 6 amp.	012583	Switch, console
055178	Fuseholder	012591	Switch, echo speaker
011528	Leg assembly	012542	Switch, Tremolo -Chorale
012757	Pilot light #1768	030320	Transformer, 6 volt
013060	Plug, 5 pin	037978	Adapter, 6 to 5
030338	Relay, power	061754	Demo-Switch Block

Leslie Speaker Models 120, 120C 125, 225

connect to console connector kits 7271 and 7278.

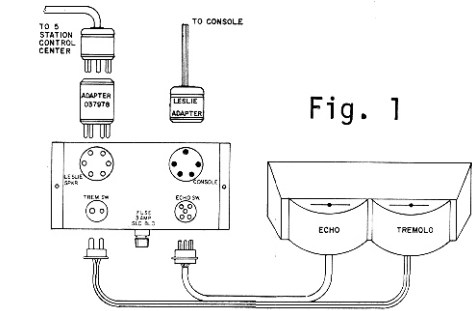


Fig. 1

Leslie Speaker models 145 - 147 - 247

connect to console connector kits 9271 and 9278.

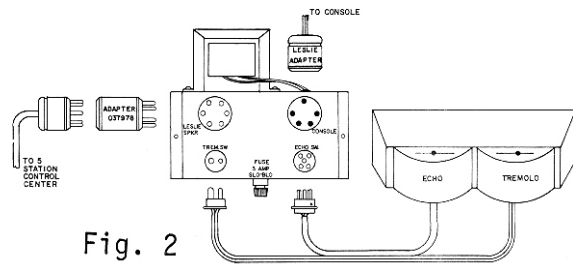


Fig. 2

