

038398 LESLIE BRAKE ACCESSORY

Brown 034256 Ebony 038547 Ivory 038554

For LESLIE 122, 142, 222 Series Speakers

The LESLIE Brake Accessory is designed for use with two-speed LESLIE speakers and enables the organist to run the rotors at the fast (tremolo) speed, the slow (chorale) speed or bring the rotors to a complete stop.

CONTENTS OF KIT:

1 6C5T Thermal Relay	033845	1 Brake Interceptor
1 Adapter Cable	029843	brown 035444
1 Instructions	038398	ebony 038281
2 Brackets	033803	ivory 038323
1 Cork Insulation	033811	
2 Screws, 6x1/2", Blk. Oxide	029124	
6 Insulated Staples	028464	

TO INSTALL THE KIT:

1. Remove the original LESLIE tremolo control switch from the front of the organ, and disconnect the control cable from the tremolo terminal box inside the organ by removing the two wire nuts.
2. Mount the brake control switch to the front of the organ in the same location as the original control.
3. Pass the control cable inside the console and connect the two-conductor cable to the terminal box using the two wire nuts previously removed.
4. Route the long cable to the LESLIE speaker.
5. Mount the small angle brackets on the brake interceptor. (See "E" on Fig. 1.)
6. Apply the cork insulation to the backside of the brake interceptor. (See "C" on Fig. 1.)
7. Remove and discard the jumper plug from the "BRAKE" socket on the LESLIE amplifier. Plug the brake adapter cable into this socket.
8. Fit the other end of the adapter cable onto the 5-pin plug of the brake interceptor.

NOTE: Instructions 5-9 are for Lo-boy type cabinets. For standard cabinets, omit instructions 5-9 and plug the brake interceptor directly into the "BRAKE" socket on the LESLIE amplifier.

9. Insert the Thermal Relay into the 9-pin socket on the brake interceptor.
Installation is now complete.

PARTS LIST:

BRAKE INTERCEPTOR

Chassis	011783
Cover	012195
P1	033738
S1	033746
Cable, 35'	068518
Cable, 7'	062232

Switch Case

Brown	013417
Ebony	013433
Ivory	013425

Switch Case Cover

Brown	048702
Ebony	048710
Ivory	048728

Switch Knob



Brown	048066
Ebony	048074

Switch Retainer (2)	048116
---------------------	--------


Switch Only	015412
-------------	--------

Ordering Parts:


Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers listed.

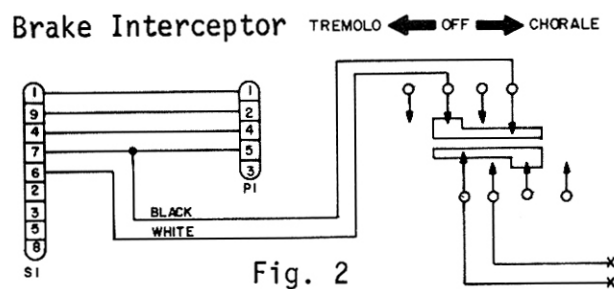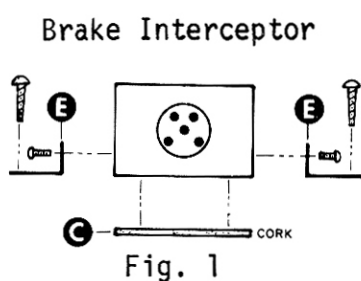

Thermal Relay

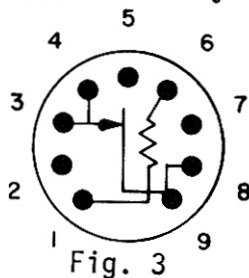

029843 Adapter

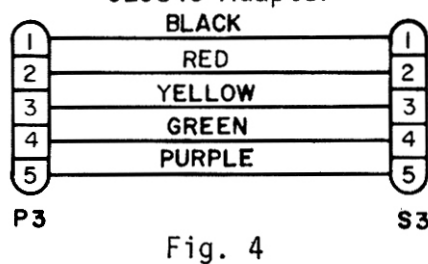

Plug & Socket Pin Layout

