

REVERB CONTROL KIT

Brown - 015255

Ebony - 015305

Ivory - 015313

INSTALLATION INSTRUCTIONS

- CAUTION

Due to the presence of electrical potential and the danger of moving mechanical parts, installation procedures or adjustments requiring work inside the LESLIE speaker cabinet or the organ console should be performed **ONLY BY** a service man authorized by the dealer or factory to perform such work.

1. Remove back section of speaker cabinet.
2. Remove small plug from REVERB SPEAKER socket.
3. Insert this plug into reverb kit jack (figure 1) and insert the plug from the kit into the REVERB SPEAKER socket on the speaker amplifier.
4. Route the reverb control kit cable along the same path as the main LESLIE speaker cable to the organ console.
5. Mount the reverb control unit under the keyboard, using the screws provided.
6. Staple the control kit cable to the speaker cabinet and the organ console, to prevent damage to the control kit.
7. Fasten the control kit cable and main cable together with the four cable ties provided.

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers listed.

Replacement Parts

048702	Case Cover, Brown	048074	Knob, Ebony
048710	Case Cover, Ebony	015438	Plug, speaker
048728	Case Cover, Ivory	028332	Resistor, 33 ohm 1 watt
029157	Cork, adhesive	015412	Switch
015396	Jack, phono type	015263	Switch Case, Brown
048066	Knob, Brown	015289	Switch Case, Ebony
015271	Switch Case, Ivory		

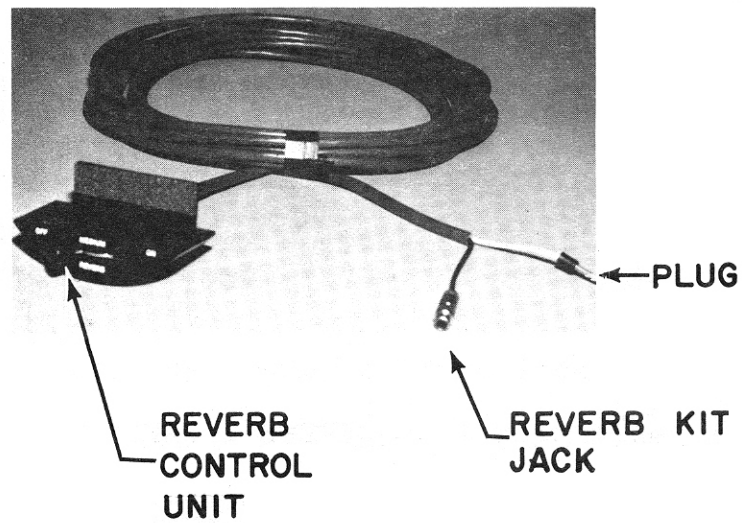 


Figure 1. Reverb Control Kit Content

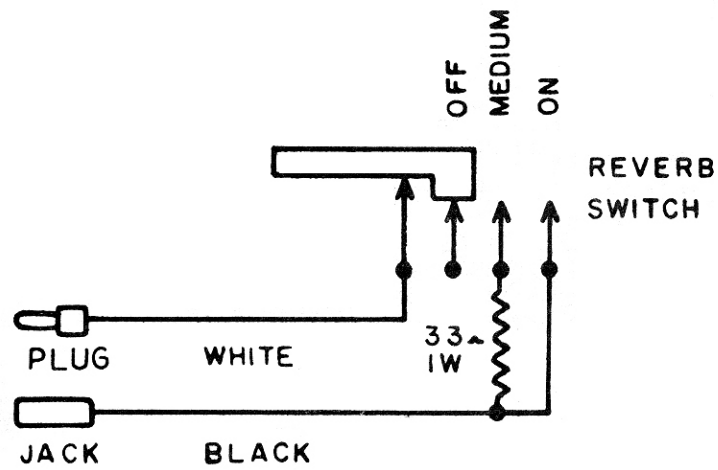 


Figure 2. Reverb Control Kit Schematic