 


CONSOLE CONNECTOR KIT

FOR HAMMOND ORGANS



CONTENTS OF KIT:

1 Console Connector	038208	1 Tremolo Control	
1 Console Adapter	042754	brown	042168
1 7 to 5 Adapter	062091	ebony	042176
1 6 Conductor Cable	017277	ivory	042184
1 Instructions	036913		
6 Insulated Staples	028464	1 Echo Control	
1 Oiler	053025	brown	042200
2 Screw, 8 x 1/2	029132	ebony	042218
4 Screw, 6 x 1/2	029124	ivory	042226

TO INSTALL THE KIT:

1. Mount the Echo and Tremolo control switches to the wooden rail in front of the lower manual using the wood screws provided.
2. Route the control cables under the lower manual, through the keyboard shelf, and into the amplifier section of the console. If no opening is provided, drill a 1" hole in the keyboard shelf just under the lower manual.
3. Mount the console connector chassis inside the console within reach of the adapter and control cables, using the wood screws provided.
4. Plug the Echo and Tremolo control cables into the proper sockets on the connector chassis.
5. Remove the 3-CKT plug (GREEN on the E-100, WHITE on the K-100) from the "SPEAKER" socket on the console amplifier and plug it into the adapter socket. (See "A" on Fig. 1 & 2).
6. Insert the 3-CKT adapter plug into the "SPEAKER" socket on the console amplifier. (See "B" on Fig. 1 & 2).
7. Insert the 5-pin adapter plug into the "TONE CABINET" socket on the console amplifier. (See "C" on Fig. 1 & 2).

NOTE: On some models this socket may have 7 contacts. If this is the case, use the 7 to 5 adapter provided.

8. Insert the 6-CKT adapter plug into the socket on the connector chassis.
9. Plug the Leslie speaker cable into the 6-contact socket on the connector chassis.
10. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.

ELECTRO ~~MUSIC~~ MUSIC

CBS Musical Instruments

A Division of Columbia Broadcasting Systems, Inc.

August 18, 1969

036913

INSTALLATION

E-100

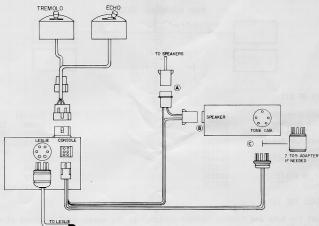


Fig. 1

K-100



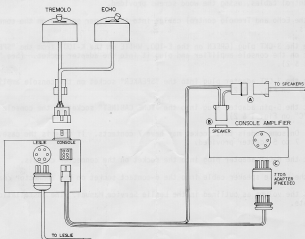


Fig. 2

SERVICE INFORMATION

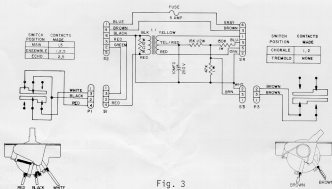

CIRCUIT BOARD PARTS SIDE

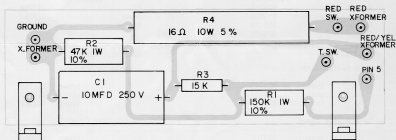

042754 Adapter



062091 Adapter



Plug & Socket Pin Layout

 


Fig. 7

PARTS LIST

CONSOLE CONNECTOR

Chassis	041921
T1	048025
C1	018093
R1	024117
R2	018457
R3	048157
R4	022343
S1	042093
S2	042119
S3	042077
Insert	023556
Circuit Assy	039032
Fuseholder	055178
Fuse	029280

CONSOLE ADAPTERS

	042754	
P2		023259
P2 Insert		023309
P4		013060
P5		019927
P5 Insert		010397
S5		019919
S5 Insert		010421
	062091	
P7		024752
S6		029264
Sleeve		029272

ECHO CONTROL

Echo Switch Case		
	brown	029199
	ebony	029207
	ivory	029215
Switch Case Cover		
	brown	048702
	ebony	048710
	ivory	048728
Switch Knob		
	brown	048066
	ebony	048074
Switch Retainer (2)	048116	
Switch Only	029629	
4-ckt Plug	042101	
Insert	023309	

TREMOLO CONTROL

Tremolo Switch Case		
	brown	012260
	ebony	012278
	ivory	012286
Switch Case Cover		
	brown	048702
	ebony	048710
	ivory	048728
Switch Knob		
	brown	048066
	ebony	048074
Switch Retainer (2)	048108	
Switch Only	042911	
3-ckt Plug	042085	
Insert	023309	

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.