



CONSOLE CONNECTOR KIT 8444

INSTALLATION INSTRUCTIONS

FOR USE WITH: HAMMOND Organ Models A100, M100, E100
LESLIE Speaker Models 125, 225, 145, 147, 247

KIT CONTENT

Console Connector Assembly	016352	Echo Control		
Adapter, 7 to 5	062091		brown	011882
Cable Assembly, 6-conductor,			ebony	011890
30-foot	017277		ivory	011908
Hardware Package	016535			
Screw, wood, 6 x 1/2,		Tremolo Control		
Phillips head (4)	029124		brown	024976
Screw, sheet metal,			ebony	024984
8 x 1/2, Phillips head (2)	029132		ivory	024992
Staple, insulated (6)	028464			
Wire nut (8)	028076	Oiler		053025

CAUTION: Due to the presence of electrical potential and the danger of moving mechanical parts, installation procedures or adjustments requiring work inside the LESLIE speaker cabinet or the organ console should be performed only by a service man authorized by the dealer or factory to perform such work.

INSTALLATION

CAUTION: DISCONNECT ORGAN POWER BEFORE PROCEEDING!

A100, M100 INSTALLATION

1. Attach the echo and tremolo controls to the wooden rail in front of the lower manual with the black oxide screws provided. Use the two mounting holes which best center the screws in the rail.
2. Remove the organ back and pass the control cables into the console by the following method:

Clip the red and green interceptor plugs and sockets off the echo-control cable and strip the wires 3/8". Push a small screwdriver over the felt dust seal between the lower manual and the knee panel. Push the cables through this opening into the console. From the back of the console, reach behind the tone generator and pull the cables through.

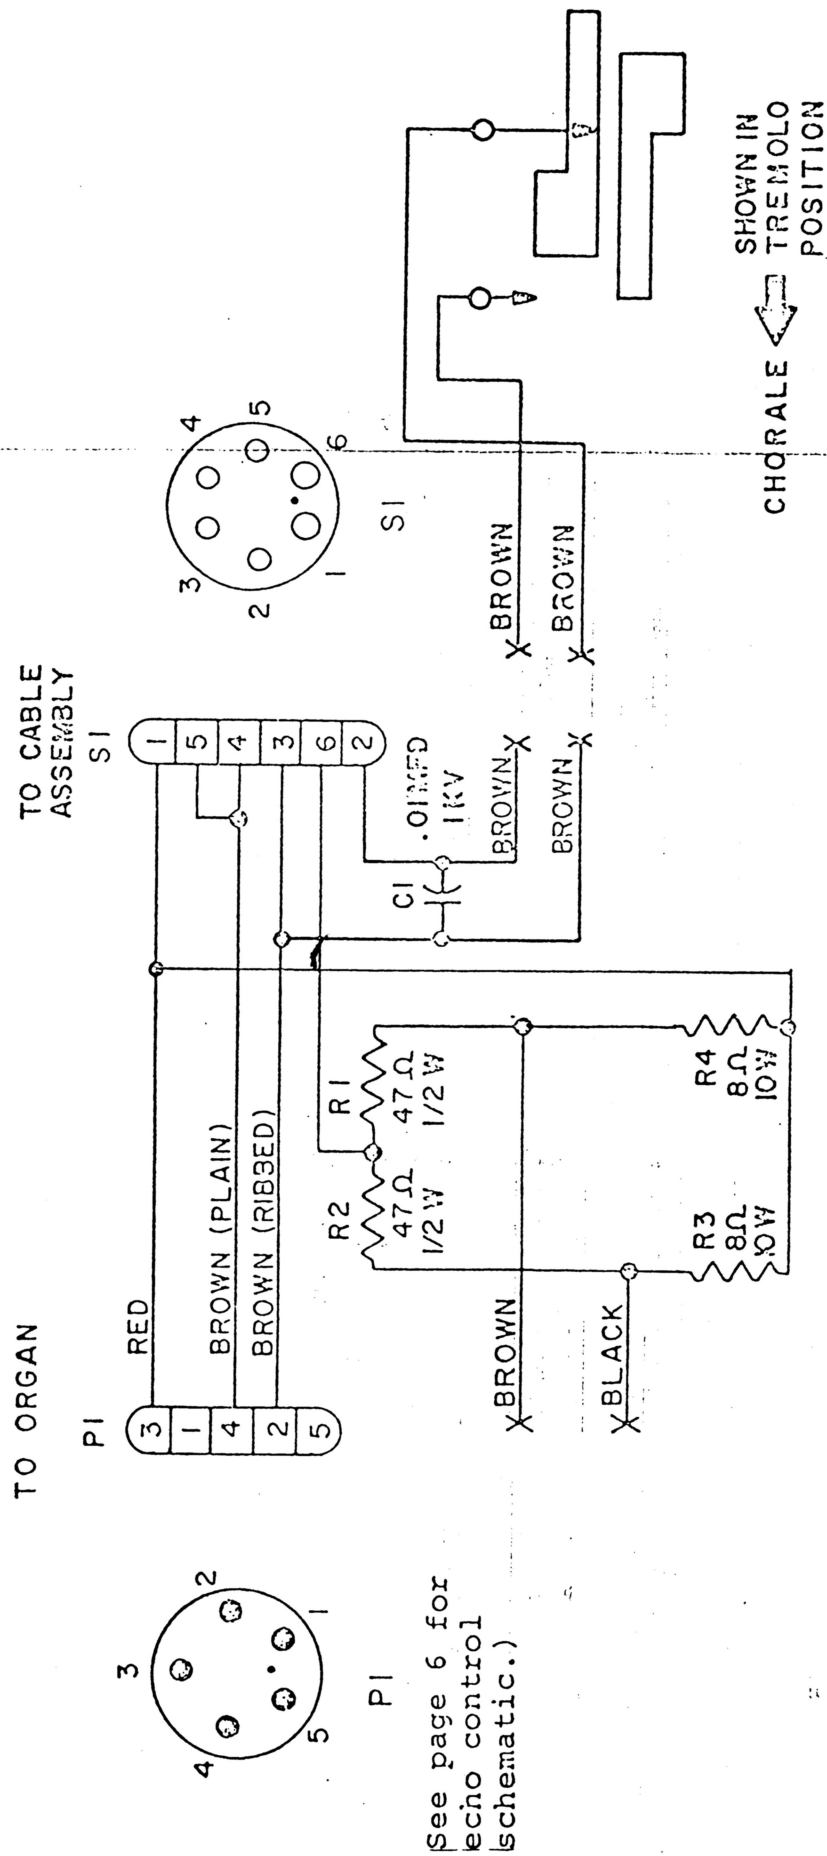


Figure 5. Schematic, Console Connector 016352 with Tremolo Control
(Plug and Socket Shown from Wire End)