


COMBO PRE-AMP II



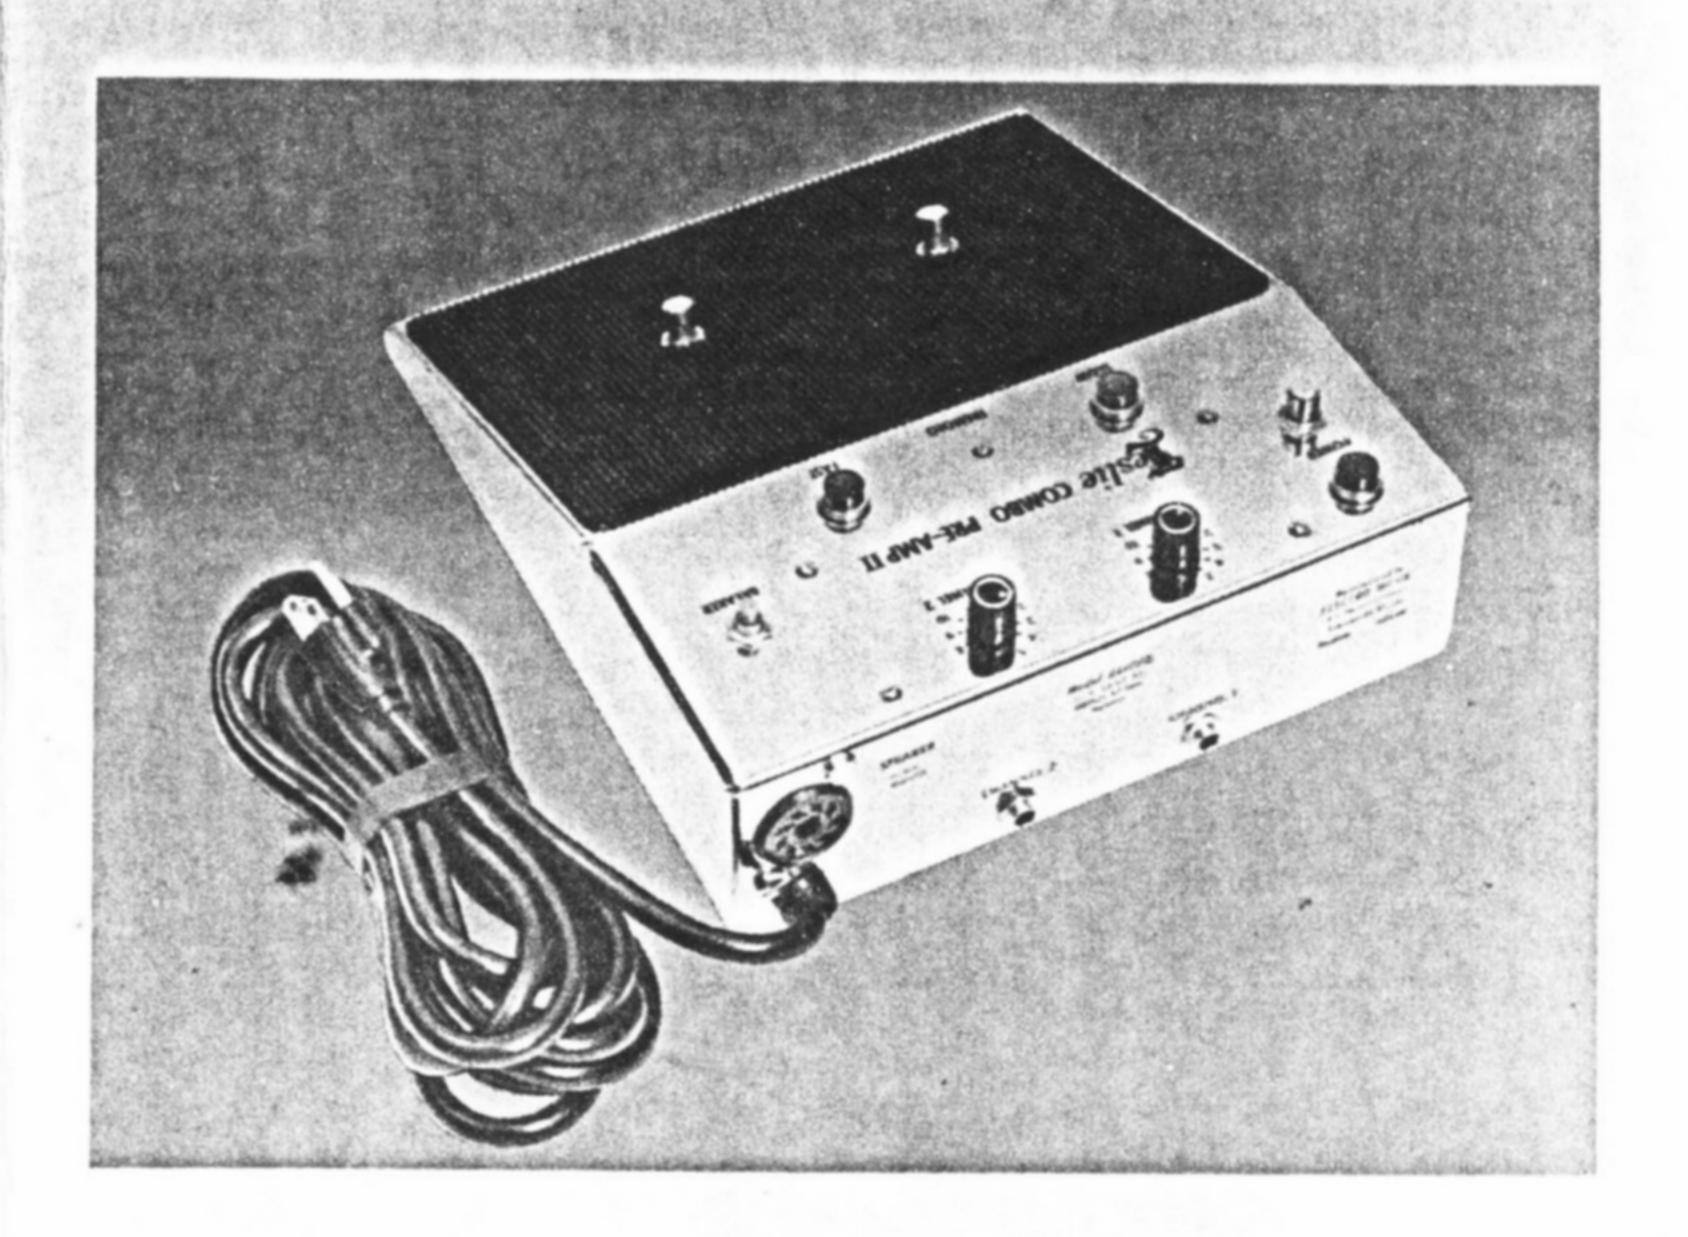

LESLIE ® COMBO PRE-AMP II

117 V, 50/60Hz 044370

234 V, 50/60Hz 044388

GENERAL

The Combo Preamplifier II is designed to accept, and provide with gain, the output from two separate sound sources such as a combo organ and guitar. Two input jacks are provided for this purpose on the rear of the chassis. They are identified as Channel 1 and Channel 2, and each one has its own volume control. (Some combo organs channel their lower and upper frequencies into two separate outputs and would therefore require the use of both of the Combo Preamps' inputs).

The two foot-operated switches are for the control of the Tremolo unit contained in the Leslie Model 825 Speaker System.

The main power ON-OFF switch has its own light indicator located near the top-left corner. This power switch controls the power to the Combo Pre-amp and to the Leslie Speaker. The power to the combo organ must be turned off at the organ console.

The small red button identified as "Breaker" is for the purpose of restoring the circuit in the event of a temporary overload.

The left-hand foot operated switch controls slow tremolo; the right-hand foot operated switch controls fast tremolo.

INSTALLATION

- 1. The Pre-amp should be located near the musician for his convenience of control.
- 2. Connect the output cable from the instrument to either Channel 1 or 2 input jack at the rear of the pre-amp.
- 3. Prepare the Leslie Speaker for operation as described in the owners manual.
- 4. Connect the nine-pin plug from the speaker cable into the nine contact socket at the rear of the pre-amp.
- 5. Plug the line cord into the nearest A.C. voltage outlet.
- 6. Push the "Power" switch to ON as indicated by the lighted red panel lamp.
- 7. Reduce the Leslie Speaker volume control to full CCW and then advance 1/3.
- 8. Play the loudest chord in the instrument and, while so doing, increase the volume at the Combo Pre-amp until distortion is heard and then reduce the volume by about 11/2 numbers.
- 9. While playing the same loud chord as in Step 8, slowly increase the volume at the Speaker until distortion is heard, and then reduce the volume by 1/2 numbers, or until distortion disappears.

SPECIFICATIONS:

DIMENSIONS: 11" deep, 10" wide, 3" high.

WEIGHT: 71/4 lbs. boxed.

ELECTRICAL: 117V, 50-60 Hz, or 234V, 50-60 Hz.


CONTROLS: Power on-off; 2 input volume controls; circuit breaker reset.

Two tremolo switches: Slow and Fast.


GUARANTEE: One year from date of purchase, covering both workman-

ship and materials.

LESLIE® COMBO PREAMP II PARTS IDENTIFICATION

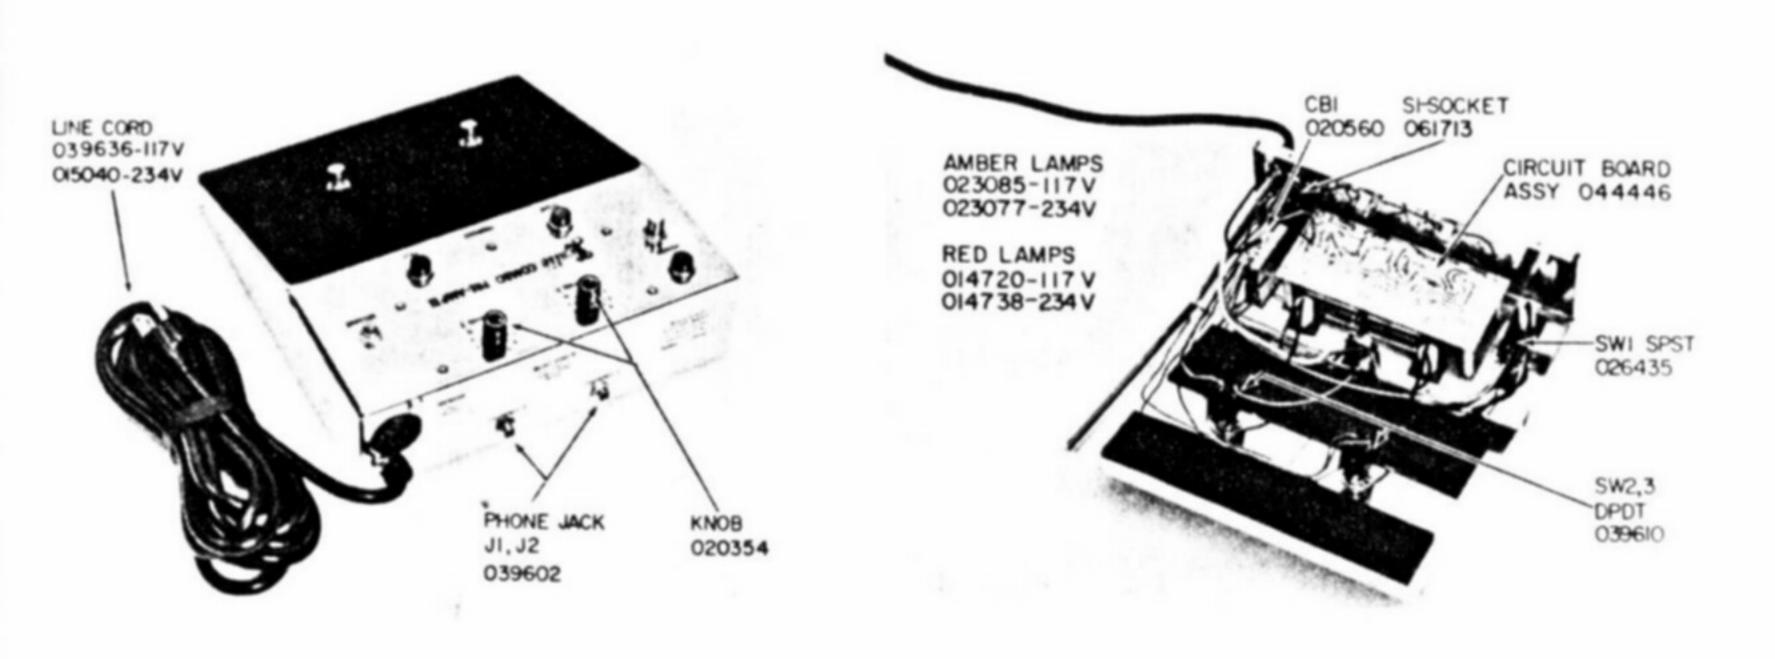


SCHEMATIC DIAGRAM

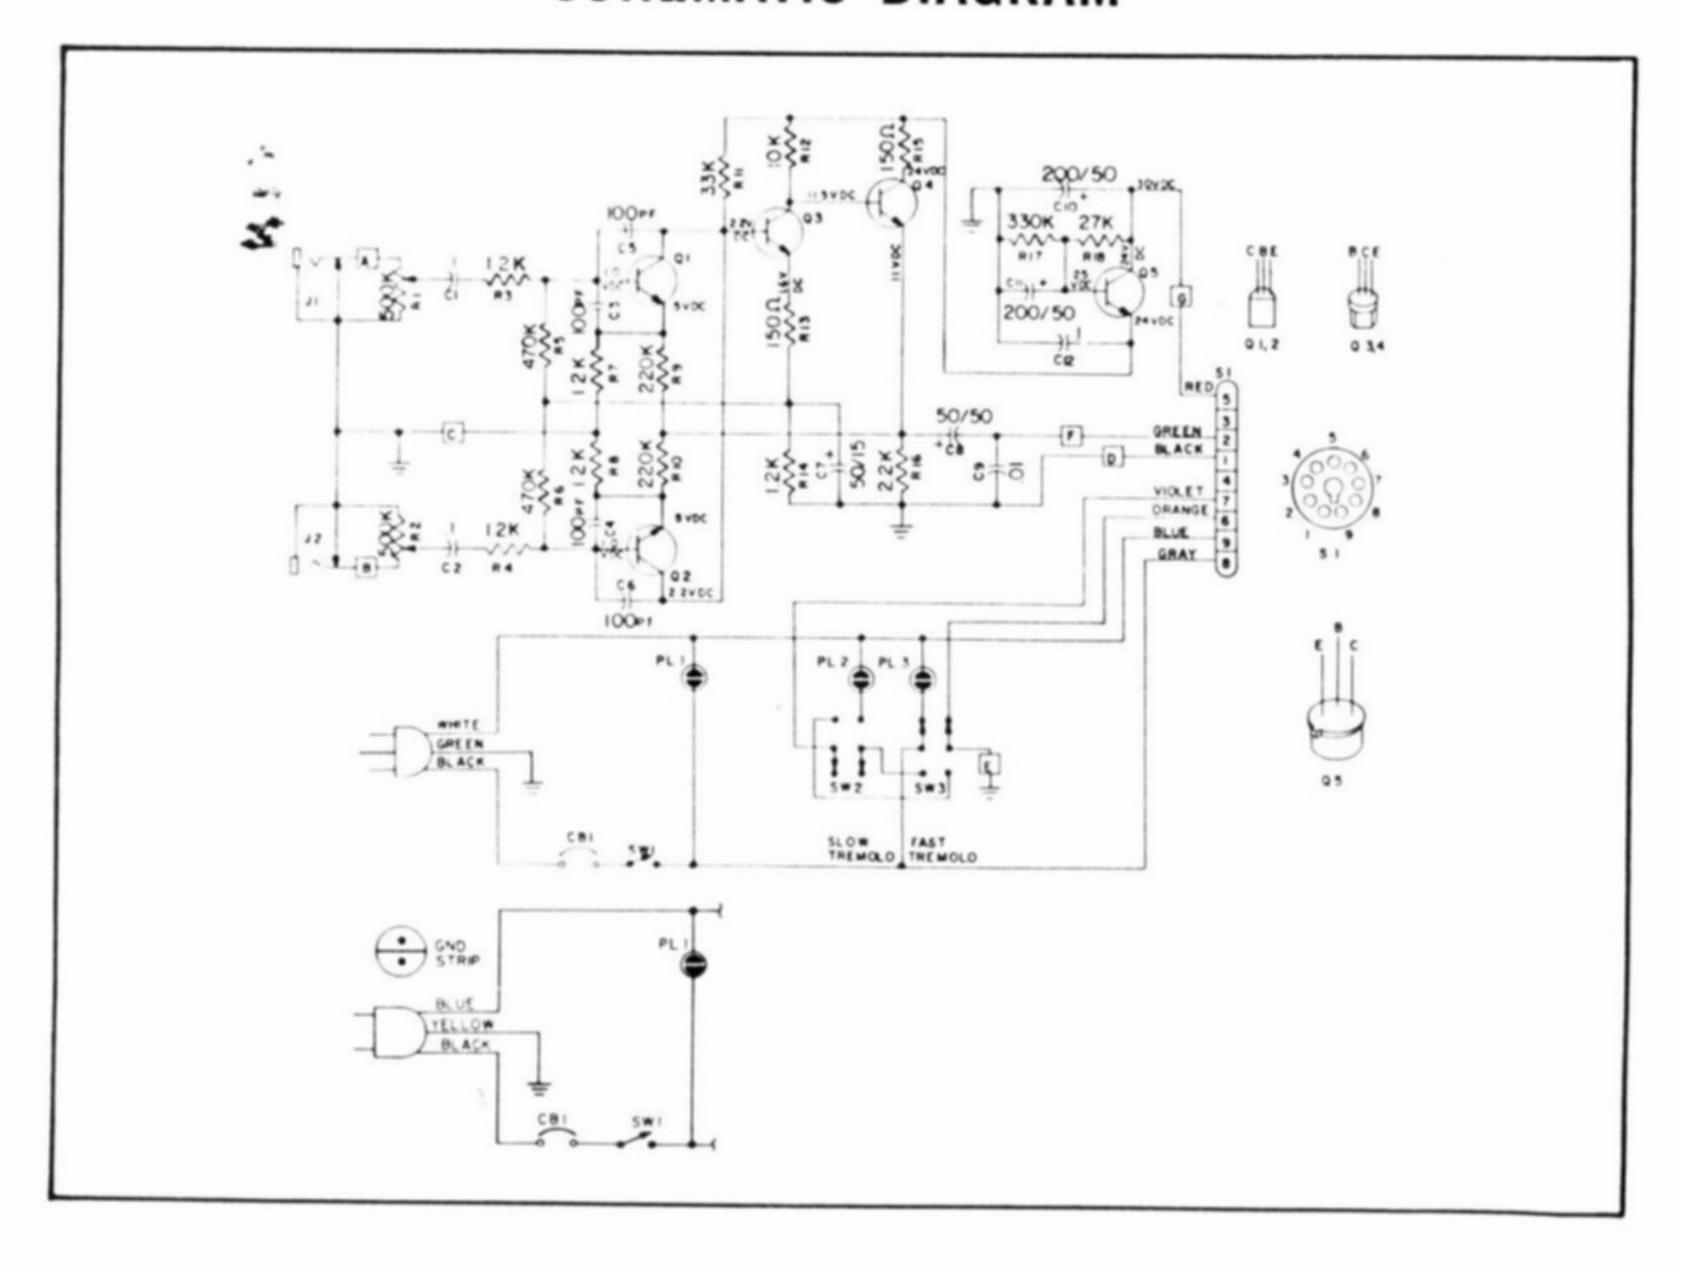

044446 CIRCUIT BOARD PARTS LOCATION

VIEW FROM FOIL SIDE

All resistors 1/2W, 10% UNO

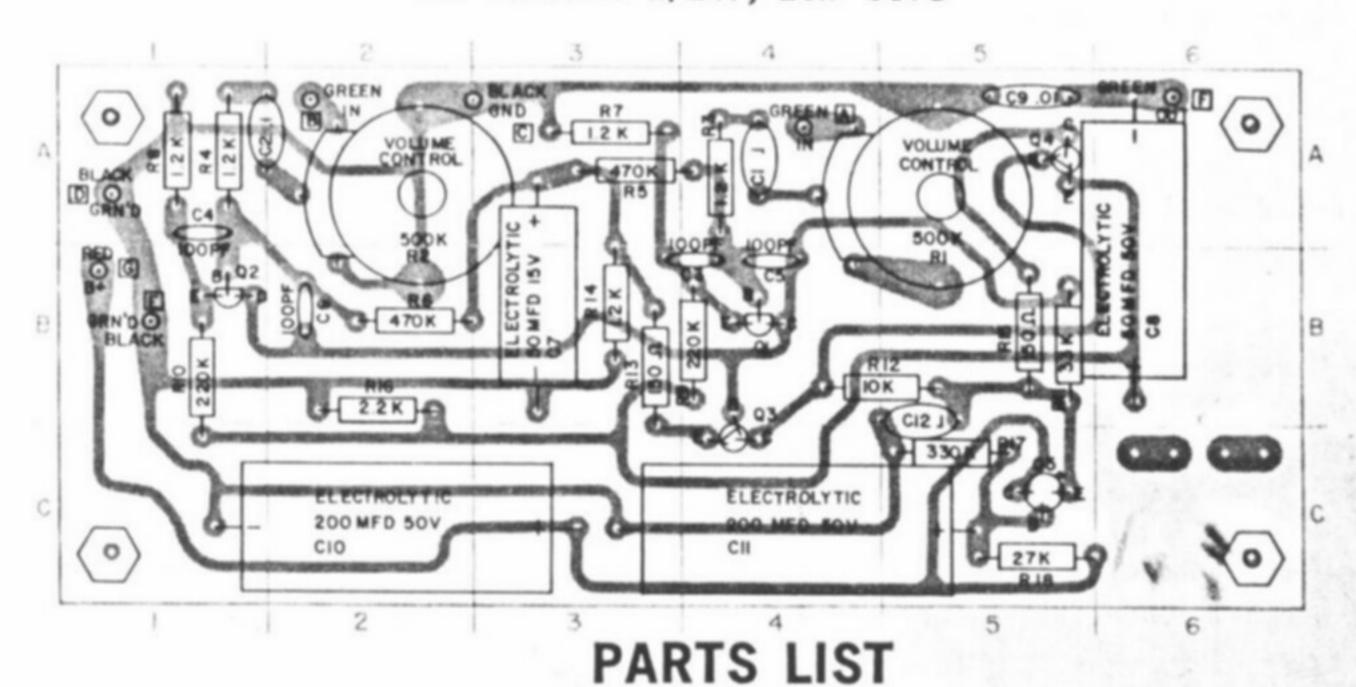

FOIL SIDE COMBO PREAMP II

		TOTE OTHE COMEO THEATH		
Part Number	Location	Value		Part
022251	A4	.1mfd 250VDC	Capacitor	Cl
022251	A2	.1mfd 250VDC	Capacitor	C2
028027	B4	100 pf 1KV	Capacitor	C3
028027	A1	100 pf 1KV	Capacitor	C4
028027	B4	100 pf 1KV	Capacitor	C5
028027	B2	100 pf 1KV	Capacitor	C6
028324	В3	50 mfd 15VDC	Capacitor	C7
025262	B6	50 mfd 50VDC	Capacitor	C8
060467	A5	.01 mfd 1KV	Capacitor	C9
020081	C2	200 mfd 50VDC	Capacitor	C10
020081	C4	200 mfd 50VDC	Capacitor	C11
022251	B5	.1 mfd 250VDC	Capacitor	C12
020370	A5	500K control	Resistor	R1
020370	A2	500K control	Resistor	R2
018036	A4	1.2K	Resistor	R3
018036	A1	1.2K	Resistor	R4
018002	A3	470K	Resistor	R5
018002	B2	470K	Resistor	R6
018036	A3	. 1.2K	Resistor	R7
018036	A1	-1.2K	Resistor	R8
013615	B4 .	220K	Resistor	R9
013615	B1	220K	Resistor	R10
028522	B5	33K	Resistor	R11
028548	B4	10K	Resistor	R12
024158	В3	150 ohms	Resistor	R13
018036	В3	1.2K	Resistor	R14
024158	B5	150 ohms	Resistor	R15
028571	B2	2.2K	Resistor	R16
020826	C5	330K	Resistor	R17
020834	C5	27K	Resistor	R18
026237	B4	MSPS 4382	TSTR	Q1
026237	B1	MSPS 4382	TSTR	Q2
061366	B4	2N 3859A	TSTR	Q3
061366	A5	2N 3859A	TSTR	Q4
018077	C5	2N 2102	TSTR	Q5

ELECTRO MUSIC

CBS Musical Instruments

A Division of Columbia Broadcasting Sytems, Inc.