

INSTALLATION INSTRUCTIONS
LESLIE CONSOLE CONNECTOR KIT 7015 FOR MODEL 16 SPEAKERS
AND
LESLIE CONSOLE CONNECTOR KIT 7018 FOR MODEL 18 SPEAKERS


These kits install in the same manner, differing only in the type of adapter used. In the 7015 Kit, an 012377 crossover adapter is supplied. This adapter channels only midrange frequencies into the Model 16 speaker. In the 7018 Kit, an 065227 adapter is used. This adapter channels all available signal to the Model 18 speaker.

INSTALLATION:

CAUTION: Before proceeding, make certain all power to the amplifier and the Model 16 or Model 18 is disconnected.

1. Locate cable and foot control. A long and short cable are attached to the foot control. Connect longer cable's socket to plug at rear of Model 16 or Model 18 cabinet connector. (See "A" on Fig. 1.)
2. Connect shorter cable's socket to one end of the adapter. Make certain this is an 012377 adapter for Model 16 installations; an 065227 adapter for Model 18 installations. (See "B" on Fig. 1.)
3. Connect the sleeve adapter to the universal connector. (See "C" on Fig. 1.)
4. Locate main speaker common lead (usually black). Cut it 2" from the main speaker terminal. Strip 3/8" insulation from both ends.
5. Use a wire nut to fasten black universal connector lead to both ends of the cut common lead. (See "D" on Fig. 1.)
6. Locate and cut main speaker signal lead at a point 2" from the main speaker signal terminal. Strip 3/8" insulation from both ends.
7. Attach white Universal Adapter wire to cut end of signal lead which is connected to the main speaker. Use a wire nut. (See "E" on Fig. 1.)
8. Attach red Universal Adapter wire to cut end of signal lead which is connected to the amplifier. Use a wire nut. (See "F" on Fig. 1.)
9. Plug in AC cords from the amplifier and LESLIE speaker. Installation is now complete.

Consult the Model 16 or Model 18 Owner's Manual for an explanation of the foot control's switch functions.

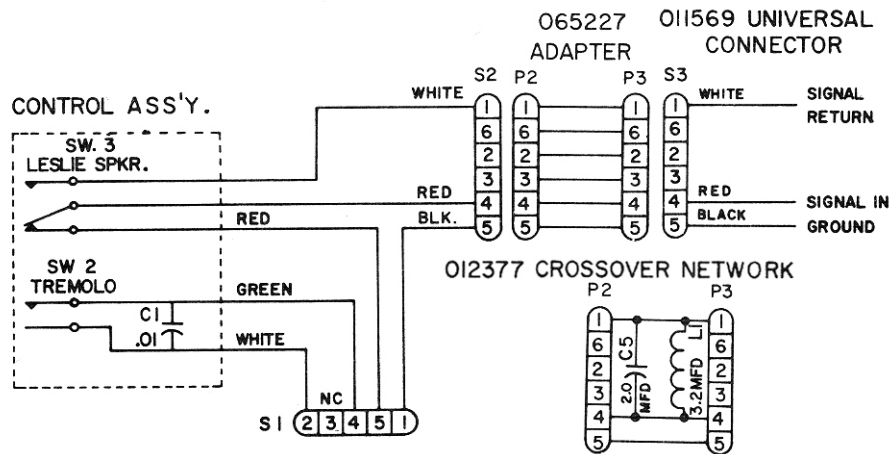

KIT CONTENTS

012377 Crossover Adapter (**7015** Kit Only)
 065227 Adapter (**7018** Kit Only)
 011569 Universal Connector

PARTS LIST: CABLE and CONTROL ASSEMBLY

012385 Cable and Control Assembly
 026456 Switch Housing
 026443 Switch Housing Cover
 026435 SW3 Switch, Single Pole, Single Throw
 026427 SW2 Switch, Single Pole, Double Throw
 044776 Nut, Hex, 15/32-32 x 9/16" x 1/16"

026401 Washer, Flat. 15/32" x 3/4"
 020958 Lockwasher, Internal, 1/2" x 7/8"
 060467 Capacitor, Ceramic, .01 MFD. 1KV
 013235 Grommet, 1/2"
 026385 Phone Plug
 026393 Phone Jack
 028076 Wire Nut (2)
 029546 Socket, 6 Contact
 029264 Socket, 5 Contact
 061739 Cap. Clamp Type (2)
 026229 10' Cable, 4 Conductor, 18G
 029637 6' Cable, 3 Conductor, 18G