INSTALLATION INSTRUCTIONS

FOR

LESLIE CONSOLE CONNECTOR KIT 7017 FOR MODEL 16 SPEAKERS AND

LESLIE CONSOLE CONNECTOR KIT 7020 FOR MODEL 18 SPEAKERS


These kits install in the same manner, differing only in the type of sleeve adapter used. In the 7017 Kit, an 012377 crossover adapter is supplied. This adapter channels only midrange frequencies to the Model 16 speaker. In the 7020 Kit, an 065227 adapter is used. This adapter channels all available signal to the Model 18 speaker.

CAUTION: Before proceeding, make certain all power to the amplifier and LESLIE speaker is disconnected.

- 1. Locate cable and foot control. A long and short cable are attached to the foot control. Connect longer cable's socket to plug at rear of Model 16 or Model 18 cabinet connector. (See "A" on Fig. 1.)
- 2. Connect shorter cable's socket to one end of the adapter. Make certain to use an 012377 adapter for Model 16 installations; an 065227 adapter for Model 18 installations. (See "B" on Fig. 1.)
- 3. Connect the sleeve adapter to the 6 contact socket on the phone plug and jack connector. (See "C" on Fig. 1.)
- 4. Detach phone plug "D" from speaker jack "E" at rear of amplifier. DO NOT USE EXTERNAL SPEAKER JACK.
- 5. Plug phone plug "F" into speaker jack "E".
- 6. Plug phone plug "D" into phone jack "G".
- 7. Plug in AC cords from the amplifier and LESLIE speaker. Installation is now complete.

Consult the Model 16 or Model 18 Owner's Manual for an explanation of the foot control's switch functions.

SCHEMATIC: 7017 KIT; 7020 KIT

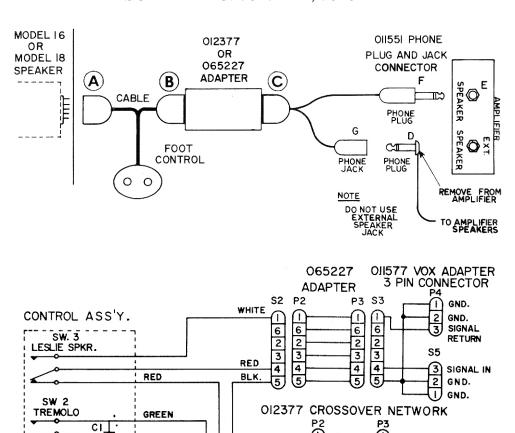

KIT CONTENTS

.01T

WHITE

SI 23451

INT COLUENTS			
012377	Crossover Adapter (7017 Kit Only)	026401	Washer, Flat, 15/32" x 3/4"
065227	Adapter (7020 Kit Only)	020958	Lockwasher, Internal, 1/2" x 7/8"
011577	Vox Adapter	060467	Capacitor, Ceramic, 01 MFD, 1KV
		013235	Grommet, 1/2"
PARTS LIST	: CABLE and CONTROL ASSEMBLY	026385	Phone Plug
012385	Cable and Control Assembly	026393	Phone Jack
026456	Switch Housing	028076	Wire Nut (2)
026443	Switch Housing Cover	029546	Socket, 6 Contact
026435	SW3 Switch, Single Pole, Single Throw	029264	Socket, 5 Contact
026427	SW2 Switch, Single Pole, Double Throw	061739	Cap, Clamp Type (2)
044776	Nut, Hex, 15/32-32 x 9/16" x 1/16"	026229	10' Cable, 4 Conductor, 18G
		029637	6' Cable, 3 Conductor, 18G

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Nonstandard items may be obtained through a LESLIE speaker dealer. Orders should include part numbers listed above.